

# Easy Use Tablet

Item No: P634

## Instructions for Use

v001: 04/04/25

 
Please read and retain these instructions for future reference

**BERGSTRÖM**

**Power Details:** Voltage details: 100~240 V  
Frequency details: 50Hz-60Hz  
Wattage details: \_\_10\_\_ W

**Accessories:** Power adapter, Data patch, User manual

**Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Easy Use Tablet.**

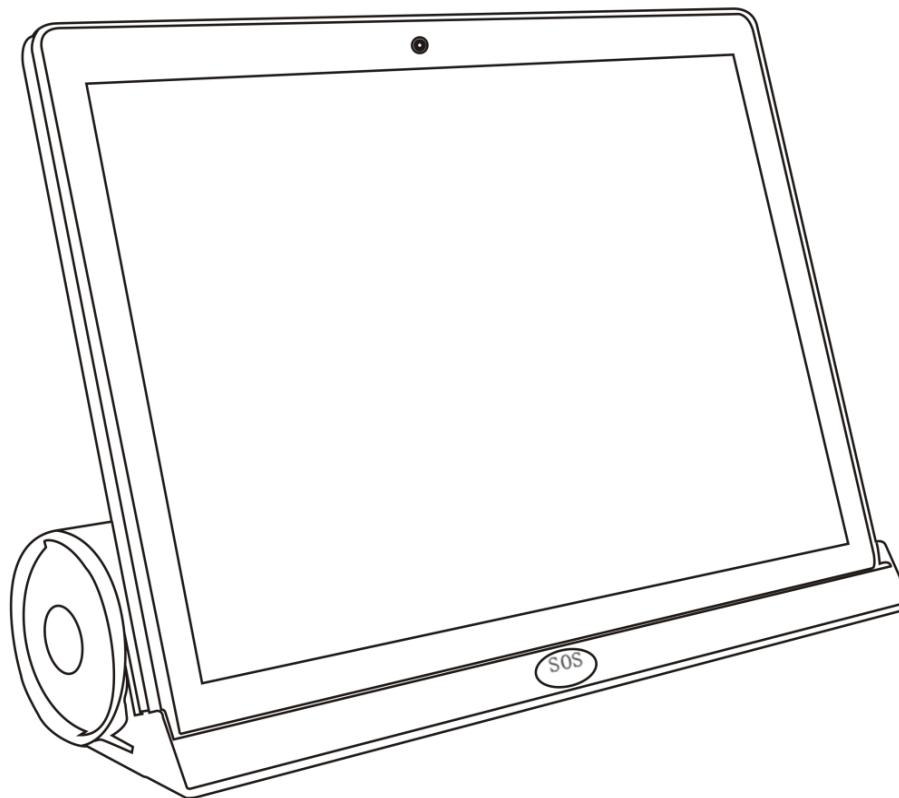


### 01/ Statement

First of all, thank you for using our company' s digital products!


Without the prior written permission of the company, It is strictly forbidden to copy, disseminate, distribute and store the content of the company' s manual in any form.

In the process of compiling this manual, we have tried our best to ensure the correctness and completeness of the content, but we can not guarantee that this manual is free from any errors or omissions.

 - ⌘ Following the strategy of continuous development, we reserve the right to modify and improve any products described in this manual without prior notice.
- ⌘ In any case, we shall not be liable for any loss of data or income, or any special, incidental, additional or indirect damages, no matter how it caused.
- ⌘ If the design and specifications of the machine and accessories need to change, forgive us for not notifying otherwise.

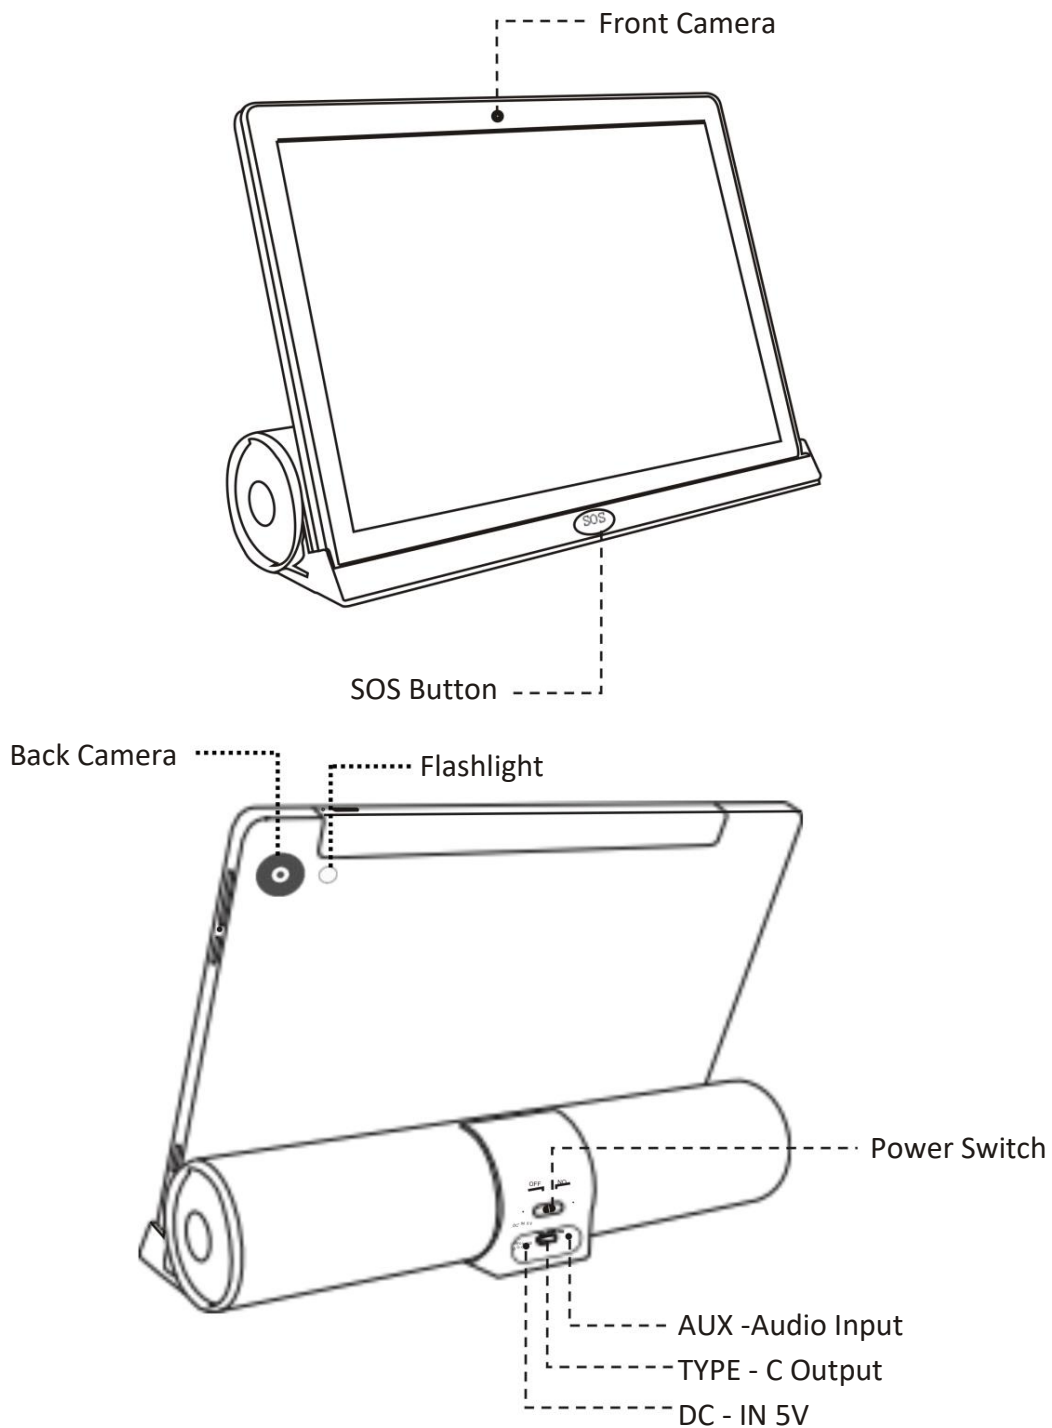

## 02/ Appearance Introduction

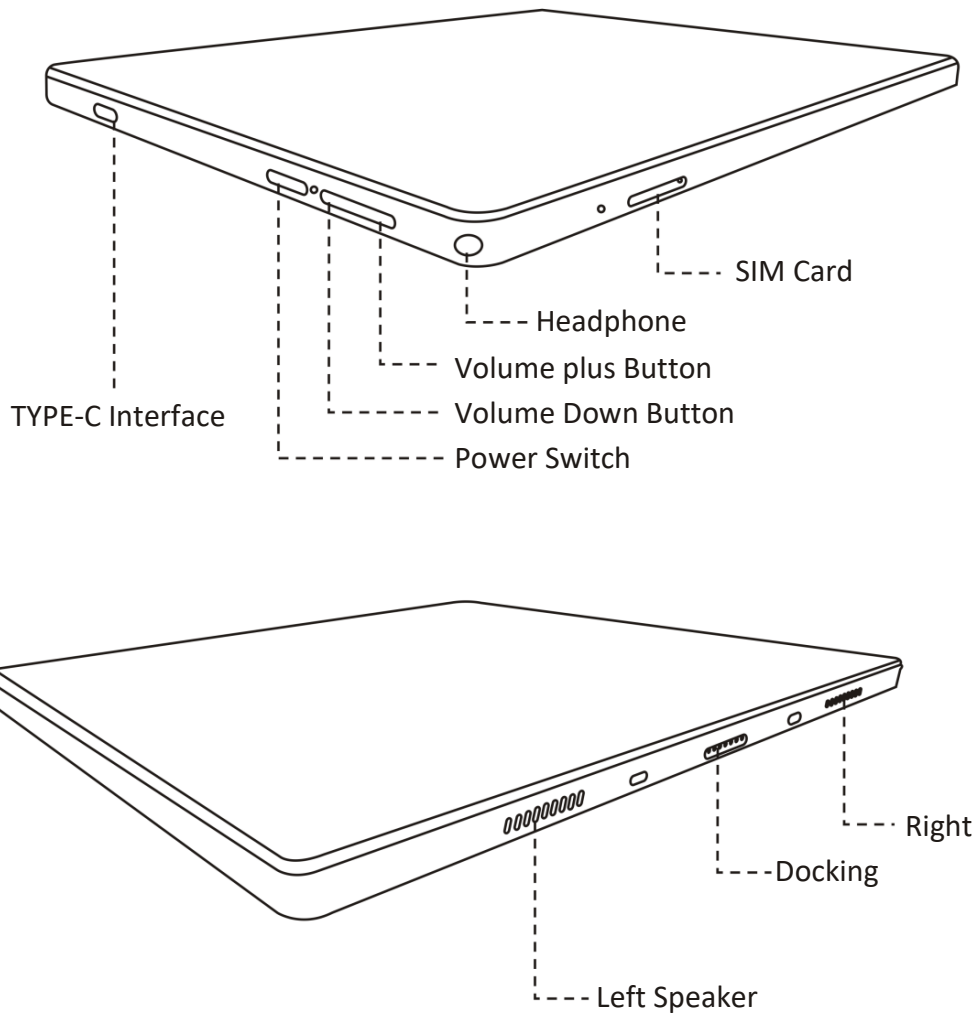 

## 03/ Basic operation

### ⌘ Start up

In the off state, long press the power button, the system enters the startup screen.

### ⌘ Shut down

In the power- on state, long press the power button to start shutting down.

### ⌘ Main interface introduction

a. Status bar: Enter the specific function menu, the top column of the interface is the status bar, displaying information: time, battery power, Bluetooth, WIFI ;

b. Function icon: In the main interface, click the icon directly to enter various functions or Perform relevant settings on the machine.

### ⌘ **Connect to WLAN Network**

- a. Swipe down on the status bar to open the notification panel or find "WLAN" in "Settings";
- b. Turn on the WLAN switch, and the system will list the detected WLAN Network signals in a list;
- b. Tap the WLAN network you want to connect. If an encrypted network is selected, enter the password to connect.

### ⌘ **Connect to Bluetooth**

- a. Swipe down on the status bar to open the notification panel or find " Bluetooth" in " Settings";
- b. Turn on the " Bluetooth" switch, enter the Bluetooth setting interface, and search for the Bluetooth address;
- c. Click the name of the Bluetooth address to be to perform pairing and connection.

### ⌘ **Use Expansion Card**

The machine has a expansion TF card slot, which can put videos, pictures, etc. into the memory card. When using, you need to insert the expansion card correctly according to the setting of the card slot, and push the card until you hear a click. When taking out the memory card, please push the memory card into the slot, then release it, the memory card will pop out automatically, and then take out the memory card.

( Please do not insert it backwards, it may cause damage to the memory card or the machine. Damage caused by reversed insertion is not covered by the warranty.)

### ⌘ **Charging operation and battery management**

- a. It can be charged by connecting the USB charging port of the machine to a computer, mobile power supply or other charging equipment through a USB cable.
- b. The battery needs to go through several charging and discharging processes to achieve the best performance;

c. If the machine is not used for a long time, please charge and discharge it at least once.

A month to prevent failures such as failure to charge and start the battery due to complete consumption.

(If you purchase an additional adapter, please follow the following requirements to purchase, otherwise the company will treat it as man made damage if there is an accident or failure.

The selected power adapter specifications must meet the following requirements:

Input : AC100-240 V, 50/60 HZ,0.3 A Output : DC5V =2000 mA)

### ⌘ **From the general interface to the large icon interface**

Find “Settings” in the general interface and click on it.

Find the “Applications” option and click to enter.

Find the “Default Apps” option and click on it.

Find the “Home Screen Apps” option and click on it.

Select “Old People Pad” and switch successfully.

### ⌘ **From the large icon interface to the general interface**

Find “Settings” in the general interface and click on it.

Find the “Applications” option and click to enter.

Find the “Default Apps” option and click on it.

Find the “Home Screen Apps” option and click on it.

Select “Quickstep” and switch successfully.

### ⌘ **How to set up your tablet**

When you first get your tablet, there is a few actions that you need to take before starting to use it.

The first step is to unbox the tablet and assess the items and equipment included in the delivery. Make sure to read through the manual so you can you can familiarize yourself with the equipment and basic functions

- The items supplied with the device and any available accessories may vary by region or service provider.
- Items provided are designed specifically for this device and may not be compatible with other devices.
- Appearance and specifications are subject to change without notice.
- Use only chargers and accessories approved for use with this specific model. Connecting other accessories may be hazardous and may void the tablet's model approval and warranty.

### ⌘ **Volume keys**


Adjust the volume level of music and video in applications that play music or other audio, such as games or video players.

## ☞ Startup Wizard

When you first start up your device, the startup wizard will help you set the device display language is the first thing you need to set.

You can also change all the settings shown in the Startup Wizard later if you are not sure what to do.

## ☞ Accessing the Home screen

- Tap the home screen icon 

Lock the screen

The screen turns off and locks when the tablet is not in use.

Caution! The tablet continues to operate while it is asleep. Receive emails, social network updates, etc.


Activating the screen

- Short press the power button.


Locking the screen

- Press the power button briefly.

 
## ☞ Return key

Tap  to return to the previous screen, or to close a dialog box or menu.

## ☞ Background Apps

Tap  to see the background apps on your tablet, and tap any background app to enter or cancel any background app.

## Touch screen actions and gestures

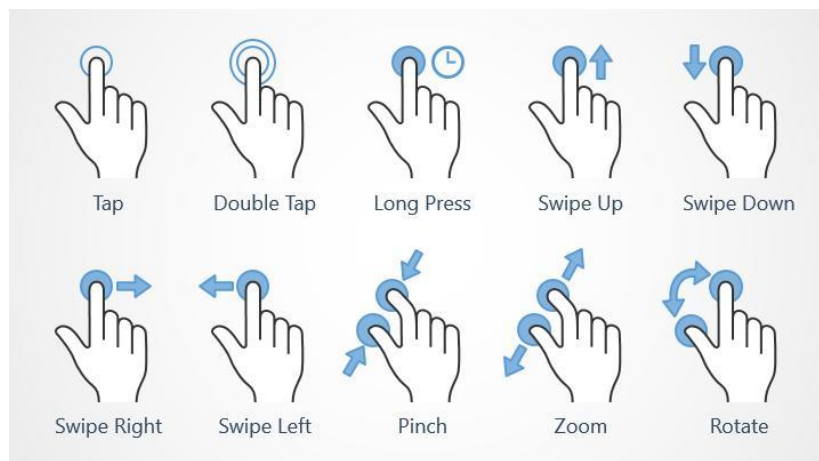

### Tap

- Tap an item, such as a button or a program icon, to select it or to open it. Tap can be used to select or deselect a relevant tick box in a list of options.

**Double tap**

- Touch the same item twice to zoom in on a map or an image.

**Long press**

- Touch and hold an item on the screen. Some actions, such as to move an icon on the Home screen, begins with a long press.

**Swipe**

- A swipe is when you press your finger to the screen and drag it, the screen moves. Swiping to the left on the Home screen, for example, moves you to the next Home screen. Drag or flick your finger on the screen in the direction you want to go. Think of it as using the left- or right-arrow keys on a computer keyboard. Flick means to swipe more quickly on a page, quickly flick your finger on the screen in the direction you want to move.

**Pinch**

- Place two fingers separated on the screen and pinch them together to zoom out of a map. This function is not always applicable.

**Zoom**

- Place two fingers together on the screen and spread them to zoom in. This function is not always applicable.

**Rotate view in maps**

- Using two fingers, rotate the map clockwise or counterclockwise. Touch the Compass Pointer icon to reorient the map with north at the top of the screen.

**Drag and drop**


- Dragging and dropping is a way of moving something – for example, an app on your desktop – from one place to another. To drag, put your finger on an app and hold down. As you move your finger across your screen, the app is dragged across the screen, or across several screens. Place your finger where you want the app to go and release your finger. The app drops.

**⌂ Aeroplane mode**

In Aeroplane mode you can't make or receive calls, surf the web or download emails, or do anything that requires an Internet connection, this is to prevent disturbance to sensitive equipment. You can still play games, listen to music, watch videos and other content, as long as all this content is saved on your memory card or internal storage.

When you take your tablet abroad, you can keep it in flight mode. If you do that, there's no chance of data roaming charges, and you can still enable Wi-Fi. Enable Aeroplane mode when in areas with no network coverage to save battery since the tablet repeatedly scans for available networks and this consumes power. You can be notified by alarms, if alarms are activated.

1. From the home screen, scroll down to the status bar and find Aeroplane mode.
2. Tap the right on button to turn the feature on.

Tip:  It will be shown in the status bar when it is enabled.

## ⌘ Reset the tablet

### IMPORTANT!

Resetting the tablet means that most information, such as downloaded and installed applications, accounts, system and application data and settings, will be erased. Be sure to backup any data and files you want to keep before you perform the reset. A backup is a safety copy of information. Carefully read all the text below before you start.

Erase all data (factory reset) to erase all data from your tablet's internal storage, including:

- Your Google account.
- System and app data and settings.
- Downloaded apps.
- Music/videos/photos.
- Other user data.

The reason for performing a factory reset (clearing all data (factory reset)) may be a stubborn problem that cannot be solved, or you want to transfer the tablet to someone else.

### CAUTION!

This is the last step before ALL data from the device, including Google or other account settings, system and application data and settings will be permanently erased.


After your tablet resets, it will be set back to factory defaults and will be just like it was when it came out of the box.


## ⌘ Google™ Play Store

Note! You need to have a Google™ account to use Play Store. Your G-mail account is also your Google Account, so you can use the same G-mail username and password to use other Google products like YouTube, Google Play, and Google Drive.

Browse the available applications and games through different categories or through the lists like Top paid and Top Free. You can also search for a specific application or game. Some applications need to be purchased. The cost is shown in the application description, the same goes if the application is free. You pay using Google™ Pay, which can be registered when setting up a Google™ account or the first time for a purchase.

## ⌘ Install applications

1. From the Home screen, tap  Play Store.
2. Find an item you wish to download by browsing categories or by using the search function.
3. Tap the item to view its details, and follow the instructions to complete the installation/purchase.

Tip: All downloaded applications can be found in  Play Store. Tap the account icon with first letter of your account in the top right of the display, and tap to select manage apps and devices.

# Key function SOS introduction (1)

## Main interface display



1.Main interface



 
2.By long pressing the tablet



3. Send a distress message to the address book



4.Keep ringing for 5

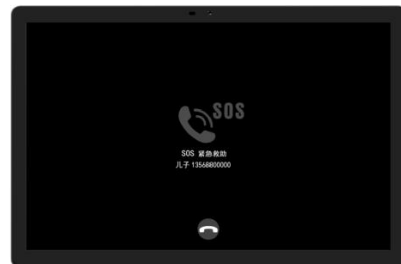

5. Circular dialing

If the other party does not answer the call, it will continue to dial other emergency contacts. and keep cycling until the other party response.

## Key function SOS introduction (2)

### Main interface display



1. Main interface



2. By long pressing the tablet



3. Send a distress message to the address book



4. Keep ringing for 5



5. Circular dialing

If the other party does not answer the call, it will continue to dial other emergency contacts. and keep cycling until the other party response.

## **04 / Product Specifications**

Appearance Size : W24 x H15.9 x D0.9cm

Product Shell : Plastic Metal

Screen Size : 10.1 inch

Screen Resolution : 800\*1280

Battery Type : Li-ion Polymer Battery

Battery Capacity : 3.7V 6000mAh

Speaker battery: 3000mAh

Memory RAM : 8G

Storage ROM : 128 GB

Camera :Front: 8MP Back: 13MP

WiFi Module : Dual-band WiFi(2.4 G & 5G)

Bluetooth Module : BT 5.0

Headphone Jack : 3.5 mm

OS : Android 14

## **05 / Cautions**

- ⌘ Do not let this product rub against hard objects;
- ⌘ Do not touch chemicals such as benzene and thinner;
- ⌘ Please keep away from strong magnetic fields and electric fields;
- ⌘ Please avoid direct sunlight and heating appliances;
- ⌘ Do not place the battery in a high temperature of 60 °C or near a fire source;
- ⌘ Do not disassemble, repair or modify by yourself ;
- ⌘ When riding a bicycle or driving a car, do not use players and headphones to avoid danger ;
- ⌘ Do not listen with a loud voice, avoid to cause adverse effects on hearing ;
- ⌘ Discard packaging, batteries, and old electronic products, please sort and dispose of them properly;
- ⌘ If the battery has not been used for a long time or the battery power is exhausted, it may not be able to start up normally when it is charged again.  
Please continue to charge for a period of time before turning on the device;
- ⌘ If consumers use a power adapter for power supply, they should purchase a power adapter that meets the standard requirements.

### **Malware and viruses**

To protect your device from malware and viruses, follow these usage tips. Failure to do so may result in damages or loss of data that may not be covered by the warranty service.

- Do not download unknown applications.
- Do not visit untrusted websites.
- Delete suspicious messages or email from unknown senders.
- Set a password and change it regularly.
- Deactivate wireless features, such as Bluetooth, when not in use.
- If the device behaves abnormally, run an antivirus program to check for infection.
- Run an antivirus program on your device before you launch newly-downloaded applications and files.
- Do not edit registry settings or modify the device's operating system.

### **06/ Explanation of Software Service**

Thank you for choosing this product ! To ensure your experience,we provide preinstalled software for the duration of May 2027 after-sales service support.

The version of our mobile phone is Android 14. Android 14 cannot be directly updated to Android 15. When there is an update for the Google app version, there will be a prompt. Just follow the instructions in the prompt to perform the update.

In case of software running abnormal,functional failure and other problems,our technical team will respond within 7 working days,through remote diagnosis or system update package push and other means,timely troubleshooting software vulnerabilities and repair optimization.For system-level issues, we will provide solutions through OTA upgrades.Please note:No deep software development services are involved.We apologize for any inconvenience this may cause and will continue to optimize the software service experience.

## **WARNINGS AND SAFETY INSTRUCTIONS:**

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- ONLY USE WITH THE MAINS ADAPTOR/CHARGER SUPPLIED.
- **DO NOT** USE ANY OTHER MAINS ADAPTOR/CHARGER AS THIS MAY CAUSE DAMAGE AND INVALIDATES ANY WARRANTY YOU MAY HAVE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- **DO NOT PLACE UNDER OR NEAR FLAMMABLE MATERIALS.**
- KEEP ITEM AT LEAST 1M AWAY FROM COMBUSTIBLE MATERIAL.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, MAINS ADAPTOR/ CHARGER OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR MAINS ADAPTOR/ CHARGER OR AFTER THE APPLIANCE MALFUNCTIONS OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.

## PLUG WIRING (UK & IRELAND)

**DO NOT** use if the socket outlets in your home or office are not suitable for this product's mains adaptor/ charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

**DO NOT** use with any other mains transformer/charger than the one that is supplied with this product.

## CARE AND CLEANING INSTRUCTIONS

 
- Always switch off and unplug before cleaning.
- Do NOT immerse in water.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

## BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

## DISPOSAL

- We use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons in accordance with your local authority recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

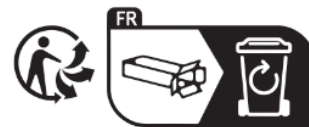

Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !

**Distributed by / Verteilt durch / Distribuée par. / Distributor / Distribuuje**

**The Enterprise Department Ltd**, Trading as Coopers of Stortford.

11 Bridge Street, Bishops Stortford

Herts, UK, CM23 2JU



0330 331 0300



[enquiries@coopersofstortford.co.uk](mailto:enquiries@coopersofstortford.co.uk)



<https://www.coopersofstortford.co.uk>

**The Enterprise Department Ltd**, Trading as – Coopers of Stortford

D.S.B. LD, 160 Bd. De Fourmies, 59100 Roubaix, France



0330 331 0300



[enquiries@coopersofstortford.co.uk](mailto:enquiries@coopersofstortford.co.uk)



<https://www.coopersofstortford.co.uk>

DE/FR/CZ/SK :

**3Pagen**

Hergestellt für 3Pagen , Sankt-Joeris-Strasse 16-28

53477 Alsdorf



+49 (0) 2404/980-204



[kontakt@3pagen.de](mailto:kontakt@3pagen.de)



<https://www.3pagen.de>

**UK  
CA**

**CE**

