

4G Big Button Mobile Phone

Item No: P635

Instructions for Use

v001: 10/03/25

Please read and retain these instructions for future reference

BERGSTRÖM



 
Accessories: 4G Big Button Mobile Phone, Battery, Type-C cable, Cradle Charging, User manual

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new 4G Big Button Mobile Phone. We recommend you keep this manual for future reference.

Basic operation

How to insert the SIM card:




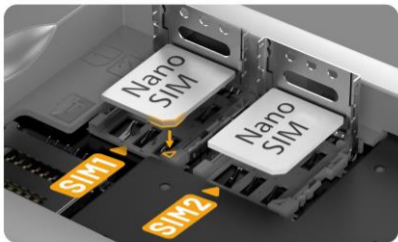


Nano-SIM 

Nano
SIM

 
Chip side down

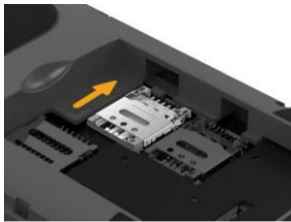


 SLIDE THE
FLAP TO THE
RIGHT-HAND
SIDE TO OPEN

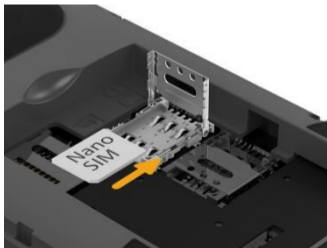


  LIFT OPEN
THE FLAP TO
INSERT THE
SIM CARD

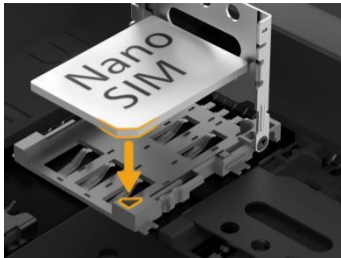

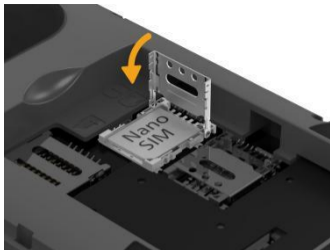


SECURE THE
SIM CARD BY
CLOSING
FLAP

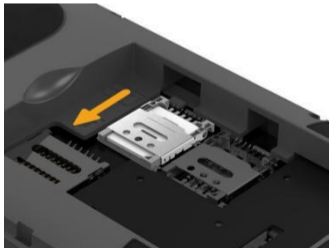 


SLIDE THE
FLAP TO THE
LEFT-HAND
SIDE TO

 
Insert a memory card: In order to use media player functions, a micro-SD memory card is required (not included in the package). Insert the micro-SD card as below

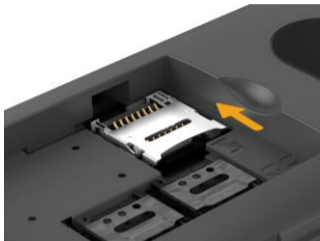


 SLIDE THE FLAP
TO THE RIGHT-
HAND SIDE TO
OPEN

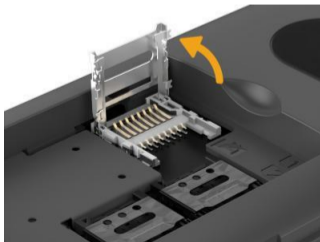


  LIFT OPEN
THE FLAP TO
INSERT THE
SD CARD

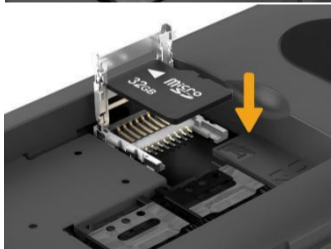

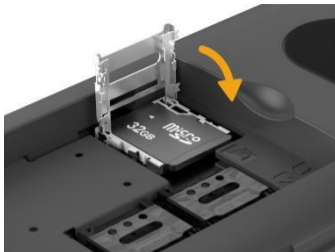

SECURE THE
SIM CARD BY
CLOSING
FLAP

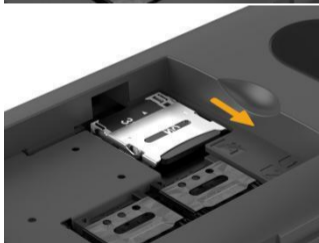 

SLIDE THE
FLAP TO THE
RIGHT-HAND
SIDE TO

Connect to a PC: Use a Type-C cable to connect the product to a computer. Select Mass Storage on your phone, you can save songs to "My Music" in the SD card.

Battery charging: Please charge the battery for first time using.

Attention: To preserve the functionality of the product and the integrity of the warranty, we commend the original chargers. Please charge the battery indoors or in a dry and favorable environment. It's normal for the battery to get slightly warm during the charging process. The battery will reach its full capacity only after several complete charging cycles.

1	Receiver
2	Display
3	Volume key
4	SOS button
5	The lock key
6	Left soft key
7	Call button
8	Navigation key up and navigation key down
9	Number keys
10	* key: Press repeatedly to digit *,+,P,W.under text insertion mode press to add a symbol.

11	0 key: Under text insertion mode press to add space; under standby mode long press it to turn on/off the torch.
12	Type-C port
13	Torch LED
14	FM key
15	Right soft key
16	End call/Power on/off
17	# key: In standby mode press repeatedly to switch from General to Silent mode and vice versa; ; under text insertion mode press to change the writing method.
18	Cradle charging
19	Speaker

20	Camera
----	--------

Multi function keys



key: Press the # key to switch between input methods



Use ▲/▼ keys to navigate characters during text entry

0 : Long press to turn on torch

4: Left navigate

6: Right navigate

5: OK/edit function on menu

Function introduction

Turn ON / Turn OFF:

Long press



To turn on and turn off the phone.

Lock and unlock keypad:



1. Long Press



2. Press



and



Contacts:

New contact

Main menu > Contact > OK > Options > 2 New > OK > Select where you would like it stored (Phone, Sim1, Sim2)

Modify icon > Edit > Choose from 1. Select from album, 2. Take photo, 3. Default icon

1. Select from album – Choose photo > select
2. Take photo – Press 5 to take the photo > OK to save
3. Default icon > OK

Name → Edit > Write the name > OK

Mobile - > Edit > Input phone number > OK

Home Number > Edit > Input number > Ok

Default ringtones > Edit > Select from 1. Default ringtones or 2. Phone tones

1. Default ringtones > OK
2. Phone ringtones > OK > Choose from Ringtones 1 to 5 > Press 5 to confirm

Once all completed Save the contact > OK

View contacts:

Main menu > Contact > OK > Arrow Up & Down to find the contact
> Options > View contacts > Options > Edit, Delete, Copy

Edit – refer to new contact instructions

Delete > OK

Copy > 1 Copy to SIM1 or Sim2 (if stored on your phone)

Speed dial:

You can set up 8 contacts on speed dial, you will assign each contact to a number from 2 to 9, to call the contact, hold the number assigned to them and it will call the contact

Main menu > Contact > OK > Options > 8 Others > OK > Speed dial > OK > Select which number to put your contact against (2-9) > Options > Edit > OK > Contacts > Search or Arrow down to find contact > OK > OK

Write a message:

Main menu > Contact > OK > Search or Arrow down to find contact
> Options > View Contact > Arrow down to phone number >
Options > 3 Write a message > OK > Write your message > Options
> Send > OK

To write a message to a new contact we suggest setting them up as a new contact & follow the process above

View messages:

Main menu > Message > OK > Arrow up & down to view messages

Make a call:

Main menu > Contact > OK > Search or Arrow down to find contact
> Press green button to call

If you have more than one number for them:

Main menu > Contact > OK > Search or Arrow down to find contact
> Options > View Contact > Arrow down to phone number >
Options > 4 Call > OK > Select number > OK

Call log:

To make a call from your dialed call log, press the green button on the home screen and it will bring up your call activity. Select the caller and press the green dial button to call them.

Main menu > Call Log App > OK > Choose from 1. Missed calls, 2. Dialed calls, 3. Received Calls, 4. Rejected Calls, 5. Delete all

To call someone back from your missed /dialed /received /rejected call list, select the number/contact and press the green dial button.

SOS:

Main menu > SOS > OK > Choose from 1. SOS status, 2. SOS Contact, 3. SOS Messages, 4. SOS Ring Status

1. **SOS Status** > OK > Choose from Activate or Off > OK – that will save the status
2. **SOS contact** > OK > 1-5 > Options, 1. Edit Number / 2. Add from contacts / 3. Delete / 4. Delete all

Edit Number – Input phone number > OK

Add from contacts – Select the contact > Press 5 to confirm

When the SOS button is pressed the phone will automatically call the emergency contacts, it will call them in order you input them. 1 being the first contact they call. If number 1 doesn't answer it will call, contact number 2 etc.

3. **SOS message** > OK > existing emergency message that will be sent to all 5 contacts if the SOS button is pressed. This can be edited > OK to save the updated message.

4. **SOS Ring Status** > OK > Choose from Activate or Off > OK – that will save the status - When activated the phone will outlet an alarm before calling emergency contacts when the SOS button is pressed.

Multimedia:

Main menu > Multimedia > OK > 1. Camera / 3. Image

1. **Camera** > OK > Set up the shot > Press 5 to take the photo > Press 5 again to save the photo
2. **Image** > OK > View all your images here > Select the image you want to view > Options > 1. View / 2. Delete
1. **View** > Ok
2. Delete > Ok > OK

FM radio:

Press the top right FM button

Main menu > FM radio > OK > 1. Play / Pause / 5. Manual search

1. Press 5 to play/pause the radio
5. **Manual search** > OK > Insert the frequency (MHz) of the radio station

Application:

Main menu > Application > OK > 1. Alarm / 2. Calendar / 3.

Calculator / 4. Stopwatch / 6. Bluetooth / 7. Torch / 10. Games

1. **Alarm** > OK > You can set 3 alarms > On > 1. On / 2 Edit
– Select 1. To set the alarm & 2. Edit the time of the alarm
2. **Calendar** > Ok > Options > 1. Add new schedule / 2.
View schedules / 3. All schedules / 4. Clear today's
schedule / 5. Clear all

Add new schedules > Ok > Fill out Subject, Amend Date (if necessary), Amend Time (if necessary), Edit repeat mode > Press 5 to

enter (Choose from Once, Daily Repeat, Weekly Repeat, Monthly, Yearly, no reminding) > OK to save.

3. **Calculator** > Ok – You can add, subtract, multiply and divide

4. **Stopwatch** > Ok > Start / Stop – Press 5 to reset

6. **Bluetooth** > Ok > Bluetooth / Bluetooth visibility / Paired Device / Device Name / Help

Bluetooth > Activate to turn your Bluetooth on or close to turn it off

Bluetooth visibility > Activate to turn your Bluetooth on or close to turn it off

Paired Device > OK > Add new device > Add > Searching > Stop > Pair with device you wish or back to remove

Device Name > OK > You can edit your name > OK to save

Help > OK > Gives you a step-to-step guide of how to use Bluetooth & connect your device

7. **Torch** > OK > Press 5 to turn ON/OFF or On standby mode hold down) to turn ON/OFF torch

10. **Games** > OK > Choose from Sokoban or Snake

Combine key in games menu:

"2"= UP Cursor

"8"= Down Cursor

"4"= Left Cursor

"6"= Right Cursor

"5"= OK /pause/continue function

Settings:

Settings > Ok > Call settings / Phone settings / Display / Security / Profiles / Connections

1. Call Settings > OK > Dual-Sim / Call Divert / Call waiting / Call barring / Hide ID / Others

Dual-SIM: You can set standby mode, reply by original SIM, set SIM name and set dual SIM call divert through this function.

Call divert: This function enables you to forward incoming calls to another number you have previously specified.

Call waiting: After you choose Activate, the mobile phone will contact the network. A moment later, the network will make a response and send a message to acknowledge your operation. If the call waiting function is activated, the network will alert you and the mobile phone screen will display the incoming call number if others are calling you while you are already in a conversation.

Call barring: The call barring function enables you to bar calls as needed. When setting this function, you need to use a network barring code, which can be obtained from the network operator. If the code is wrong, an error message will be prompted on the screen. After selecting a call barring option, continue to select Activate or Deactivate. The mobile phone will prompt you to input the call barring code and then contact the network. A moment later, the network will make a response and send the operation results to the mobile phone.

Hide ID: You can select hide ID, display own ID and or display ID by network.

Others: You can set call time minute reminder, auto redial , reply SMS after reject and auto record voice call through this function.

2. Phone settings

Date & time: Set the time, set the date, Set the date format, the time format and update time settings.

Note: If you remove the battery from the mobile phone or if the battery energy was exhausted a long time ago, you may need to reset the date and time when re-inserting the battery or powering on the mobile phone after recharging.

Language settings: Select the display language for the mobile phone.

Shortcut settings: Select preferred function as shortcut on screen direction key as needed.

Auto power on/off : Set the time when the mobile phone will be automatically powered on or off.

Restore factory settings: You can reset your phone,the original code is 1234.

Note: All the data will be clear if you choose Restore factory setting .

3.Display

Users can access this item to set Wallpaper, Main display setting, contrast, backlight and keypad blacklist time etc.

4.Security

This function provides you with related settings about safety use

PIN: To activate PIN lock, you need to input the correct PIN code. If you set PIN lock to On, you need to input the PIN each time you power on the mobile phone. In the case you input a wrong PIN for three consecutive times; you need to input the PIN Unlocking Key (PUK). The PUK is used to unlock and change the locked PIN. To obtain the PUK, contact the network operator.

Modify PIN2: To change PIN2 code of PIN code.

Phone locked: The function enables you to lock/unlock the phone. Entering password to switch on or off the phone. Password is required when the phone is locked. The initial password is 1234.

Modify the cellphone password: to change phone password.

Privacy: You can set password to protect your privacy, the initial password is 1234.

Lock screen by end-key: You can select to turn on/off this function.

Fixed dialing number: the phone supports fixed dialing number, which allows calls only to predefined numbers.

Blacklist: The number which you add to blacklist cannot call you.

5.Profiles

The mobile phone provides multiple user profiles, so that you can customize some settings to adapt to the specific events and environments.

Customize the user profiles according to your preference and then activate the user profiles. The user profiles fall into three scenarios: **Normal, Silent, Indoor,Outdoor**. In the standby mode long press # can switch scenarios.

6.Connections

Contact the network operator to obtain the following network services:

Network account: You can manage network account through this function.

Date Service: You can select to turn on/off this function.

Data connection settings: The default setting is connecting when needed.

Network selection: Set Network selection mode to Automatic or Manual. Automatic is recommended. When Network selection mode is set to Automatic, the mobile phone will prefer the network where the SIM card is registered. When Network selection mode is set to Manual, you need to select the network operator's network where the SIM card is registered.

Network type: You can select network type ,there are three options:

4G/3G/2G Multi Mode

3G/2G Dual Mode

2G Only

SAR and parameters

Radio frequency (RF) exposure and SAR

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE

TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed

and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The

guidelines include a substantial safety margin designed to assure the safety of all people, regardless of age and health.

The exposure standard for mobile devices employs a unit of

measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified well below the maximum value. Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the device.

SAR values may vary depending on national reporting and testing requirements and the network band. Use of device accessories and enhancements may result in different SAR values.

The SAR limit for mobile devices used by the public is 2.0 W/kg averaged over 10 grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

The highest SAR value for this model phone tested for use is 0.711mW/g.

Screen size: 1.77 inches

Battery capacity: 3.7V/1000mAh

Mobile phone weight (including battery): 85g

Mobile phone size: 122*53*14mm

Charger specification: 5V - - 550mA

Data cable: Type -C

Mobile phone frequency bands in Europe:

2G - GSM: 850MHz/900MHz/1800MHz/1900MHz

3G - WCDMA: B1/B8

4G - TDD/FDD: FDD-LTE: B1/B3/B5/B7/B8/B20

TDD - LTE: B38

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC USE ONLY.
- DO NOT USE FOR COMMERCIAL USE.
- ONLY USE WITH THE MAINS ADAPTOR/CHARGER SUPPLIED.
- DO NOT USE ANY OTHER MAINS ADAPTOR/CHARGER AS THIS MAY CAUSE DAMAGE AND INVALIDATES ANY WARRANTY YOU MAY HAVE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.

- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.

- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMEDIATELY POWER CABLE, MAINS ADAPTOR/CHARGER OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.

- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR MAINS ADAPTOR/ CHARGER OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.

- DO NOT LEAVE UNATTENDED.

- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.

- Do NOT immerse in water. Risk of electric shock.

- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.

- Wipe surfaces with soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.



DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons in accordance with your local authority recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.
- Plastics, polybags – this is made



Points de collecte au www.quelquesbravesdehonnetes.fr
Privilégiez la réparation ou le don de votre appareil !

from the following
recyclable plastic.

Code & Symbol	 LDPE	 OTHER
Type of Plastic	Low Density Polyethylene	Please Specify (includes ABS, Nylon)

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

Distributed by / Verteilt durch / Distribué par.

The Enterprise Department Ltd, Trading
Coopers of Stortford.

UK address: 11 Bridge Street, Bishops
Stortford

Herts, UK, CM23 2JU

Tel: 0330 331 0300

Customer Services:



enquiries@coopersofstortford.co.uk

Web Site:

<https://www.coopersofstortford.co.uk>

The Enterprise Department Ltd, Trading as -

NI address: D.S.B. LD, 160 Bd. De Fourmies, 59100
Roubaix, France

Tel: +44 (0) 330 331 0300

Customer Services: enquiries@coopersofstortford.co.uk

Web Site: <https://www.coopersofstortford.co.uk>

DE/FR/CZ/SK :

3Pagen

Hergestellt für 3Pagen

Sankt-Joeris-Strasse 16-28

53477 Alsdorf

Tel: +49 (0) 2404/980-204

Customer Services: kontakt@3pagen.de

Web Site: www.3pagen.de

