

Product name:BLUETOOTH KARAOKE WITH 2
MICROPHONES Item No: P913
Instructions for Use v002: 16/06/25


Please read and retain these instructions for future reference

BERGSTRÖM



INSTRUCTIONS FOR USE:

Instructions & Photos

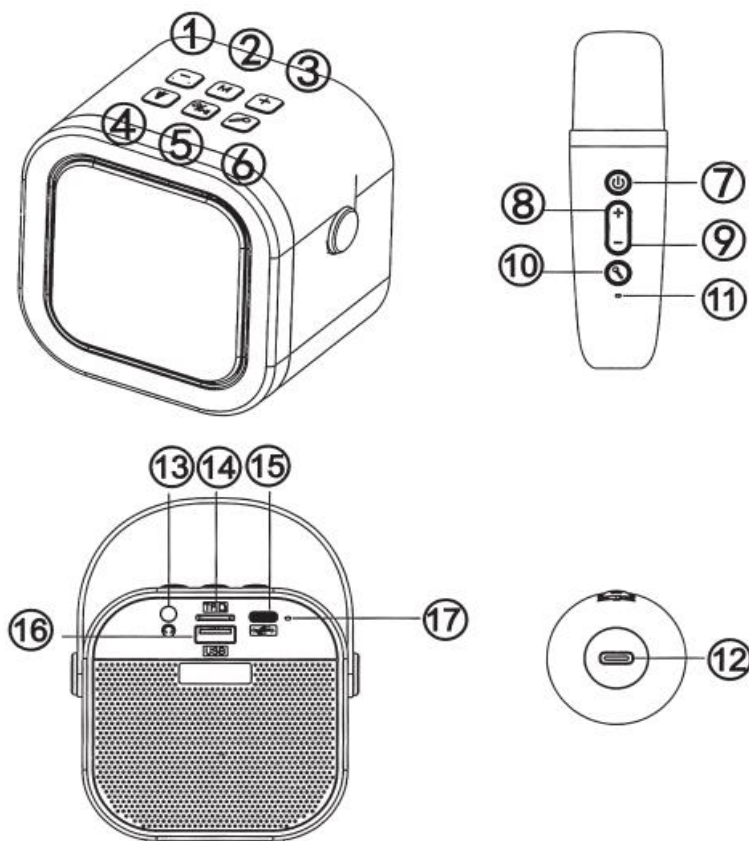

To turn the speaker on, press the 'ON' button. This is button 5 on the diagram above
The following are in relation to the diagrams above

1. Press once for volume reduction.
2. Manual Switch Play mode, Bluetooth/TF card/U disk, etc.
3. Press once to increase volume.
4. Press to switch the LED lighting effect, Press and hold for 2 seconds to turn off the LED lighting effect.
5. Press and hold for 3 seconds turn on/off, once the unit is on, press to play/pause songs.
6. Press to choose between two different sound effects, normal or muted.
7. Press and hold for 3 seconds to switch the microphone on and off, Short press to mute and unmute the microphone.
8. Press microphone volume to increase volume, double click to increase reverb.
9. Press microphone volume to reduce volume, double click to reduce reverb.
10. Press to cancel the original sound function, Press and hold to switch to magic sound (voice changing function)
11. Microphone Indicator Light. If unconnected blue light is solid, if poor connection blue light will flicker. When charging the red light is on, when fully charged red light will be off.
12. Microphone USB Type-C 5V charging port.
13. AUX input. Connect other audio devices.
14. TF slot, insert MP3 audio class file to automatically switch to TF mode.
15. Audio USB Type-C 5V charging port.
16. USB plug in with MP3 audio class files. Automatically switches to USB mode and turns off Bluetooth if enabled.
17. Audio Indicator Light, blue light flicker when not connected, blue light will be solid when connected successfully. Red light will be on when Charging, red light will be off when full.

Main functions

- High reduction electro acoustic system
- Super MP3 audio decoding technology
- 3.7V high performance battery
- All digital audio processing, Clear voice quality.
- Sound penetration, wide coverage
- High sensitivity

Frequently asked questions

1. If the indicator light on the speaker does not turn on, please check whether the audio power is sufficient, or to connect audio to 5V/1A power supply for charging, charging time is about 3 to 4 hours.
2. There is no sound in the microphone. The power supply is not on, the mode is not correct, or the volume is not adjusted. Please adjust the volume of the microphone.
3. If the microphone is noisy, it may be due to ambient noise, signal interference, microphone too close to the speaker, etc., please re-adjust the direction of the microphone.
4. If Blue tooth playback is interrupted, it may be because the Bluetooth is too far away, or there is an obstacle between the phone and the loudspeaker, affecting the signal transmission, please place closer to the connected phone to avoid the obstacle.
5. If Blue tooth cannot be connected, it may be because the distance is too far, there are obstacles, or because other phones are connected, please pace closer to the phone to avoid obstacles or disconnect other phones.
6. If the unit doesn't seem to be charging, you need to check the lead to ensure it is working correctly. When the audio system is charging the red light will be on.

WHEN USING ANY PRODUCT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS PRODUCT FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- DO NOT LEAVE SWITCHED ON OR UNATTENDED.

WARNING!



- NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS DUE TO SMALL PARTS - CHOKING HAZARD.
- ALWAYS USE UNDER ADULT SUPERVISION.
- DO NOT LEAVE CHILDREN UNATTENDED.
- IF ANY PIECES ARE MISSING STOP PLAY IMMEDIATELY AND ADULT TO CHECK ALL AREAS AND CHILDREN TILL ALL ITEMS ARE FOUND.
- ADULT TO ALWAYS CHECK ALL PIECES ARE STORED WHEN NOT IN USE AND STORE SAFELY AWAY FROM CHILDREN UNDER 3 YEARS OF AGE.

CARE AND CLEANING INSTRUCTIONS:

- Do NOT use abrasive cleaners or sharp utensils to clean this product.
- Store the item in a cool, dry place.
- Wipe with a clean dry cloth.
-
-

DISPOSAL

At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

Distributed by / Verteilt durch / Distribué par/ Distribútor / Distribuuje.

The Enterprise Department Ltd, Trading as Coopers of Stortford.

UK address: 11 Bridge Street, Bishops Stortford

Herts, UK, CM23 2JU



0330 331 0300



enquiries@coopersofstortford.co.uk



<https://www.coopersofstortford.co.uk>

The Enterprise Department Ltd, Trading as – Coopers of Stortford

D.S.B. LD, 160 Bd. De Fourmies, 59100 Roubaix, France



0330 331 0300



enquiries@coopersofstortford.co.uk



<https://www.coopersofstortford.co.uk>

DE/FR/CZ/SK :

3Pagen

Hergestellt für 3Pagen

Sankt-Joeris-Strasse 16-28

53477 Alsdorf



+49 (0) 2404/980-204



kontakt@3pagen.de



www.3pagen.de

UK
CA

CE

