

Clip on Pet Crate Fan

Item No: R231

Instructions for Use

v001: 14/01/26

Please read and retain these instructions for future reference

 **Ashbrook**
adding value to animal care



Power Details: Input Voltage details: 5V
Wattage details: 5W

Accessories: 1 x USB - TYPE C charging cable
1 x Model 18650 Lithium battery

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new **CLIP-ON PET CRATE FAN**

INSTRUCTIONS FOR USE:



STEP 1: Unpack all the components to ensure you have received everything

HOW TO CHARGE THE UNIT:

1. Install the battery, position the battery as per the attached image
2. Connect the USB-C cable to USB-C port on the fan as shown in the image above and connect to a charging port.



- The unit will stop when it needs charging
- The light will glow red while the fan is charging
- The light will glow blue once the item is fully charged

- Charge for around 2.5 hours for a full charge
- The unit will last 1-3 hour (depending on the speed selected) on a full charge
-

USER INSTRUCTIONS

This fan has 3 speeds.

LOW SPEED – Press the ON/OFF button once

MEDIUM SPEED - Press the ON/OFF button twice

HIGH SPEED - Press the ON/OFF button once three times

Press a fourth time to turn the unit OFF

ROTATION

The fan has 360° horizontal and vertical manual rotations



FITTING TO THE CRATE:

STEP 1 – Squeeze the clip to open



STEP 2 – Fit to the crate surface and release the clip



Matters needing attention

1. This product is not for children under 6 years old Children should be accompanied by an adult.
2. Keep away from water and fire to avoid damaging main accessories.
3. Do not place hands or any slender objects near the fan blades.
4. Do not knock or break this product which may cause internal damage.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.

- CHECK THE APPLIANCE AND CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- NEVER TOUCH THE PLUG WITH WET HANDS
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- NEVER REMOVE THE PLUG BY PULLING ON THE POWER CORD.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- **DO NOT LEAVE SWITCHED ON OR UNATTENDED.**
- **SWITCH OFF AFTER USE OR IF LEAVING THE ROOM TO AVOID RISK OF OVERHEATING OR FIRE.**
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 6 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM ALL ROUND CLEARANCE OF AT
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

We use recyclable or recycled packaging where possible

Please dispose of all packaging in accordance with your local authority's recycling regulations

At the end of the product's lifespan check with your local council authorized household waste recycling centre for disposal.

Distributed by / Verteilt durch / Distribué par/ Distribútor / Distribuuje.

The Enterprise Department Ltd, Trading as Coopers of Stortford.

UK address: 11 Bridge Street, Bishops Stortford, Herts, UK, CM23 2JU

EU address: D.S.B. LD, 160 Bd. De Fourmies, 59100 Roubaix, France



0330 331 0300



enquiries@coopersofstortford.co.uk



<https://www.coopersofstortford.co.uk>

3Pagen

Hergestellt für 3Pagen

Sankt-Joeris-Strasse 16-28

52477 Alsdorf



+49 (0) 2404/980-204



kontakt@3pagen.de



www.3pagen.de

UK
CA C E

