

DUAL SPEAKER WHOLE HOUSE MOUSE & RAT REPELLER

Item No: R343

Instructions for Use v002: 01/09/2026

Please read and retain these instructions for future reference

PestReach
There's nowhere to hide!



Power Details: INPUT: 100-240V~50/60HZ 0.4A Max
OUTPUT: 5V-1.0A 5.0W
Frequency:30-65kHz
Effective area:120 m²

Accessories: 5V DC data cable, AC/DC adapter

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new DUAL SPEAKER WHOLE HOUSE MOUSE & RAT REPELLER.

Working Principle:

This product repels pests including mice, ants, spiders and cockroaches by emitting an ultrasound frequency up to 65,000Hz. This high frequency that rodents find distressing and so will move to a less hostile area. This frequency is above the hearing range of humans and non-rodent pets such as cats and dogs, so it does not affect them.

However it will affect pet rodents such as rats, mice, hamsters, guinea pigs etc). So do not use if you have any of these pets.

Important safety instructions:

1. Read all these instructions before using the appliance.
2. Do not use outdoors.
3. This is not a toy, do not leave it near kids.
4. Do not expose it to extreme temperature.
5. Do not use or store the equipment near wet places, or other sites where flammable or explosive liquids, fumes or dust are present or likely to be present.

Installation Instructions:

1. Plug-and-Play, Automatic Operation & Auto Frequency Adjustment: Plug the device into a standard 220-250v 3 pin outlet in the area affected by mice and rats.
2. The unit will turn on and operate automatically.

3. The small red LED light on the front (bottom) will glow when the device is working normally. If not, check if the power on the outlet is turned on.
4. The device will stop emitting ultrasonic waves when the power is turned off at the outlet.

Usage Recommendation:

1. We recommend continuous use of the unit for best results.
2. The effective working area of this product is up to 120m², to ensure the best coverage possible around your house place the unit centrally in your house, away from obstructions and in an open area. Avoid placing it in corners, near metal objects or inside cabinets. Ultrasonic waves cannot travel through solid objects.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ONLY USE WITH THE MAINS ADAPTOR/CHARGER SUPPLIED.
- **DO NOT** USE ANY OTHER MAINS ADAPTOR/CHARGER AS THIS MAY CAUSE DAMAGE AND INVALIDATES ANY WARRANTY YOU MAY HAVE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- USE ON A LEVEL, STABLE SURFACE.
- NEVER TOUCH THE PLUG WITH WET HANDS
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- **TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK DO NOT USE WITH AN EXTENSION CORD.**
- NEVER REMOVE THE PLUG BY PULLING ON THE POWER CORD.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM ALL ROUND CLEARANCE OF AT LEAST 10CM.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.

- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

PLUG WIRING

This appliance is supplied with a BS1363 3 Pin plug.

DO NOT use If the socket outlets in your home are not suitable for this product's plug pins.

Attempts to insert the plug/mains adaptor into the wrong socket are likely to cause electric hazard or damage.

DO NOT use with any other mains adaptor/charger than the one that is supplied with this product.

PLUG FUSE (UK / NI ONLY)

This appliance is fitted with a moulded BS 1363 13-amp plug. This is fitted with a 2 amp fuse.

If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 should be used.

If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

DISPOSAL

We use recyclable or recycled packaging where possible

Please dispose of all packaging in accordance with your local authority's recycling regulations

At the end of the product's lifespan check with your local council authorized household waste recycling centre for disposal.

Plastic Polybags – this is made from the following recyclable plastic

Code & Symbol	
Type of Plastic	Please Specify (includes ABS, Nylon)

Distributed by / Verteilt durch / Distribué par/ Distribútor / Distribuuje.

The Enterprise Department Ltd, Trading as Coopers of Stortford.

UK address: 11 Bridge Street, Bishops Stortford, Herts, UK, CM23 2JU

EU address: D.S.B. LD, 160 Bd. De Fourmies, 59100 Roubaix, France



0330 331 0300



enquiries@coopersofstortford.co.uk



<https://www.coopersofstortford.co.uk>

**UK
CA**

CE

