


Printed Fleece Electric Blanket

Item No: R499 BU

Instructions for Use

v001:
28/05/2026

Please read and retain these instructions for future reference

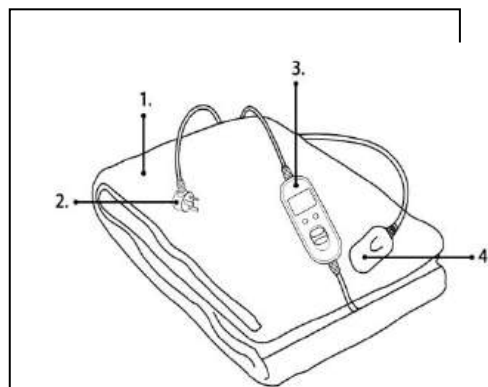

Power Details: Voltage details: 223V
Frequency details: 50Hz
Wattage details: 110W

WHATS INCLUDED:

- X1 Blanket
- X1 Power Cable & Uk Plug
- X1 Controller
- X1 Connector

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new heated blanket.



Caution
Hot surface

CAUTION! THIS ELECTRICAL APPLIANCE'S EXTERNAL SURFACES WILL GET HOT IN NORMAL USE. ALLOW TO COOL BEFORE TOUCHING THE EXTERNAL SURFACES.

Intended Use

This heated over blanket is designed solely to warm the human body. It is intended for domestic indoor use only and not for commercial or medical use.

HOW TO SET UP AND USE YOUR ELECTRIC BLANKET

Before You Start

- Fully unfold the blanket
- Ensure the blanket is not folded, creased, or bunched up during use.
- Locate the blanket connector- this end of the blanket is the 'head area' and is where the controller connects.
- Ensure the controller and connection point are easily accessible during use.

Step 1 – Connect the Controller

- Locate the blanket socket attached to the blanket (head area)
 - Locate the controller adaptor connector.
 - Align the connector correctly and push firmly into the blanket socket until fully connected.
-

Step 2 – Plug Into Mains Power

- Insert the UK plug into a suitable wall socket (230V~, 50Hz.)
 - Switch the wall socket ON.
-

Step 3 – Switch the Blanket ON

- Move the ON/OFF slider upwards to the ON position.
 - The display will illuminate and the blanket will automatically start on Heat Level 9 (Maximum Heat).
 - This allows the blanket to warm up quickly.
-

Step 4 – Adjust Your Heat Setting

- Press the HEAT button to choose your preferred temperature level.
- Each press of the button reduces the setting by one level
- The heat levels range from 1–9.

Heat Level Guide

- 1–3: Low heat
- 4–6: Medium heat
- 7–8: High heat
- 9: Maximum heat

 **Tip:** For the fastest warm-up, start on level 9 and reduce the setting once comfortable.

Step 5 – Set the Auto Shut-Off Timer

- Press the TIMER button to cycle through the available timer settings:
 - 1H = Automatically switches off after 1 hour
 - 2H = Automatically switches off after 2 hours
 - 10H = Automatically switches off after 10 hours
 - The selected timer will be shown on the display.
-

During Use

- Ensure the blanket remains flat while in use.
- Adjust the heat level at any time using the HEAT button.
- The display will show your selected heat setting and timer option.


Switching Off

- Move the ON/OFF slider down to the OFF position.
- The display will switch off.

Disconnecting the Blanket

- Switch the controller OFF.
- Turn the wall socket OFF and remove the UK plug.
- Hold the adaptor body (not the cable) and pull it straight out of the blanket socket.
- Allow the blanket to cool before folding or storing.

Controller Unit Explained

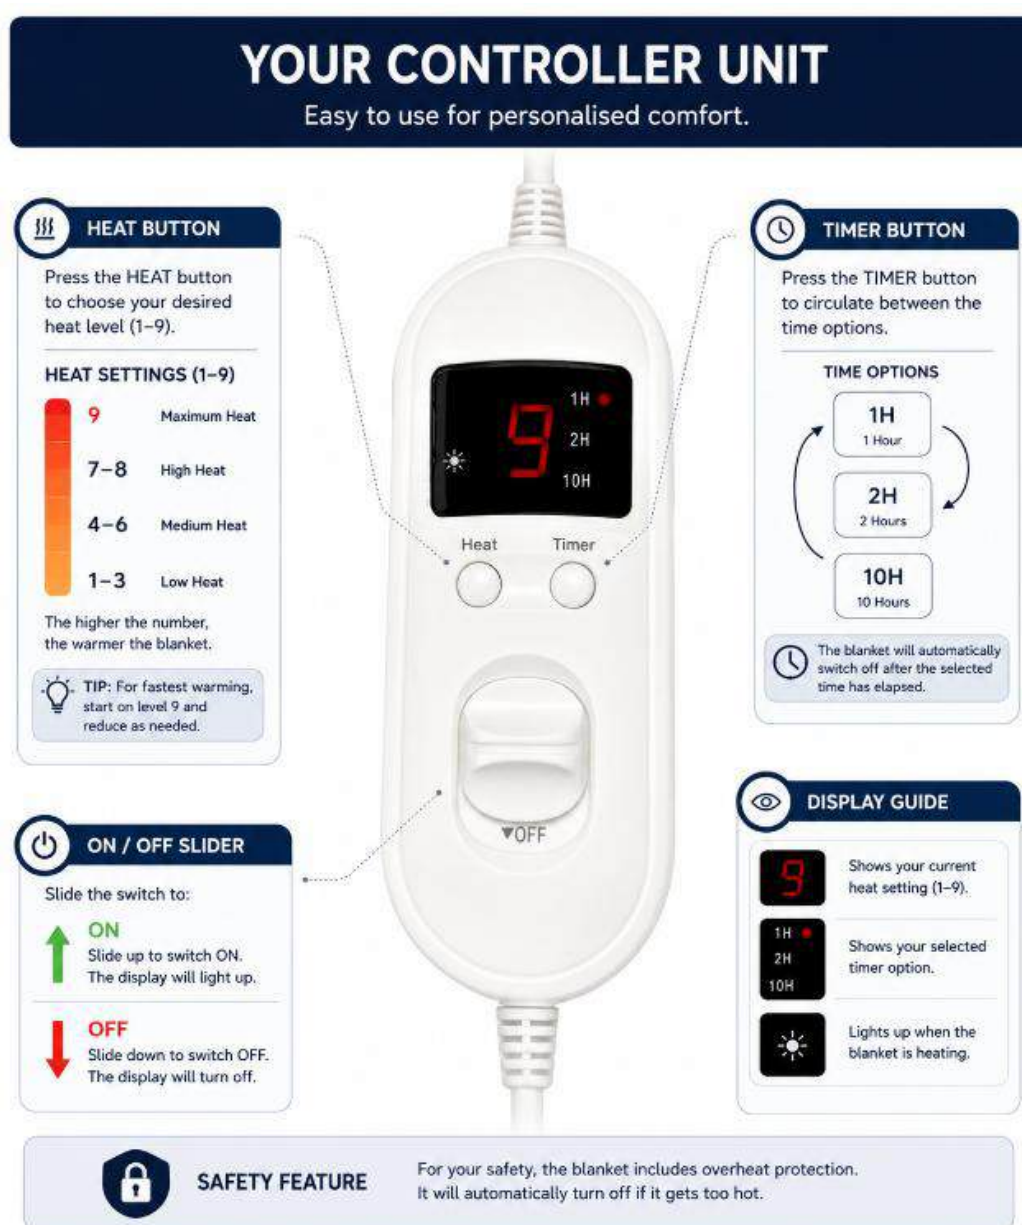

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY. DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- ONLY USE WITH THE MAINS ADAPTOR/CHARGER SUPPLIED.
- **DO NOT** USE ANY OTHER MAINS ADAPTOR/CHARGER AS THIS MAY CAUSE DAMAGE AND INVALIDATES ANY WARRANTY YOU MAY HAVE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ALLOW THE ITEM TO COOL THOROUGHLY BEFORE PUTTING ON OR TAKING OFF PARTS
- KEEP ITEM AT LEAST 1M AWAY FROM COMBUSTIBLE MATERIAL SUCH AS FURNITURE, CUSHIONS, BEDDING, PAPER, CLOTHES, CURTAINS ETC.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, MAINS ADAPTOR/ CHARGER OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR MAINS ADAPTOR/ CHARGER OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- DO NOT LEAVE UNATTENDED.
- ALWAYS SWITCH OFF AFTER USE OR IF YOU HAVE TO LEAVE THE ROOM.
- ALLOW TO COOL BEFORE CARRYING OR PLACING IN STORAGE.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

PLUG WIRING (UK & IRELAND)

This appliance is supplied with a 3 Pin Plug with BS1363 plug pins.

DO NOT use if the socket outlets in your home or office are not suitable for this product's plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.

DO NOT use with any other plug than the one that is supplied with this product.

PLUG FUSE (UK / NI ONLY)

This appliance is fitted with a moulded BS 1363 13-amp plug. This is fitted with a 3 AMP fuse.

If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 should be used.

If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely.

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

DISPOSAL

- We use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons in accordance with your local authority recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

Plastics/Polybags – This item is made/packed using the following

Code & Symbol	 PETE	 HDPE	 PVC	 LDPE	 PP	 PS	 OTHER
Type of Plastic	Polyethylene Terephthalate	High-Density Polyethylene	Polyvinyl Chloride	Low Density Polyethylene	Polypropylene	Polystyrene	Please Specify (includes ABS, Nylon)

Explanation of symbols:

	Read the instructions!
	Do not insert pins!
	Do not use folded or rucked!
	Not to be used by very young children (0- 3 years).
	40 extra gentle washing programs.
	Household use only.
	Do not tumble dry
	Do not iron.
	Do not dry-clean.
	Do not bleach.
	The device has double protective insulation and therefore complies with protection class 2

Distributed by

The Enterprise Department Ltd, Trading as Coopers of Stortford.

UK address: 11 Bridge Street, Bishops Stortford, Herts, UK, CM23 2JU

NI/EU address : D.S.B. LD, 160 Bd. De Fourmies, 59100 Roubaix, France



0330 331 0300



enquiries@coopersofstortford.co.uk



<https://www.coopersofstortford.co.uk>

