

HEATED FLEECE SCARF WITH POWER BANK

Item No: R509

Instructions for Use v001: 20/05/2026

Please read and retain these instructions for future reference

Java
wellness



STAY WARM ANYWHERE

Enjoy instant warmth and comfort with your Heated Fleece Scarf.

Designed for everyday indoor and outdoor use, this scarf provides adjustable heat settings powered by a rechargeable power bank.

Power Details:

Voltage details:

Wattage details:

Battery

Heating Scarf Power Bank

5V 1A

5W

5000mah

5V 2A

10W

Output Ports: 2 × USB A, 1 × USB C, 1 × Micro USB

Contents: 1 x Heated Scarf, 1 x Power Bank, 1 x USB Charger Cable, 1 x Manual

Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new heated fleece scarf.



Caution
Hot surface

CAUTION! THIS ELECTRICAL APPLIANCE'S EXTERNAL SURFACES WILL GET HOT IN NORMAL USE. ALLOW TO COOL BEFORE TOUCHING THE EXTERNAL SURFACES.

User Instructions

Before Use

1. Fully charge the power bank using the USB charging cable.
2. The LED indicator will show the charging status.
3. Once fully charged, the lights will remain on.

How To Charge:

1. Connect the USB cable to the power bank
2. Plug the other end of the USB cable into a power adaptor (**plug- not supplied**)
3. Plug the adaptor into a wall socket and switch on
4. The LED indicator light will flash while charging (A full charge should take 4-5 hours)
5. Once fully charged the LED lights will remain on



Connect The Power Bank

1. Locate the **zip pocket** on the outside of the scarf and open to find the USB cable
2. Plug in the power bank using the USB port and insert inside the pocket.
3. Close the zip.

Tip: Make sure the cable is not twisted or trapped when closing the zip



Switch On the Scarf

1. Press and hold the **power button** for 2-3 seconds.

The LED will light up to show it is on.



Select Your Heat Setting

1. Press the power button to cycle through the heat setting

Tip: Allow a few minutes for the scarf to reach your selected temperature

HEAT SETTINGS GUIDE		
LED COLOUR	TEMPERATURE	HEAT LEVEL
 Green	45°C	Low 
 Blue	50°C	Medium 
 Red	55°C	High 

Turn Off After Use

1. Press and hold the power button to **switch off**.
2. Disconnect the scarf from the power bank after use.

Tip: Always disconnect and store the power bank separately

Important: Always disconnect the power bank after use. Do not leave the scarf connected when not in use.

6 HOW TO WEAR YOUR SCARF

The **loop** at one end is designed to **thread** the scarf through for a secure and comfortable fit.




TIP: Adjust the scarf for your preferred comfort and warmth.

1 THE LOOP



The **loop** is located at one end of the scarf. This is used to **thread** the other end through.

2 THREADED THROUGH

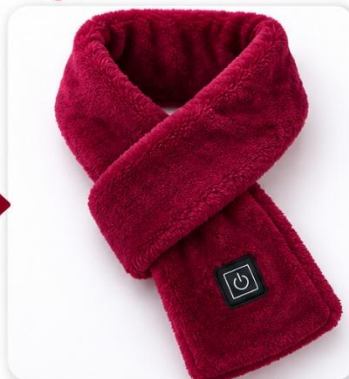

Pull the other end of the scarf all the way through the loop. Adjust for a **snug and comfortable** fit.



IMPORTANT: Ensure the power button is easily accessible while wearing.

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC USE ONLY.
- DO NOT USE THIS ITEM FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ONLY USE WITH THE MAINS ADAPTOR/CHARGER SUPPLIED.
- **DO NOT** USE ANY OTHER MAINS ADAPTOR/CHARGER AS THIS MAY CAUSE DAMAGE AND INVALIDATES ANY WARRANTY YOU MAY HAVE.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- BEFORE CONNECTING THE ITEM, CHECK IF THE VOLTAGE INDICATED ON THE ITEM IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- NEVER TOUCH THE PLUG WITH WET HANDS
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- **TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK DO NOT USE WITH AN EXTENSION CORD.**
- NEVER REMOVE THE PLUG BY PULLING ON THE POWER CORD.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- **DO NOT LEAVE SWITCHED ON OR UNATTENDED.**
- **DO NOT USE WHEN SLEEPING**
- **SWITCH OFF AFTER USE OR IF LEAVING THE ROOM TO AVOID RISK OF OVERHEATING OR FIRE.**
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE, AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE

APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.

- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE USE OF ANY ACCESSORY OR ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- ALLOW THE ITEM TO COOL THOROUGHLY BEFORE REPLACING PARTS OR PLACING IN STORAGE
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, MAINS ADAPTOR/ CHARGER OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR MAINS ADAPTOR/ CHARGER OR AFTER THE APPLIANCE MALFUNCTIONS OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

PLUG WIRING

This Item is supplied is supplied with a power bank and USB Cable

CARE AND CLEANING INSTRUCTIONS

- Always switch off and unplug before cleaning.
- Ensure Cap is placed back onto USB cable.
- Do NOT immerse in water. Risk of electric shock.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.
- Store the appliance in a cool, dry place.

BATTERIES

- Keep batteries away from children and pets.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

We use recyclable or recycled packaging where possible

Please dispose of all packaging in accordance with your local authority's recycling regulations

At the end of the product's lifespan check with your local council authorized household waste recycling centre for disposal.

Plastic Polybags – this is made from the following recyclable plastic

Code & Symbol	 PVC	 OTHER
Type of Plastic	Polyvinyl Chloride	ABS

Distributed by / Verteilt durch / Distribué par/ Distributor / Distribuuje.

The Enterprise Department Ltd, Trading as Coopers of Stortford.

UK address: 11 Bridge Street, Bishops Stortford, Herts, UK, CM23 2JU

EU address: D.S.B. LD, 160 Bd. De Fourmies, 59100 Roubaix, France



0330 331 0300



enquiries@coopersofstortford.co.uk



<https://www.coopersofstortford.co.uk>

3Pagen

Hergestellt für 3Pagen

Sankt-Joeris-Strasse 16-28

52477 Alsdorf



+49 (0) 2404/980-204



kontakt@3pagen.de



www.3pagen.de



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !