

U.K. WIRING INSTRUCTIONS


The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE
GREEN/YELLOW	EARTH

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.
- The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked with the letter E or (earth symbol) and is coloured GREEN or GREEN/YELLOW.

WARNING: THIS APPLIANCE MUST BE EARTHED

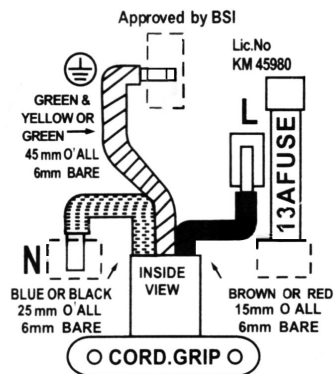

To avoid damage or danger caused by improper use, these user instructions should be carefully kept and followed.

Caution

Ensure that your mains voltage corresponds to that stated on the appliance. The appliance should be connected to an earthed mains socket.

Never use the appliance if any part is damaged.

There are no user serviceable parts, if a fault develops, the unit must be returned to the supplier for repair/replacement subject to guarantee conditions.

Only replace the fuse if required with a BS1362 3 amp rated fuse.

Do not allow the unit to get wet.

Always disconnect from the power supply when cleaning the unit.

Do not allow children to play with this unit, it is not a toy.

Use

Plug into an earthed mains socket.

Turn the switch to ON, the light will illuminate. After a short time the towel warmer will reach its operating temperature.

Switch off after use.

Technical data

230v/50Hz ~55w IPX1 rating.

The unit is tested according to UL/GS and EMC regulations and is built to CE/RoHS standards.

Additional protection may be obtained by fitting an RCD unit (IF=30mA) into your home installation. Please consult a qualified electrician for advice.

Disposal

Dispose the packaging at your local recycling centre.

Dispose paper and carton separately from plastic bags at your local recycling centre.

Dispose the appliance at the end of its lifespan at your local authorised household waste recycling centre.

