


Lightweight Heated Clothes Airer Dryer 8839 Instructions

220-240V~ 50Hz 100W IPX1

Important safety instructions

Read all these instructions carefully before using this product.

- MAKE SURE THAT THE VOLTAGE RATING ON THE TYPE PLATE CORRESPONDS TO YOUR MAINS VOLTAGE. IF NOT, SEE YOUR RETAILER AND DO NOT CONNECT THE UNIT.
- Please ensure the socket is grounded and secure.
- Do not leave the unit switched on if you are away from it for prolonged periods.
- Do not allow children to operate or play with this unit.
- Only use the unit for domestic purposes and in the way indicated in these instructions.
- From time to time, check the cord for damage. Never use the unit if cord or unit show any sign of damage.
- Do not get the unit wet. Do not use it in a bath or shower room.
- Avoid using the unit if you have wet hands.
- Never use the unit on or near hot surfaces.
- Never move or rearrange the position of the unit by pulling the cord or whilst the unit is hot.
- Before moving and storing the unit, make sure that it is unplugged from the power and that it has completely cooled.
- Do not open the unit, no user serviceable parts.
- Never use accessories that are not recommended or supplied by the manufacturer. It could constitute a danger to the user and risk damaging the unit.
- Any alterations to the product made by a non-qualified person can be dangerous and will void the warranty. As with all electrical products, a qualified person must carry out repairs.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities.
- Only replace the fuse if required with a correctly rated BS1362 fuse.
- As with all electrical equipment when in use, please exercise caution at all times.

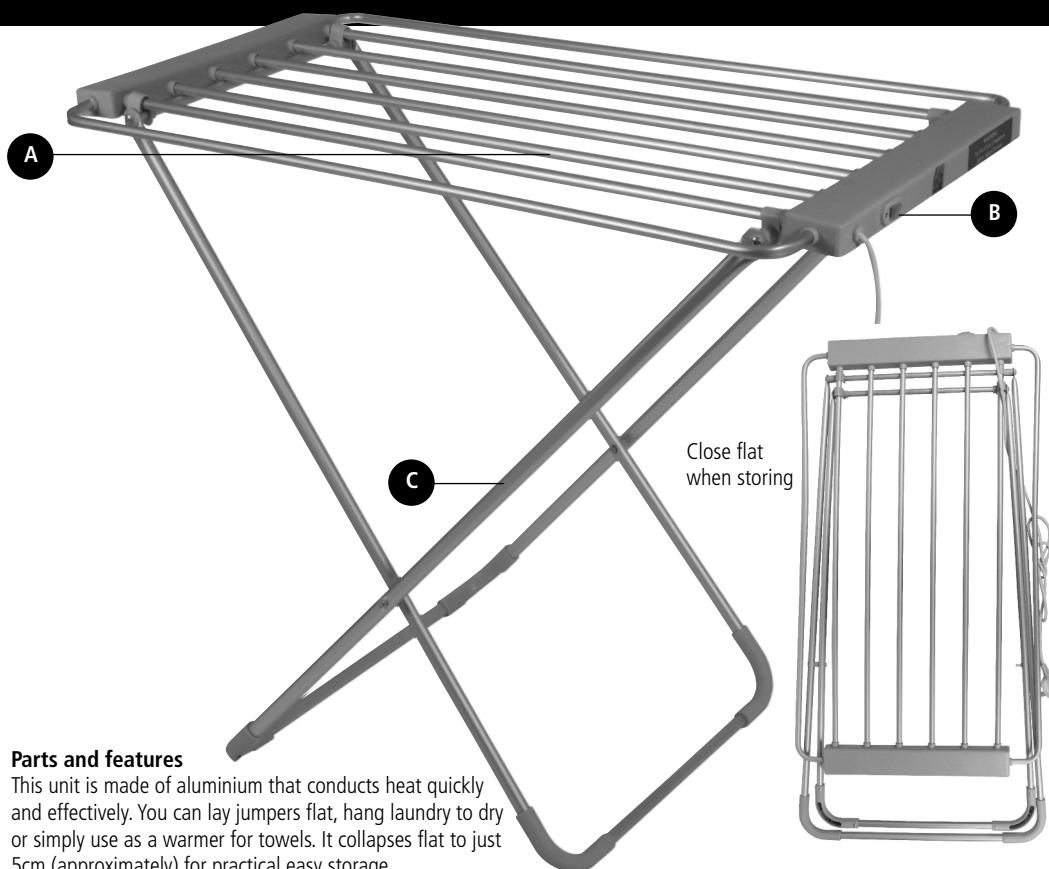

Parts and features

This unit is made of aluminium that conducts heat quickly and effectively. You can lay jumpers flat, hang laundry to dry or simply use as a warmer for towels. It collapses flat to just 5cm (approximately) for practical easy storage.

- A Heating bars x6
- B On /Off Switch with Indicator Light
- C Collapsible support legs

Using the Lightweight Heated Clothes Airer Dryer

- Completely unfold the unit and place it on a stable and flat surface.
- Insert the plug into a suitable 3-pin earthed socket.
- Switch on the unit. It will reach its optimum heat level in a few minutes.
- Place your towels etc, on the unit as desired.
- When all your towels etc, are dry and warm to the touch, turn off the unit.
- Reposition towels etc, on the dryer regularly to ensure even warming/drying.
- Wait until the unit cools down completely before storing away. Close it flat when storing and ensure it is safely secured to prevent damage.

Important notes

- If the unit comes into contact with textiles that are not colour-fast, some colours might stain the unit. To prevent this, we suggest you cover the unit with an old towel or sheet first.
- This unit is designed to dry clothes and other textiles washed and fully rinsed in water. If there is any residual soap or detergent left in the clothes, then stains may be caused as a consequence. This is not a defect of the unit and the manufacturer does not accept any responsibility if this occurs.
- **CAUTION:** while heating up and during use, the heated bars of this unit will be hot. Take care when placing clothes on them and use protective gloves, if required.

- Do not fully cover the unit with heavy wet items; the unit should have some air circulating around the items to be dried.
- When drying delicate items, please use a protective cloth or sheet between the item and the bars to prevent damage to the item.
- Man-made fibres may be damaged if subjected to direct heat, use a protective cloth or sheet between the item and the bars to prevent damage to the item.
- Not recommended for heavy duvets.

Care and cleaning

- Before any cleaning or maintenance operation, switch off and unplug the unit.
- Ensure it has cooled.
- To remove dust, wipe the unit with a soft cloth.
- Never use detergents or abrasive cleaning agents.

Correct Disposal of this product

This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Dispose of packaging at your local recycling centre.

PLEASE RETAIN THESE INSTRUCTIONS
FOR FUTURE REFERENCE.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400
Fax: 01279 756595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD