

Cordless chiming doorbell 6265 with 2 receivers

INSTALLATION:

Peel off the protective paper on the adhesive pad on the transmitter (door button) and carefully locate in a clean and dry place. Please remember to leave adequate room to enable you to get a thin blade screwdriver into the small aperture under the transmitter to lever the cover off to replace the battery.

Alternatively use small wood screws (not supplied) to fix to a wooden doorframe.

You will need to remove the cover of the transmitter to fit the 12v battery (supplied).

When reassembling the cover, take care not to disturb the weatherproof seal.

Once the transmitter has been installed position the receivers in desired locations. This can be up to 100m from the transmitter, however the distance may be reduced depending on building construction, doors, walls etc.

Select the chime or melody using the button on the side of the receiver.

The door bells will only work with their original transmitter (door button).

Please note: mounting the bell push on a metal door frame, or UPVC door frame with a steel internal frame will reduce the operating range of the doorbell.

It is advisable to test the doorbell in the desired location to check it operates correctly before final installation.

Always use good quality batteries to ensure maximum performance.

Please refer to the product instructions for further advice.

To comply with Heath & Safety regulations, all repairs must be undertaken by a qualified electrician. No user serviceable parts.

WARNINGS:

This is not a toy, keep away from children.

