


Cordless Rechargeable LED Light 6271 Instructions

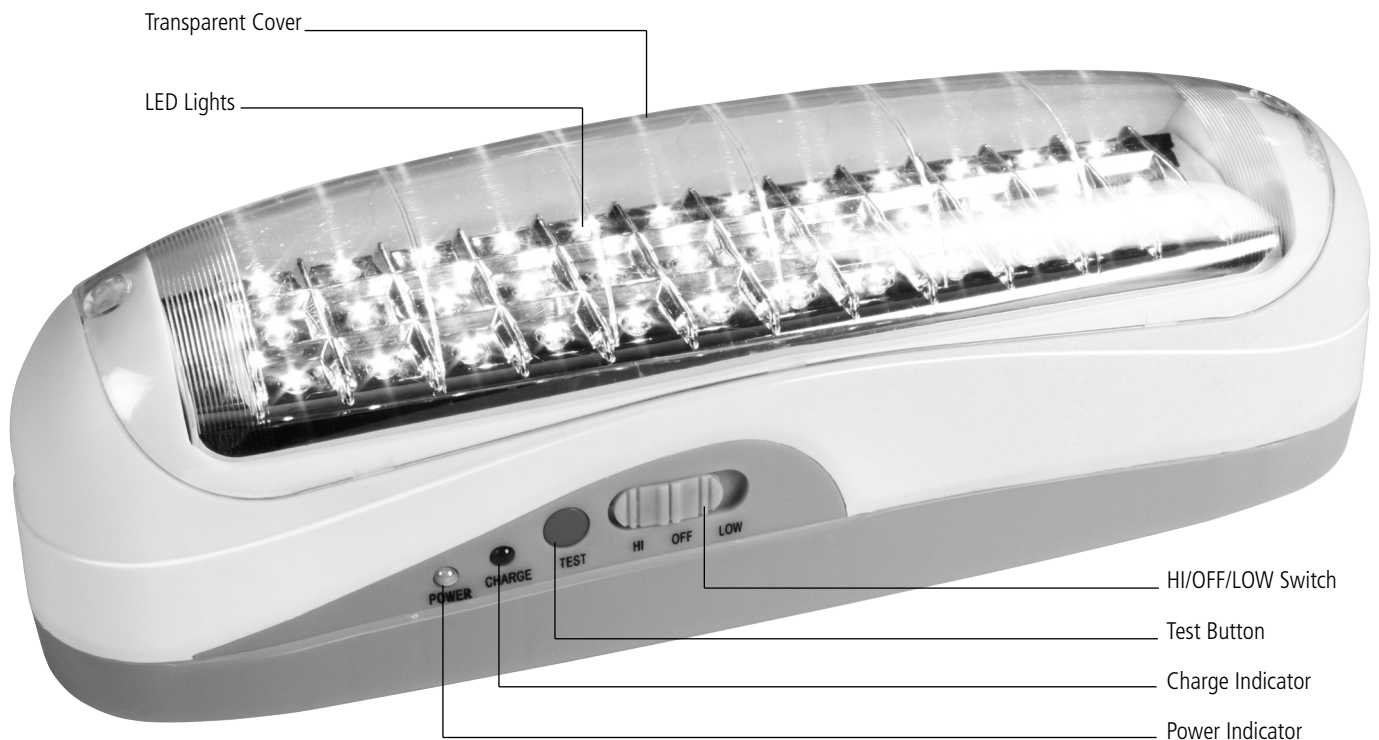

- Charge fully before first use.
- To use, disconnect the charging cable, and turn the unit on. Always turn the unit off after use.
- For the emergency light function, leave the unit on charge, and turn the HI/Off/LOW switch to HI/LOW. The LED Light will automatically light up in the event of a power cut. Pressing the 'Test' button whilst in this mode will demonstrate that the light will illuminate in the event of a power cut.

CHARGING

- Connect the power lead to the unit and leave recharging for 16-19 hours before first use.
- Periodically recharge the unit, for 8 hours in every 3-month period if not in use.
- Please note, the unit is protected from over charging, and will turn itself off when discharged to protect the battery.
- Recharge the unit when the LEDs start to dim. The battery will become warm during the charge cycle, this is normal.
- Once charged the battery should give approximately 5 hours of light, dependant on conditions.

WARNING

- Keep away from children, this is not a toy.
- To protect from electric shock, do not immerse in water or any other liquid.
- Do not operate if any part of the unit, cord or plug is damaged.
- There are no user serviceable parts, return to your supplier for repair/replacement if the unit develops a fault.
- Do not cover either whilst recharging or in use.
- Only replace the fuse if required with a BS1362 3 amp rated fuse.

PACKAGING

- Dispose of the packaging at your local recycling centre.
- Dispose of paper and carton separately from plastic bags at your local recycling centre.
- Dispose of the item at the end of its lifespan at your local authorised household waste recycling centre.



Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400
Fax: 01279 756595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD