

Non-drip Teapot ⁷⁷⁵⁹



CLEANING INSTRUCTIONS:

Wash in warm soapy water with a non abrasive cloth after every use.

Do not leave the teapot to air dry, always dry with a soft cloth after washing and rinsing.

Do not use any abrasive cleaner, silver cleaner/polish or bleach to clean the teapot.

Always follow the dishwasher manufacturer's instructions/recommendations for use.

Never leave washed teapot in the dishwasher to dry, always remove and dry with a soft cloth by hand.

WARNING: Teapot can be damaged if exposed to corrosive substances: Salt - from foods, dishwasher salt, water softener salt, food acids, detergents if left for extended periods etc. Please follow the care instructions above to avoid any problems.

Before first use, remove all packaging and wash and dry as above.

WARNING:

When in use the teapot can become hot to touch, keep away from children.

Coopers
OF STORTFORD
www.coopersofstortford.co.uk

Head Office
11 Bridge Street
Bishop's Stortford
CM23 2JU
Tel: 0844 482 4400
Fax: 01279 756595