



DISPOSAL:

- Dispose of the packaging at your local recycling centre.
- Dispose of paper and carton separately from plastic bags at your local recycling centre.
- Dispose of the item at the end of its lifespan at your local authorised household waste recycling centre.
- Dispose of batteries at your local recycling centre.

Can Magic 7823



Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400 Fax: 01279 756595 www.coopersofstortford.co.uk





Instructions

Please read these instructions fully before use and retain for future reference.

 Insert 4x AA alkaline batteries (not included) and close the cover.
Observe the correct polarity

 
when fitting AA batteries. Replace the cover, ensuring the clip on the front is correctly located.



3. Put the can opener down fully on the can without any space between them.









6. For your convenience, a magnet in the centre of the can opener will keep hold of the lid.



7. As the shape of cans vary, sometimes the lid will remain in place and not be lifted off by the magnet. It may even look like the lid has not been removed. However, the can opener works by breaking the seal between lid and can and will just lift



Operation and caution notes

- Read instructions carefully before using this unit.
- This is not a toy. Please keep out of the reach of children.
- Please ensure you use good quality alkaline batteries.
- The blade is sharp, do not touch whilst operating.
- Remove the batteries if left for long periods. Store the unit in a cool, dry place.
- Use a clean damp cloth to wipe the surface of the can opener but do not wash it under running water or other liquid. Do not use solvents and abrasives when cleaning.