

**FOR OUTDOOR USE**

<b>Power Details:</b>	<b>Input voltage</b>	220-240Va.c.
	<b>Frequency details:</b>	50-60Hz
	<b>Wattage details:</b>	1W
	<b>Dimensions:</b>	11.5cm x 28cm

**Please read this instruction manual thoroughly before starting and ensure you are familiar with the operation of your new Insect Killer.**

**How it works:**

Flies, moths, mosquitoes, and midges are attracted to ultra-violet light. The insects fly against an electrically charged grid which destroys them quickly and hygienically. They then fall into the removable base on the underside of the product.

**Where to place it:**

- A generally good place to hang the product is 1.5 to 3 metres above the floor, dependent on where your plug is. The ultra-violet light attracts flying insects, so don't hang it near other sources of light. The darkest place gives the best results.
- The product can be placed on a secure and level surface if hanging is not required.
- Make sure that there are no obstacles in the insects flying route towards the lamp. The unit will attract insects on a "line of sight" basis.
- Hang the unit away from people or food.
- When using indoors, keep windows and doors closed as much as possible.
- If you achieve poor results after 24 hours, re-position the unit at a different height or location and try again.
- For best results, leave the unit in position and working continuously for the first few weeks so that insect breeding and life cycles can be broken. After that, use 12 to 16 hours per day.

**Cleaning - unplug first!**

Disconnect the insect killer from the mains and wait for at least 30 seconds to discharge static electricity prior to cleaning by touching the grid with an insulated screwdriver.

- Dead insects can be removed from the base – twist anti-clockwise to remove, empty out and replace. Do this regularly.
- Periodically wipe clean the base only with a damp cloth. Do not immerse the unit in water or try to clean the internal parts or bulb.
- It is recommended that dead insects are removed from the base of the unit every day to reduce the risk of fire.
- There are no repairable parts of this product.
- If damage occurs, consult your retailer.
- Do NOT immerse in water. Risk of electric shock.
- Store the unit in a cool, dry place.

**SAFETY INSTRUCTIONS:**

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- REMOVE ALL THE PACKING MATERIAL.
- NEVER HANG YOUR UNIT BY THE ELECTRICAL CORD; ALWAYS USE THE SPECIAL HANGING RING.
- ALWAYS UNPLUG BEFORE YOU MOVE IT OR CLEAN IT.
- KEEP IT OUT OF REACH OF CHILDREN.
- KEEP AWAY FROM CURTAINS, BLINDS OR OTHER ITEMS THAT COULD OVERHANG THE UNIT.
- DO NOT ALLOW ANYTHING TO TOUCH THE UNIT WHILST IN USE (EXCEPT THE INSECTS OF COURSE!).
- THIS UNIT IS FOR INDOOR USE ONLY. DO NOT USE OUTDOORS.
- DO NOT USE IN BARNES, STABLES OR OTHER SIMILAR LOCATIONS WHERE FIRE IS A HIGH RISK.
- THE UNIT IS NOT TO BE USED IN LOCATIONS WHERE FLAMMABLE VAPOUR OR EXPLOSIVE DUST IS LIKELY TO EXIST.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE CORD, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- **DO NOT** COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

**DANGEROUS VOTAGE WARNING:**

**DO NOT SPRAY WATER ONTO THE INSECT KILLER. AN ELECTRIC SHOCK HAZARD MAY EXIST IF WATER FROM A GARDEN HOSE IS DIRECTED AT THE INSECT KILLER.**  
**WHEN USING EXTENSION CORDS, KEEP THE SOCKET-OUTLET AWAY FROM MOISTURE AND AVOID DAMAGE TO THE CORD.**

**WARNING:**

- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.

- DO NOT USE IF THE POWER CORD OR PLUG IS DAMAGED. TO BE REPAIRED BY A QUALIFIED ELECTRICIAN OR TO BE REPLACED BY THE MANUFACTURER, SERVICE AGENT OR SIMILARLY QUALIFIED PERSON, IN ORDER TO AVOID A HAZARD.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CORD IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.

#### PLUG WIRING (UK & IRELAND)

This appliance is fitted with a moulded BS 1363 **13-amp** plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of **13-amps** should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard.

#### DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

