

SETTING & FUNCTION PROCEDURES

How to set

Insert 2 x AAA batteries (not supplied) observing correct polarity.

In normal display, press MODE key to show the following functions in sequence:

Time → Calendar → Alarm

Time Setting

1. Press Mode and select Time, press UP key and hold for 2 seconds to set 12/24 hour format

2. Press Mode and select Time, press MODE key and hold for 2 seconds to set Hour, press UP or DOWN key to adjust, then press MODE key to confirm

3. To set Minute, press UP or DOWN key to adjust, then press MODE to finish.

Calendar Setting

1. Press Mode and select Calendar, press MODE key and hold for 2 seconds to set Year, press UP or DOWN key to adjust, then press MODE key to confirm

2. To set Month, press UP or DOWN key to adjust, then press MODE key to confirm

3. To set Date, press UP or DOWN key to adjust, then press MODE key to finish.

Alarm Setting

Press UP key to turn on or turn off alarm function.

To set the alarm time:

1. Press Mode and select Alarm. Press MODE key and hold for 2 seconds to set Hour, press UP or DOWN key to adjust, then press MODE key to confirm

2. To set Minute, press UP or DOWN key to adjust, then press MODE key to finish.

When the Alarm sounds, press SNOOZE/LIGHT key to start snooze function (snooze is for approx. 8 minutes). Press any other key to cancel snooze function.

Temperature and Humidity

1. Press DOWN key to select °C or °F

2. Press MAX/MIN key to select Max or Min or current temperature & humidity record.

The accuracy for temperature is $\pm 1^{\circ}\text{C}$.

The accuracy for humidity is $\pm 5\%$.

Humidity less than 40%, COMFORT LEVEL will display Dry.

Humidity between 40%-70%, and temperature between 20°C - 25°C ,

COMFORT LEVEL will display Comfort. Humidity greater than 70%,

COMFORT LEVEL will display Wet.

3. Temperature trend will show temperature change in past 12 hours.

Back light

Press UP key to turn on or turn off alarm function.

Press SNOOZE/LIGHT key to open the backlight function.

Notes:

If the display become faint please change the batteries.

DISPOSAL

Dispose of the packaging at your local recycling centre.

Dispose of exhausted batteries at your local recycling centre.

Dispose of paper and carton separately from plastic bags at your local recycling centre.

Dispose of the appliance at the end of its lifespan at your local authorised household waste recycling centre.

