



## FREE STANDING USE ONLY

**This product is only suitable for well insulated spaces or occasional use.**

### TECHNICAL DETAILS:

Voltage: 220-240V a.c.  
Frequency: 50Hz  
Wattage: 2000W Max.

### WARNINGS / CAUTIONS:

**THIS PRODUCT IS ONLY SUITABLE FOR WELL INSULATED SPACES OR OCCASIONAL USE.**

- Do NOT cover the heater or any ventilation holes as this will cause the automatic cut off to activate and the heater to overheat.
- Do NOT use to dry clothing.
- Keep away from children and pets.
- Do NOT use in humid or damp areas.
- Not suitable for wall mounting.


### Assembly

Before using the heater,

Turn the heater on its side.

Attach the 2x feet using 4x short screws provided.

The feet **MUST** be attached securely on the heater as a free standing unit.

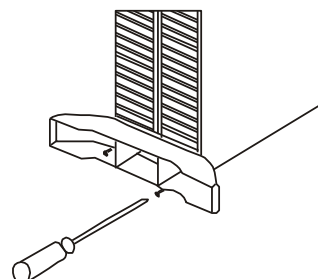



## HOW TO USE

### FOR FREE STANDING ONLY.

- Ensure the switches on the heater are in the off position before connecting to the mains.
- Ensure the heater is on a flat and stable surface before use.
- To set the correct working temperature set the heater switches to the maximum heating setting and the thermostat to max. When the desired room temperature is reached, turn down the thermostat until the lights on the unit go out. The heater will then continue to operate at this temperature.
- The heat settings are controlled by a combination of the heater switches and the thermostat (see photo).

- To further lower the temperature, select only one of the heater switches and repeat the above process.
- The light will remain on until the temperature reaches the thermostat setting.
- The heater is fitted with an automatic cut out feature which will activate to prevent the heater from overheating. If this feature activates, turn off the heater and unplug. Allow to cool and remove any items restricting the airflow around the heater before resuming use.
- If the automatic cut out feature activates repeatedly then do not continue using and contact a qualified electrician.
- The fan can be used to flow warm air when the heating switches are turned on and cold air when the heating switches are turned off. The thermostat must be turned on for the fan to work.

## SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE CORD, PLUG OR APPLIANCE IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING. ALLOW THE ITEM TO COOL THOROUGHLY BEFORE PUTTING ON OR TAKING OFF PARTS.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CORD IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.

- DO NOT USE OUTDOORS.
- DO NOT LET CORD HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES, AND USE ON A LEVEL, STABLE SURFACE.
- **DO NOT** PLACE UNDER OR NEAR FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALL PAPER ETC.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

#### WARNING

- KEEP THE APPLIANCE AWAY FROM CHILDREN.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- DO NOT PLACE THIS ITEM IMMEDIATELY BELOW A SOCKET-OUTLET.


#### PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 **13-amp** plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of **13-amps** should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

## The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the cord set are colour coded in the following way:

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

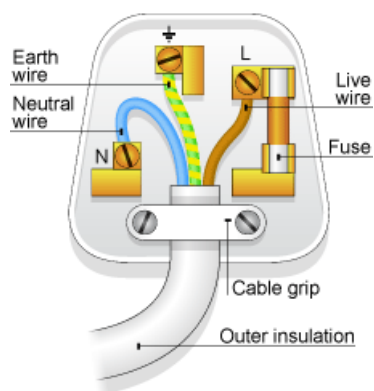

The diagram shows the key features of a correctly wired three-pin mains plug.

## CARE AND CLEANING INSTRUCTIONS

- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe surfaces with a soft dry cloth.
- Allow to dry thoroughly before further use.

## CLEANING INSTRUCTIONS:

- Wipe clean using a soft damp cloth.
- Do not use detergents or abrasives.
- Allow surface to dry fully before resuming use.

## DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

## COMMISSION REGULATION (EU) 2015/1188

Information requirements for electric local space heaters -

**Heating Technical Details:**

Model identifier(s): SMDL01B			
Item	Symbol	Value	Unit
<b>Heat output</b>			
Nominal heat output	P <sub>nom</sub>	1.8-2.0	kW
Minimum heat output (indicative)	P <sub>min</sub>	0.8	kW
Maximum continuous heat output	P <sub>max,c</sub>	2.0	kW
<b>Auxiliary electricity consumption</b>			
At nominal heat output	el <sub>max</sub>	N/A	kW
At minimum heat output	el <sub>min</sub>	N/A	kW
in standby mode	el <sub>SB</sub>	N/A	kW

Item	Unit
<b>Type of heat input, for electric storage local space heaters only (select one)</b>	
manual heat charge control, with integrated thermostat	No
manual heat charge control with room and/or outdoor temperature feedback	No
electronic heat charge control with room and/or outdoor temperature feedback	No
fan assisted heat output	No
<b>Type of heat output/room temperature control (select one)</b>	
single stage heat output and no room temperature control	No
Two or more manual stages, no room temperature control	No
<b>with mechanic thermostat room temperature control</b>	<b>Yes</b>
with electronic room temperature control	No
electronic room temperature control plus day timer	No
electronic room temperature control plus week timer	No
<b>Other control options (multiple selections possible)</b>	
room temperature control, with presence detection	No
room temperature control, with open window detection	No
with distance control option	No
with adaptive start control	No
with working time limitation	No
with black bulb sensor	No
Contact details:	COOPERS OF STORTFORD, 11 BRIDGE STREET, BISHOPS'S STORTFORD, HERTFORDSHIRE,UK, CM23 2JU

