

PARTS

A	Pivot Lever	x1	C	Carpet Slider	x4
B	Hard Floor Slider Pad	x4	D	Tip Cover	x1

HOW TO USE...

THE PIVOT LEVER

To lift furniture that sits directly on carpet, remove the tip cover and insert the pivot lever under the item. The tip cover reduces the risk of damage when lifting wooden or other delicate furniture. Always use the tip cover where possible.

ON HARD SURFACES

e.g. Wood, laminate floors, tiled floors, linoleum

Remove the hard floor slider (blue foam pad) from the carpet slider. Gently lift the piece of furniture to be moved using the pivot lever and place with the black felt side down underneath the foot or corner of the piece of the furniture. Repeat with all four feet/corners or until the piece of furniture is raised on all sides. Move furniture into desired position.

ON SOFT SURFACES

e.g. Carpets, carpet tiles, rugs

Insert the hard floor slider pad (black felt side down) into the recessed part of the carpet slider. Gently lift piece of furniture to be moved using the pivot lever and place with the carpet slider underneath the foot or corner of the piece of the furniture. Repeat with all four feet/corners or until the piece of furniture is raised on all sides. Move furniture into desired position.

POSITION OF THE FULCRUM

The adjustable fulcrum (pivot point) allows you to move the pivot point to give greater lifting power. Move as close as possible to the tip to achieve the greatest power. It also gives versatility making it easier to lift items of furniture that do not sit on the floor as the fulcrum can be adjusted.

WARNING

- Always ensure that floor area between the furniture and the desired location is clean before attempting to move furniture. Any dirt or other particles on the floor or the sliders may cause damaged to the floor surface when furniture is moved.
- Do NOT use on rough concrete floors. This will damage the Furniture Gliders.
- Do NOT use on newly finished floors. Wait up to 6 weeks until the floor surface is fully cured or follow your floor manufacturer's recommendations.
- Some large or heavy objects may require more than one person to move them, even with the aid of the Furniture Gliders. Always assess the load before attempting to move.
- Take care when moving from one room to another as bumps caused by going over door frames or from runners may cause the furniture to dislodge from the Furniture Gliders.

PACKAGING

- Dispose of the packaging at your local recycling centre.
- Dispose of paper and carton separately from plastic bags at your local recycling centre.
- Dispose of the item at the end of its lifespan at your local authorised household waste recycling centre