

PARTS

- | | |
|-----------------------|--------------------------------|
| 1 Front Cover Release | 8 Dust Cup Filter |
| 2 On/Off button | 9 Shoulder Strap Fixing Points |
| 3 Suction hole | 10 Front Cover |
| 4 Handle | 11 Flexible Hose |
| 5 Shoulder Strap | |
| 6 Cleaning Brush | |
| 7 Crevice Brush | |

Always check dust cup filter regularly and empty and clean when full. We suggest at least a weekly check.

SPECIFICATION

Voltage: 240Va.c.
50Hz
Power: 600W

SAFEGUARDS

- DO NOT LEAVE APPLIANCE PLUGGED IN WHEN NOT IN USE.
- NOT FOR OUTDOOR USE, ONLY USE ON DRY INDOOR SURFACES.
- DO NOT USE ON WET SURFACES OR TO VACUUM LIQUIDS.
- DO NOT HANDLE THE APPLIANCE WITH WET HANDS.
- THIS IS NOT A TOY, KEEP WAY FROM CHILDREN.
- USE ONLY AS DESCRIBED IN THIS MANUAL.
- USE ONLY MANUFACTURERS APPROVED ATTACHMENTS.
- DO NOT USE IF ANY PART OF THE ITEM OR CABLE ARE DAMAGED. IF ANY DAMAGE IS APPARENT, RETURN THE
- ITEM TO AN APPROVED SERVICE CENTRE FOR REPAIR/REPLACEMENT.
- DO NOT USE IF THE ITEM HAD BEEN ALLOWED TO GET WET.
- DO NOT PULL OR CARRY BY THE POWER CORD, ONLY USE THE HANDLE.
- KEEP APPLIANCE AND CORD AWAY FROM ANY HEAT SOURCE.
- TO UNPLUG, GRASP THE PLUG, DO NOT PULL ON THE CORD.
- DO NOT PUSH AND OBJECTS INTO ANY OPENING ON THE VACUUM, KEEP OPENINGS CLEAR OF LINT, DUST ETC.
- KEEP HAIR AND LOOSE CLOTHING AWAY FROM OPENINGS AND ANY MOVING PARTS.
- DO NOT USE TO VACUUM ANY HOT MATERIAL, CIGARETTES, ASH, ETC.
- TURN OFF BEFORE UNPLUGGING.
- DO NOT USE ON COMBUSTIBLE LIQUIDS, RISK OF EXPLOSION MAY RESULT.
- UNPLUG THE APPLIANCE BEFORE CLEANING.
- **ALWAYS ENSURE THE SUCTION HOLE IS FREE OF ANY OBSTRUCTION, FAILURE TO DO SO MAY RESULT IN THE VACUUM OVERHEATING.**

ASSEMBLY

- With the appliance unplugged open the front cover and ensure the dust cup filter is fitted.
- Attach shoulder strap to two fixing points, adjust as necessary.
- Attach crevice brush or cleaning brush to the front suction hole, or attach the brush accessories to the extension hose and fit the extension hose to the suction hole.

USE

- Assemble required attachment.
- Use shoulder strap if desired.
- Hold appliance by handle.
- With thumb turn on appliance.
- Start vacuuming.

Note: For your safety after prolonged use the Vacuum Cleaner has a thermal protector which will cut-out power if the temperature exceeds 105 °C. This can also happen if the dust cup filter is full. See Troubleshooting.

CLEANING

- Unplug the appliance before cleaning
- Do not immerse in liquid
- Use a damp cloth on accessible parts, dry with a clean lint free cloth.

TO EMPTY THE DUST CUP FILTER:

- Push the button in (left side of handle)
- Pull front housing off.
- Carefully remove the dust filter over a suitable receptacle. (Remember which way the filter fits.)
- Shake dust filter and front housing to empty.
- Rinse the front housing and dust filter in cold water and allow to dry naturally.
- Reassemble when dry.

TROUBLESHOOTING

Trouble	Cause	Resolve
Motor doesn't work	The plug is not plugged in. House main power is off.	Plug appliance in. Check fuse/breakers.
Suction decrease	The dust cap filter is blocked. The flexible hose or extension tube is blocked.	Check and clear all blockages.
Dust escapes from vacuum	Dust Cup filter has been punctured.	Replace Dust Cap filter.
	The flexible hose or extension tube is blocked.	Check and clear all blockages.
Motor cuts out	If appliance gets very hot (exceeding 105 degrees) an automatic internal thermal switch will ensure motor cuts out.	Allow to cool, motor will restart when sufficiently cooled.
	Dust Cup filter is blocked.	Empty Dust cup filter.

WARNING

- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- KEEP THE APPLIANCE AWAY FROM CHILDREN.
- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN WITHOUT SUPERVISION.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**

- CHILDREN OF LESS THAN 3 YEARS SHOULD BE KEPT AWAY UNLESS CONTINUOUSLY SUPERVISED.
- DO NOT USE IF THE POWER CORD OR PLUG IS DAMAGED. TO BE REPAIRED BY A QUALIFIED ELECTRICIAN OR TO BE REPLACED BY THE MANUFACTURER, SERVICE AGENT OR SIMILARLY QUALIFIED PERSON, IN ORDER TO AVOID A HAZARD.

PLUG WIRING (UK & IRELAND)


This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 13-amps should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is double insulated; the wires in the cord set are colour coded in the following way:

BLUE	NEUTRAL
BROWN	LIVE
GREEN & YELLOW	EARTH

The diagram below shows the key features of a correctly wired three-pin mains plug.

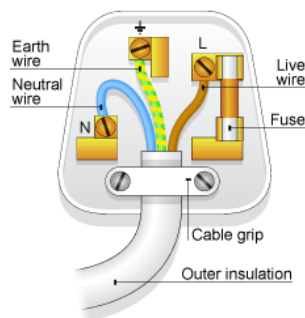

Note:
Double insulated appliances do not need the green & yellow Earth wire. They may only have the Brown and Blue wires.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

