


Parts

①	
	Board Quantity x1
②	
	Front Fixing Bar Quantity x1
③	
	Bracket Quantity x2 (set) Quantity x1 (extension)
④	
	Back Fixing Bar Quantity x1
⑤	
	Wall Anchor Quantity x4 (set) Quantity x2 (extension)
⑥	
	Rubber Seal Quantity x4 (set) Quantity x4 (extension)
⑦	
	Screw Quantity x4 (set) Quantity x2 (extension)


Assembly

Stage 1

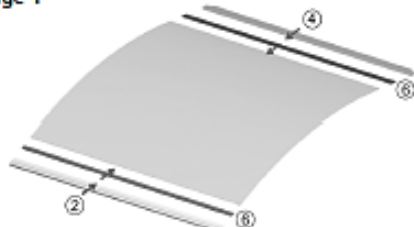


- Peel back the edges of the protective backing to allow fitting of parts 2, 4 and 6 before assembly.

Stage 2

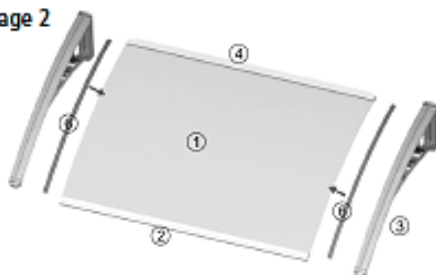


- Peel back the edges of the protective backing to allow fitting of part 6 before assembly.

Stage 3

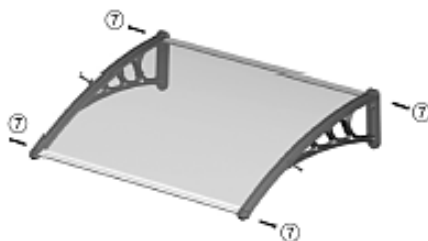

Stage 4

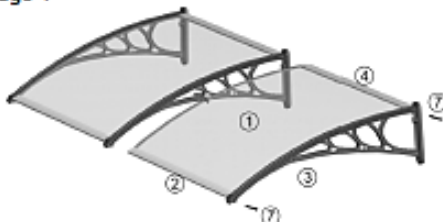

- If you have purchased more than one canopy they can be joined together.

Tools

- Electric Drill (with 10mm masonry drill bit)
- Hammer
- Phillips Screwdriver
- Spanner (14mm)

This door canopy should withstand light snow built up of max. 5.5kg/sqm but heavy build up of snow must be cleared regularly to avoid damage to the canopy.

To fix to the wall:

- First ensure the wall surface is strong and suitable for drilling.
- Drill a hole large enough for the Wall Anchor.
- Fix the canopy in place and tighten the Wall Anchors with a spanner.
- Remove the protective backing when canopy is in place.

Maintenance:

- Check the Wall Anchors are secure from time to time.
- Wash the Board with a non abrasive cleaner. Do not use scourers as damage could occur.

Packaging Disposal:

- Dispose of the packaging at your local recycling centre.
- Dispose of paper and carton separately from plastic bags at your local recycling centre.
- Dispose of the item at the end of its lifespan at your local authorised household waste recycling centre.