



TECHNICAL INFORMATION

Voltage: 230Vac. 50Hz. Wattage: 600W



Caution
Hot surface

CAUTION! THIS ELECTRICAL APPLIANCE'S EXTERNAL SURFACES WILL GET HOT IN NORMAL USE.
ALLOW TO COOL BEFORE TOUCHING THE EXTERNAL SURFACES.

BEFORE USE:

- Remove all packaging and check all parts for damage before first use.
- Attach the handle to the basket ensuring the handle and clips sit securely in the retaining lugs.
- Wash before first use, following cleaning instructions overleaf.

USE:

Adding the oil

- Open the lid and lift out the basket using the handle.
- Fill the fryer with oil, ensuring the oil level is between the maximum and minimum marks on the fryer wall.
- Set switch on the temperature controller to 140°C (the red indicator light will come on).
- Allow approx. 8 minutes to heat the oil until the red indicator light goes out.
- Never attempt to melt fat in the basket.

Cooking:

- Set the temperature controller to the desired temperature depending on what you are going to cook. The red indicator light will come on.

Food	Cooking time	Temperature
Crisps	4-6mins	140°C

Fish	5-6mins	160°C
Meat	12-15mins	170°C
Frozen Chips	12-15mins	180°C

Note: The above is a rough guide only. Please follow specific frying instructions on the packet of the foods that you are frying.

- When the red indicator light goes out (after approx. 5-7 minutes) the fryer has reached the desired temperature. Open the lid and put the food in the basket.
- Lower the basket into the oil slowly, making sure the oil level and foam do not exceed the maximum oil level marker. Close the lid.
- When cooking, the temperature controller will heat to (and maintain) the set temperature. The red indicator light will go out whenever the desired temperature is reached.
- When the food is cooked, turn the temperature controller anti-clockwise to the "OFF" position. The red indicator light will go out. Unplug the fryer or turn off at the power socket; the red indicator will go out. Open the lid. Raise the basket and drain the oil.

USEFUL HINTS & TIPS:

1. Oils

- Always use oil which can withstand high temperatures.
- Do not mix different types of oil.
- Change the oil when it becomes brown after cooking.

2. Preparing the food

- Whatever the recipe used, the food must be perfectly dry: this will avoid overflowing and make the oil last longer.
- When preparing potato-based food (especially chips, crisps, etc.), cut them up and then wash them in cold water to remove the starch. Dry them carefully. This will stop them sticking together.

3. Cooking

- Do not overfill the basket. This will cause the oil temperature to drop and make the food greasy.
- Do not keep the oil at a high temperature for long periods. This will make it lose its properties.
- Set the temperature controller to the lowest temperature while waiting between batches.
- Do not leave the cooked food in the basket in the draining position too long. The vapours could cause the food to lose its crispness and go soft.
- Frozen food can be cooked in the basket without being defrosted.

4. After cooking

- Oil can be left in the fryer with its basket and lid on. It will not lose its properties.
- Change the fat regularly, after approximately 20 batches.
- The surface is hot when frying. Allow to cool fully before touching the fryer to avoid burns.
- Before each use check all the parts of the unit for damage. Do not use if damaged.
- Ensure the cord is fully extended before use and ensure that it is not in contact with any part of the fryer.
- Switch off and unplug from the mains when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the power cord.
- For indoor, domestic use only.

Please read and retain these instructions for future reference

v004:21/06/18

- Do not leave the unit unattended when switched on.
- Use this unit as described in this manual. Any other uses, not recommended by the manufacturer, may cause fire, electric shock, or injury to persons and may void the warranty.
- This unit should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the unit by a person responsible for their safety.
- The unit is not intended to be operated by means of an external timer or separate remote-control system.
- Do not attempt to repair the unit yourself. No user serviceable parts.
- Caution: Take care when handling as the surface will get hot in use.

ALWAYS ALLOW TO COOL BEFORE MOVING.

WARNING:

- READ ALL INSTRUCTIONS BEFORE USE.
- FOR INDOOR DOMESTIC USE ONLY. DO NOT USE OUTDOORS.
- BEFORE CONNECTING THE UNIT, PLEASE CHECK IF THE VOLTAGE INDICATED ON THE UNIT IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- MAKE SURE THAT THE TEMPERATURE CONTROLLER IS IN THE "OFF" POSITION BEFORE PLUGGING IN.
- DO NOT HEAT WITHOUT FOOD OR OIL INSIDE.
- DO NOT COOK WET FOOD.
- TAKE CARE WHEN OPENING THE LID, WHEN FRYING, TO CHECK FOOD.
- **SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.**
- THE BASKET HANDLE MAY GET HOT DURING COOKING. WEAR AN OVEN GLOVE WHEN HANDLING.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE CORD, PLUG OR APPLIANCE, IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- THIS APPLIANCE IS NOT INTENDED TO BE OPERATED BY MEANS OF AN EXTERNAL TIMER OR SEPARATE REMOTE CONTROL SYSTEM.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CORD IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET CORD HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT USE THE APPLIANCE UNDERNEATH A WALL MOUNTED CUPBOARD.
- **DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.**
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND

THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.

- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.
- **DO NOT** PLACE UNDER OR NEAR FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALL PAPER, ETC.
- ALLOW THE ITEM TO COOL THOROUGHLY BEFORE PUTTING ON OR TAKING OFF PARTS.
- NEVER MOVE THE APPLIANCE BY PULLING THE CORD AND MAKE SURE THE CORD CAN NOT BECOME ENTANGLED.
- THE USER MUST NOT LEAVE THE APPLIANCE UNATTENDED WHILE IT IS CONNECTED TO THE POWER SUPPLY.
- THIS APPLIANCE SHALL NOT BE USED BY CHILDREN FROM 0 YEAR TO 8 YEARS.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE IF THEY ARE CONTINUOUSLY SUPERVISED. THIS APPLIANCE CAN BE USED BY PEOPLE WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. KEEP THE APPLIANCE AND ITS CORD OUT OF REACH OF CHILDREN AGED LESS THAN 8 YEARS. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

PLUG WIRING (UK & IRELAND):

This appliance is fitted with a moulded BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 5-amperes should be used.

If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard.

Do not use if the plug is damaged.

CLEANING:

- Unplug the unit and allow to cool fully before cleaning.
- Clean the outside of the fryer with a soft, damp cloth.
- Never use abrasive pads or alcohol.
- Detach the handle from the basket to clean.
- Wash the basket and handle with hot soapy water. Rinse and dry fully before further use.
- Detach the lid by lifting it, aligning the lugs with the recesses and removing. Unscrew, dismantle and wash the lid and filter separately in warm soapy water. Dry fully before re-assembling.
- Never immerse the unit in water.

DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

