


Please read carefully and retain for future reference.

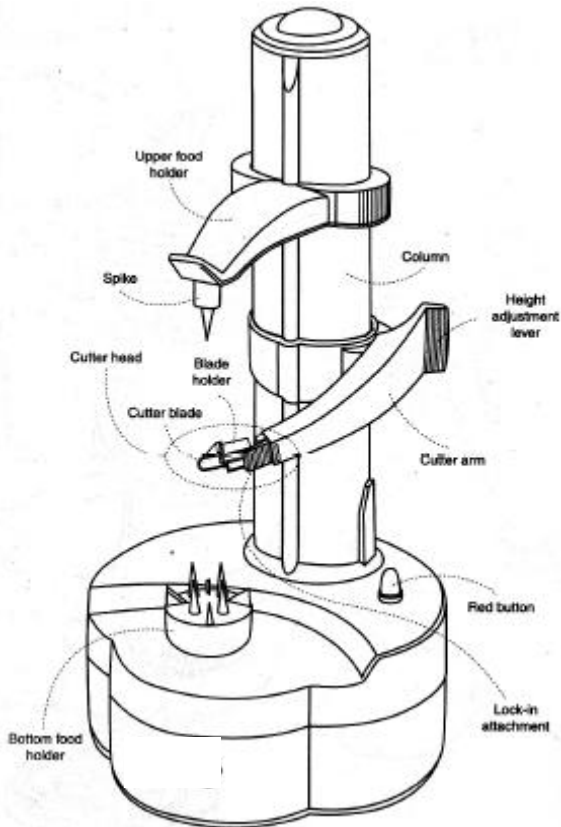

Parts:

- Auto Peeler (Fully Assembled)
- AC Adaptor
- 2 x Spare Blades (located in base of peeler)
- Plastic Food Blemish Knife (located on base of peeler)

Peeler can be used with both mains adaptor and batteries.

Please make sure all parts are enclosed as listed before using the item.

How to Peel Fruit & Vegetables:

1. Centre the fruit or vegetable you wish to peel on bottom of the food holder and press gently. The holder will spear the food item and hold it firmly in place.
2. Lower the upper food holder gently onto the food item. The attached spike should spear the top of the food item holding it firmly in place.
3. Using the height adjustment lever on the right hand side of the cutting arm, gently squeeze inwards, this will allow you to move the cutting arm up and down. Raise or lower the cutting arm so that it rests on the top of the food to be peeled
4. The red button located on the right hand side of the base operates the peeler. Press down once to turn ON and again to turn OFF. Once the food item is in place; press lightly to begin peeling. The skin will peel in one continuous curl and the Auto peeler will automatically stop when the cutter arm reaches the bottom. Should you wish to stop the peeler whilst in use, press down lightly on the red button which will turn it OFF.

To use with Batteries:

- Insert 4x AA Batteries (not supplied) into battery compartment located on the base of the peeler.
- Make sure batteries are inserted in line with the polarity guidance marked within the battery compartment.
- Replace cover to battery compartment
- If item is stored for long periods of time or is being used with the AC adaptor; remove batteries to prevent damage occurring.

To use with AC Adaptor:

- Insert AC adaptor lead into AC socket on the peeler. This is located on the back of the base.
- Plug AC Adaptor into mains socket

How to Change the Peeling Blade:

The Auto Peeler comes with 1x cutter blade affixed and 2 spares which are stored in the base of the product. Blades will require changing once they become blunt from use or if the blade begins to skip or jam. To change the blade:

1. Remove a spare cutter blade from the blade storage compartment located on the base of the product.
2. Remove the cutter head by gently pressing in the grip on the right hand side of the blade and pulling the lock in attachment from the cutter arm.
3. Unlatch and slide the used blade away from the blade holder in a downward movement. Dispose of the used blade safely following your local authority disposal regulations.
4. Affix the new blade by sliding down the ridge of the blade holder until the small red latch clicks into place. Make sure the blade is securely in place before proceeding
5. Insert the cutter head back into the cutter arm and ensure it is securely in place.

Helpful Hints:

- When choosing foods to be peeled, choose fruits and vegetables that are firm and symmetrically shaped.
- Fruit and vegetables more than 14cm (5.5") tall or 11cm ($4\frac{3}{8}$ ") wide should be cut in half so that the Auto Peeler is able to grip them between the upper food holder and the bottom food holder.
- Use plastic blemish knife to remove any blemishes from fruit and vegetable before and after peeling.

Warning:

- Do NOT touch cutter blade when in use, it is very sharp.
- Take care when handling the cutter blade.
- Do NOT immerse in water

Cleaning:

- Wipe clean using a soft, soapy damp cloth. Dry thoroughly before further use or storing.

Disposal:

- Dispose of the packaging at your local recycling centre.
- Dispose of paper and carton separately from plastic bags.
- Dispose of the appliance at the end of its lifespan at your local authorised household waste recycling centre.
- Dispose of all used cutter blades following local authority disposal regulations.
- Dispose of batteries safely and in accordance with your local authority regulations.

