v001: 13/02/18

Please read and retain these instructions for future reference



Uses:

Use Router bits to straighten edges/shape wood the way you need it

Use Block plane to cut end grain

Use Edge Trimming Block to hold sandpaper

Use Spoke shave to shave and smooth wood

Use Balsa planer for Balsa wood (modelling)

Use **Blades** to shape wood and wax



ADULT CRAFT TOOL SET.

Caution: Sharp points. Keep away from children.

YOU MUST BE 18 OR OVER TO BUY THIS PRODUCT.

