

Solar Animal Repeller w/Motion Sensor 10570 Instructions for Use

Please read and retain these instructions for future reference

v002:17/10/16



TECHNICAL DATA

Dimension: 11.5 x8.5 x31.5cm

Weight: 0.3kg

Material: ABS

4x AA (rechargeable or normal) batteries - 4 x300mAh rechargeable NiMH batteries included

Insert the batteries



 
Remove the door of the battery box



Slowly pull out the battery box. Do not pull out quickly or forcefully as this may tear off the 2 connecting wires behind the box.



Insert **4x AA (rechargeable or normal)** batteries into the battery box by following the polarity signs (+/-).

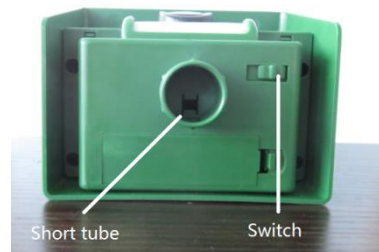

Replace the battery box and then the door of battery box.

Solar Animal Repeller w/Motion Sensor 10570 Instructions for Use

 
Please read and retain these instructions for future reference

v002:17/10/16


Install the product



Back view

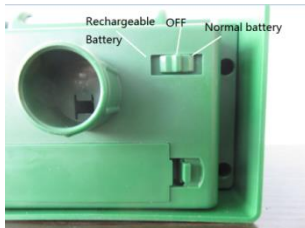


Switch on the bottom

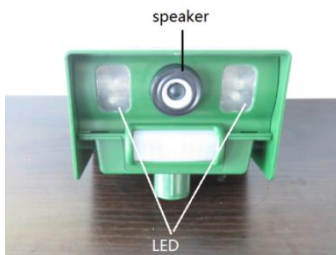 

Front view

 2) Staking in the ground

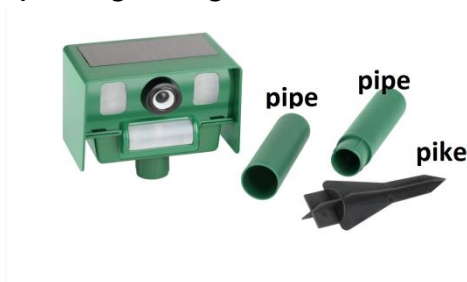

1. Assemble 1 pipe piece of the short tube on the bottom of the main body, then the second pipe, and finally the spike (the ground stake).
2. If the batteries are rechargeable, position the unit in soft ground where the solar panels are exposed to direct sunlight. If the batteries are normal, position in soft ground with or without direct sunlight.
Stick the ground stake together with the assembled main body into the ground.

HOW THE PRODUCT WORKS

The Solar Animal Repeller operates within 7m and 70 degrees' angle to the Passive Infrared (PIR) motion sensor.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

*Calls cost 7 pence per minute plus your telephone company's network access charge.

Solar Animal Repeller w/Motion Sensor 10570 Instructions for Use

Please read and retain these instructions for future reference

v002:17/10/16

When the sensor detects a moving object, the 2 ultrasonic speakers emit sound waves of 25,000 Hz in frequency, continuing for 30-60 seconds to repel unwanted animals such as mice, rats, rabbits, squirrels, raccoons, skunks, stray cats, stray dogs, etc.

CLEANING

- Use a damp soft cloth with mild soapy water to wipe-clean the product.
- Do not use chemical or abrasive cleaning agents. The finish or the function of the product will be damaged.

CAUTION

- Turn off the product if pets are playing around the detection area of the motion sensor.
- Do not immerse the product in water or any liquid.
- If heavy rainfalls are forecast, move the product indoors.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL:

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

