Lawn Roller 9451

Instructions for Use

Please read and retain these instructions for future reference

v003: 20/03/17



TECHNICAL DATA:

Drum size 42cm wide x 32cm diameter.

Overall height including handle is 100cm.

Weight 6kg approx. when empty.

PARTS:

6 x self-locking nuts

6 x bolts

6 x washers

2 x metal upright bars

1 x cross bar

1 x handle

1 x drum

ADDITIONAL REQUIREMENTS:

(not supplied) 10mm spanner Water / Sand / Cement



Lawn Roller 9451

Instructions for Use

Please read and retain these instructions for future reference

v003: 20/03/17


ASSEMBLY:

Attach handle and 2 x metal upright bars together using 4 x bolts, washers and nuts (loosely tighten all 4 nuts at this stage).

Attach the handle and upright bars to the drum and attach the cross bar using 2 x bolts, washers and nuts.

Tighten all 6 nuts and bolts securely.

Remove cap on the drum and fill carefully with either wet sand or concrete mix until completely full. Replace cap securely. Water can be used, however we do not recommend this as water may seep from around the bung during use.

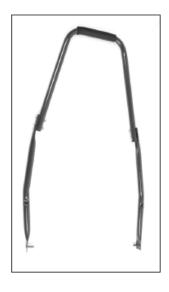





Use a lawn roller when seeding a new lawn or to improve the overall appearance of your lawn. For best results, rolling is advised every time the lawn is cut.

WARNING:

Take care when using on slopes.

CARE:

Please wipe clean after each use.

Please store away in covered protection from adverse weather when not in use.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.