Please read and retain these instructions for future reference

v004: 20/06/18

# This product is only suitable for well insulated spaces or occasional use.

Floor standing

Power Details: 230V A.C.


50 Hz 600 W



PARTS: 1x\_Radiator 2x Feet

## **INSTALLATION – FREE FLOOR STANDING ONLY**

- Place base of radiator into the grooves on the feet, ensuring the feet are evenly spaced.
- Always ensure that the radiator is stood on a firm, level base near to, but not directly beneath, a suitable fixed socket outlet.
- Unwind the mains lead fully before plugging in the radiator. DO NOT pull the radiator along by the mains lead.

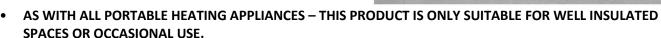

# **OPERATION:**

- Connect the radiator to the mains.
- Set the temperature knob to the highest setting. Press the ON/OFF button to the ON position ('I'). The red LED will illuminate when the radiator is on.
- When the desired room temperature is reached, turn the temperature knob anti-clockwise until it clicks. The radiator will then maintain this temperature.

#### **WARNING:**

- FOR USE AS FREE STANDING PORTABLE HEATER. NOT DESIGNED FOR WALL MOUNTING
- BEFORE USE, CHECK THE MAINS VOLTAGE ON THE APPLIANCE CORRESPONDS TO THE MAINS VOLTAGE OF YOUR HOME.
- CHECK ALL PARTS, INCLUDING THE POWER CABLE, FOR DAMAGE BEFORE USE.
- DO NOT USE IF DAMAGED IN ANY WAY.
- THIS HEATER IS FILLED WITH A SPECIAL OIL. DO NOT USE IF OIL LEAK OCCURS.
- ALWAYS UNPLUG THE HEATER AND ALLOW TO COOL BEFORE HANDLING.
- DO NOT ALLOW CHILDREN TO PLAY CLOSE TO THE RADIATOR OR TO OPERATE THE RADIATOR.
- DO NOT INSTALL THE HEATER BENEATH A MAINS POWER SOCKET.
- SOME PARTS OF THE RADIATOR BECOME VERY HOT AND MAY CAUSE BURNS, TAKE CARE AROUND THESE PARTS.
- DO NOT TOUCH THE RADIATOR DIRECTLY WHILE IT IS IN USE. KEEP THE POWER CORD AWAY FROM HOT PARTS OF THE RADIATOR.
- NOT FOR USE IN BATHROOMS, LAUNDRY ROOMS, POOLS OR OTHER AREAS THAT MAY GET DAMP.



Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400\* Fax: 01279 756 595 www.coopersofstortford.co.uk



Please read and retain these instructions for future reference

v004: 20/06/18

- DO NOT PLACE FLAMMABLE MATERIALS ON OR AROUND THE RADIATOR.
- THE RADIATOR MUST ONLY BE USED IN AN UPRIGHT POSITION.
- DO NOT INSERT ANYTHING INTO OR BLOCK THE VENTILATION HOLES.
- DO NOT PLACE ANYTHING OVER THE RADIATOR AS THIS MAY CAUSE IT TO OVERHEAT.
- THIS APPLIANCE SHOULD ONLY BE USED BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, PROVIDING THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
- THE APPLIANCE IS NOT INTENDED TO BE OPERATED BY MEANS OF AN EXTERNAL TIMER OR SEPARATE REMOTE-CONTROL SYSTEM.

# **HEATING TECHNICAL DETAIL:**

Other control options:)  Contact Details: COOPERS OF STORTFORD, 11 BRIDGE STREET, BISHOP'S STORTFORD			None
erectionic room, temperature control place we	Jen emile.		
electronic room temperature control plus week timer			No
electronic room temperature control plus day timer			No
with electronic room temperature control			No
with mechanic thermostat room temperature control			Yes
Two or more manual stages, no room temperature control			No
single stage heat output and no room temperature control			No
Type of heat output/room temperature con	trol		
Item			Unit
in standby mode	elSB	N/A	kW
At minimum heat output	elmin	N/A	kW
At nominal heat output	elmax	N/A	kW
Auxiliary electricity consumption			
Maximum continuous heat output	Pmax,c	0.61	kW
Minimum heat output (indicative)	Pmin	0	kW
Nominal heat output	Pnom	0.61	kW
Heat output			
Item	Symbol	Value	Unit

### **PLUG WIRING (UK & IRELAND)**

This appliance is fitted with a moulded BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 13-amps should be used.

If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard.

The cable



# Instructions for Use


Please read and retain these instructions for future reference

v004: 20/06/18

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is earthed; the wires in the cord set are colour coded in the following way:

BLUE NEUTRAL
BROWN LIVE
GREEN & YELLOW EARTH

The diagram shows the key features of a correctly wired three-pin mains plug.

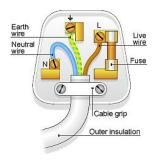

#### **CLEANING**

- Always unplug from the mains and allow the radiator to cool before cleaning.
- Wipe away dust with a soft, dry cloth or using a vacuum cleaner or hairdryer to remove dust from hard to reach parts.
- Wipe the surface of the radiator clean with a soft damp cloth moistened in warm water.
- Dry with a soft cloth after cleaning.
- Do not use any abrasive scourers or cleaning agents.
- In the case of oil leaking from the radiator, avoid contact with skin and eyes. In case of contact with eyes, rinse immediately with plenty of water and seek medical advice. Wear suitable Personal Protective Equipment when dealing with spillages to minimise skin contact and prevent inhalation. Cover the spill area with dry sand and transfer to a secure container for disposal in accordance to local authority regulations. Wash spill area thoroughly after clean up.

### **DISPOSAL:**

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre and follow the regulations concerning the disposal of oil.



