

All-in-One Cooking Pan 9722

Instructions

Parts



BEFORE USE

- Remove all packaging and protective film.
- Ensure there is nothing between the non-stick pan and the base.
- Clean the non-stick pan using a soft, damp cloth and mild detergent.



Steaming/Slow Cooking

- Please the steaming rack on top of the non-stick pan.
- Add 2L of water to the pan ensuring the water level remains below the rack and replace the lid.
- Turn the knob to the Slow Cook/Steam setting. The LED indicator will illuminate.
- To retain heat & moisture, do not lift the lid during cooking.

Boiling

- Place the food or liquid into the non-stick pan and replace the lid.
- Turn the knob to the boil setting. The LED indicator will illuminate.
- To retain heat and moisture, do not lift the lid during cooking.

Warming

- Place the food or liquid directly into the non-stick pan and replace the lid. Turn the knob to the warm setting. The LED indicator will illuminate.

OPERATION

Deep Frying

- Fill the non-stick pan with oil up to the max. fill line (1inch). Do not fill above the maximum fill line.
- Turn the knob to the Deep Fry setting. The LED indicator will illuminate.
- Place the food in the frying basket and lower the basket into the oil.

Roasting

- Place the food into the non-stick pan.
- Turn the knob to the Roast setting. The LED indicator will illuminate.

Sauté/Grill

- Turn the knob to the Saute/Grill setting. The LED indicator will illuminate.
- Lightly grease the non-stick pan.
- Place food into the non-stick pan.

Cooking method	Temperature (°C)
Warm	80°
Boil	100°
Steam/Slow Cook	130°
Saute/Grill	150°
Roast	170°
Deep Fry	190°

Please read carefully before use and retain for future reference.



WARNING

- Check all parts for damage before use, including the power cable, and do not use if damaged in any way.
- Before connecting the appliance, please check if the voltage indicated on the appliance is in accordance with the mains voltage in your home.
- Always unplug from the mains when not in use, before adding or removing parts and before cleaning. Remove by grasping the plug - do not pull on the power cord.
- Do not allow the power cord to hang over the edge of the work surface or to contact hot surfaces. Ensure that children are closely supervised at all times to ensure they do not play with the appliance.
- Do not attempt to repair the machine yourself. No user serviceable parts.
- During cooking, the LED indicator will only be illuminated when the oven is heating up to reach or maintain the desired temperature. Always ensure you turn the knob to the OFF position after use.
- Always ensure food is thoroughly cooked before serving.
- Do not use sharp or metal utensils.
- Do not add water to hot oil.
- Do not attempt to empty oil from the non-stick pan until it has cooled.
- This appliance should only be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, providing they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- For indoor, domestic use only.

CLEANING

- Always disconnect from the power supply before and allow to cool fully before cleaning.
- Remove the lid and cooking accessories.
- Wash lid and accessories in warm, soapy water and dry thoroughly.
- Always empty any oil from the non-stick pan before cleaning.
- Fill the non-stick pan with warm water and mild detergent.
- Do not use abrasive cleaning pads or agents.
- Do not immerse the base in water or any other liquid.
- Wipe the base clean with a soft, damp cloth.
- Not dishwasher safe.

DISPOSAL

- Dispose of all paper, cartons and plastic in accordance with your local recycling regulations. At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.

DECLARATION OF CONFORMITY

We The Enterprise Department Ltd.

Of 11 Bridge Street, Bishop's Stortford, Hertfordshire, UK. CM23 2JU

in accordance with the following Directive(s):

Electromagnetic Compatibility 2004/108/EC

EN 55014-1:2006+A1:2009+A2:2011

EN 55014-2:1997+A1:2001+A2:2008

EN 61000-3-2:2006+A1:2009+A2:2009

EN 61000-3-3:2008

Low Voltage Directive 2006/95/EC

EN 60335-2-9:2003+A1+A2+A12+A13

EN60335-2-13:2003+A1:2004+A2:2008

EN60335-2-15:2002+A1:2005+A2:2008

EN60335-1:2002+A11+A1+A12+A2+A13+A14

EN6233:2008

ZEK 01.4-08

All-In-One Cooking Pan

Model number: 9722 (CP-01)

hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced specifications. The unit complies with all applicable Essential Requirements of the Directives.

Mr. Stuart Fowler

Imports Director

November 2013

Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU

Tel: 0844 482 4400 Fax: 01279 756595

www.coopersofstortford.co.uk

