



1

1. Mower cassette
x1



2

2. Lower handle
section x1



3

3. Upper handle
section x2



4

4. Side bar x2



5

5. Grass bag x1



 
6

6. Bolt A x7 (short
x2, long x5)



7

7. Bolt B (short x1
and long x1)



8

8. Strap x1 (pre-
fitted to grass
bag)



9

9. Handle spacer



Victor Garden Tools


Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756595
www.coopersofstortford.co.uk

Coopers


OF STORTFORD

ASSEMBLY

1. Attach the lower handle section (2) to the mower cassette (1) by aligning the sprung bars with the lugs on the mower cassette.

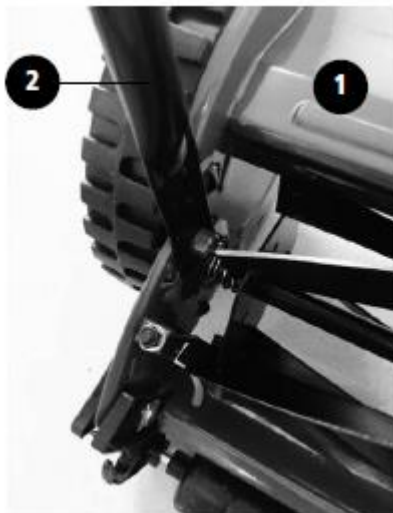


4. Attach the grass bag (5) to the hook at the bottom of the mower

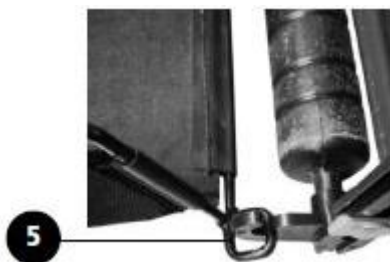


ADJUSTING THE CUTTING HEIGHT

- Loosen the nuts on the roller fixing but do not remove them.
- Adjust the cutting height by moving the roller up or down and then securing in position by re-tightening the nuts once the desired cutting height is reached. The cutting height ranges from 10mm (minimum) to 47mm (maximum)

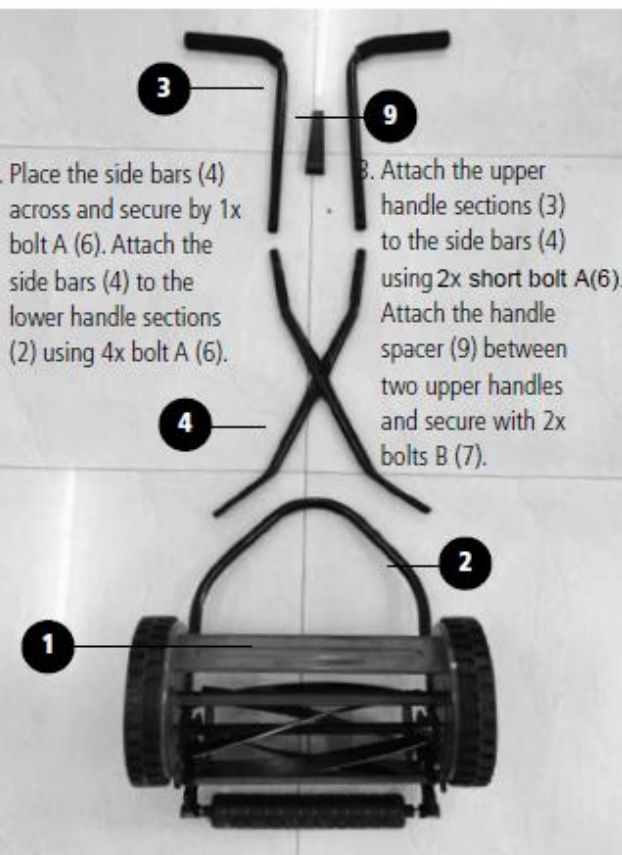

5. Clip the strap (8) to the hook at the rear of the grass bag. Loop the strap over the crossbar on the lower handle section and push through.

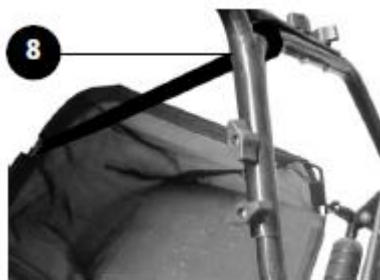

- Never cut wet grass.
- Always cut with the handle facing towards you.
- Always grasp the handle with both hands.
- Step forwards while pressing forwards and downwards so that the lawn mower maintains maximum traction with the ground.
- The greater the pushing force, the greater the mower blade rotation speed.
- Cut in straight lines, ensuring there is an overlap of 60-80mm on each line.
- When cutting long grass, do two cuts. The first cut should have a cutting height of approx. 50mm before reducing the cutting height to the desired level 9 for the second cut.

WARNING

- Wear suitable hand and eye protection during use.
- Keep bystanders, pets and children away from the work area during use.
- Check the mower for damage before use.
- Check the work area for any obstacles or foreign objects, such as stones and remove them before use.
- Wear suitable non-slip footwear.
- Ensure the work area is well-lit.
- Do not wear loose clothing or jewellery and keep long hair tied back during use.
- Always walk when mowing, never run.
- Do not use under the influence of alcohol or drugs, including medication that may cause drowsiness.
- Periodically check that all knobs are secure and tighten if necessary.

CLEANING & MAINTENANCE

- Before commencing any cleaning or maintenance, always block the blade to ensure it can move neither forward nor back.
- Do not insert your hands or any other body part into the blade housing.
- Clean the mower with a brush or soft cloth.
- Periodically lubricate the blades and check that all fixings are secure and tighten if necessary.
- Keep out of reach of children.

DISPOSAL

Dispose of all paper, cartons and plastic in accordance with your local recycling regulations. At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.

Victor Garden Tools

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756595
www.coopersofstortford.co.uk

Coopers

OF STORTFORD