

# 24V Rechargeable Lawn Mower Battery 9806 BATTERY Instructions

## WARNING

This product includes lead acid (Pb) batteries; do not incinerate batteries or expose to high temperatures, as they may explode.

Leaks from battery cells can occur under extreme conditions. If the liquid gets on the skin wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention.

 
### BATTERY CHARGING AND RECHARGING

Before first use charge the battery for 24 hours.

**Warning: if the battery is damaged in any way do not attempt to charge it, and replace it immediately.**

The battery does not have to be removed from the mower to be charged.

To charge the battery in the mower, plug the charger into the battery socket.

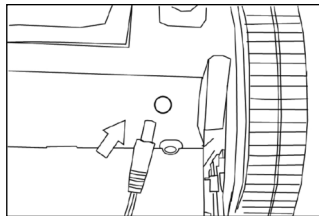


Charging the battery in the mower

### PLUG THE CHARGER ADAPTOR INTO A SUITABLE ELECTRICAL SOCKET

 Once the battery is fully charged remove the charger connector from the battery and unplug the charger adaptor from the mains socket. Do not pull the charger by the cord.

### CHARGING BATTERY OUT OF MOWER

First turn the knob on the battery lid anti-clockwise, then raise the handle and lift battery out of the mower. Place the battery on a dry, flat and non-slip surface, and plug the charger connector into the battery socket. Charge the battery for 24 hours each time. Red LED light indicates that battery is charging, but will NOT turn off once battery is fully charged.

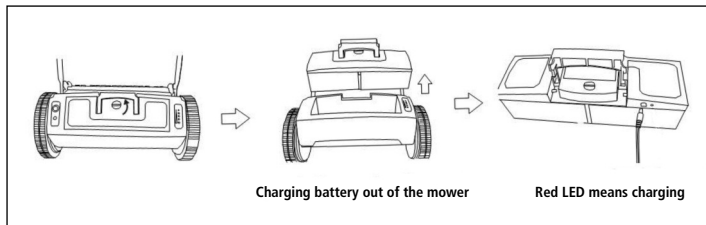


Charging battery out of the mower

Red LED means charging

### CHARGING BATTERY IN MOWER

 Lower it into the cavity on the top of the unit in the correct orientation. Ensure the handle is pressed down and then turn the knob on the lid clockwise. If the battery does not fit correctly, remove it and check there are no obstructions. Ensure that the machine is SWITCHED OFF when recharging battery. As a safety feature the battery will NOT recharge if the machine is switched on. The Red LED light on the Main unit indicates that the battery is charging, but will NOT turn off once battery is fully charged.

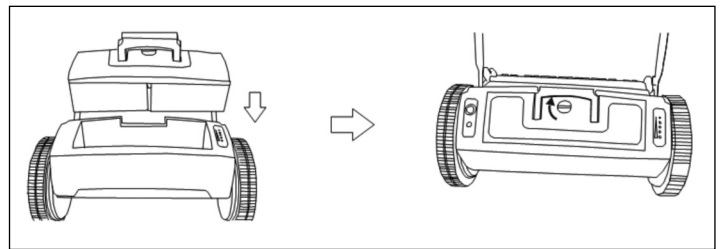

### CHARGING INSTRUCTIONS:

There are 5 LED on the main unit, the first three LEDs show the power capacity of the mower during operation. When the first 3 LEDs turn off and the fourth LED becomes fainter, you are being reminded that the mower needs to be charged. The last LED is the charging indicator.

### NOTES:

- To keep the battery in prime condition it is best to charge the battery after each use, and every 3 months if stored without use. After each use charge for 24 hours to ensure the battery is fully charged.

**IMPORTANT: CHARGE THE BATTERY AFTER EACH USE. NEVER STORE THE UNIT WITH A FLAT BATTERY.**

- The battery will not be damaged if it is charged for longer than 24 hours, but it is advisable not to leave it on for more than 48 hours, since this might shorten the battery life.
- Ensure the battery is fitted and locked correctly before mowing, or else, this product will not work and be damaged.
- Only use the charger supplied with this product. Do not attempt to charge this product with any other charger nor attempt to charge any product with this charger, as it can cause damage and will invalidate your guarantee.

Please read carefully before use and retain for future reference.

# Victor Garden Tools

# Victor Garden Tools

## TROUBLESHOOTING

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
<b>Mower fails to start</b>	1. Battery flat 2. Battery is not fitted correctly	1. Recharge battery 2. Check the battery is correctly fitted and fully pushed down
<b>Low cutting time</b>	1. Battery flat	1. Recharge battery for 24 hours
<b>Battery flat and will not recharge</b>	1. Faulty charger  2. Battery stored for long time without being charged	1. If the charger does not get warm then charger has fault. If charger gets warm then fault with battery. Call customer service helpline  2. Replacement battery

## CLEANING & MAINTENANCE

**CAUTION:** Remove the battery before carrying out any cleaning or maintenance. This will prevent you accidentally turning on the unit whilst cleaning it.

## STORAGE

Before storing, remove the battery. Turn the unit on its side and clean the blade area. If grass cuttings are compacted in the blade area, remove with a wooden or plastic implement.

Store the unit in a dry place, out of the reach of children.

Always charge the battery after use, and every three months if stored for a long period of time.

## TECHNICAL DATA AND FEATURES

Rechargeable Lead-Acid Battery, 24V, 7AH

Charge Time: 24 hours

Working Time: 45 minutes after full charge

Features Battery Display, Automatic Power Off for Lower Battery

## BATTERY DISPOSAL

The product contains a Lead acid battery which should not be disposed of with general household waste. At the end of the product's or battery's life the battery pack should be removed from the product and be disposed of properly at a recycling facility.

For safety we do not recommend to dis-assemble and remove the battery from the battery pack, and this should only be carried out by a professional or technically competent person. It is recommended to dispose of the complete battery pack at a recognised recycling facility.

Head Office, 11 Bridge Street,  
Bishop's Stortford CM23 2JU  
Tel: 0844 482 4400  
Fax: 01279 756595  
www.coopersofstortford.co.uk

**Coopers**  
OF STORTFORD