

**Operation**

1. Remove the bottom cover (rotating anticlockwise) and fit 3xD batteries (not supplied) according to the polarity guide. Replace the cover to secure the batteries.
2. Turn the dimmer switch clockwise to turn on and increase the level of illumination, turn the dimmer switch fully anticlockwise to turn off.

**Caution**

- This is not a toy: keep out of the reach of children.
- The LED bulbs are not replaceable; do not attempt to open the lantern housing.
- Do not leave the lantern exposed to bad weather conditions or outdoors for prolonged periods.
- The lantern has a dummy socket on it – this is part of the mold and is not functional.

**Batteries**

- Rotate the battery cover (base) anticlockwise, remove the base cover and insert 3 x D batteries (alkaline are recommended) ensuring that the plus (+) and minus (-) poles are correctly observed. Failure to properly align the battery polarity can cause personal injury and/or damage to the lantern.
- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

**DISPOSAL**

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.

**Storage**

- Store the unit in a cool, dry place.

**Cleaning**

- Using a brush, remove any residual matter from the lantern.
- Use a damp cloth to clean the lantern, dry with a soft cloth.
- Do not use water or other liquids or solvents to clean the lantern.