

## Four Ways Pan Instruction

### Care / Cleaning Instructions

1. Allow the pot to cool down before wash.
2. The pot has a non-stick coating, use soft cleaning sponge to clean pot with soapy water. Use cloth to wipe and dry.
3. Not recommended for use in dishwasher.

Caution: The pot has a non-stick coating, avoid the below actions as they will damage the coating and cause permanently damage to the pot.

Avoid using sharp objects to stir food.  
Never cut food inside the pot.

Do not use scrubbing pads or steel wire sponge to wipe or clean the pot.

