Please read and retain these instructions for future reference

v001: 19/08/21



Dimensions

Height: 3cm Width: 10cm Length: 11cm

Weight: 73g (without

batteries)


Size of area it will protect—3 x 3m

All in One Pest Controller with 3 Frequency Settings

REPELS FLIES, FLEAS, LARGER INSECTS LIKE SPIDERS ALL THE WAY UP TO MICE AND RATS A great all-in-one pest repeller.

Compact, so fits anywhere in the house

Battery installation:

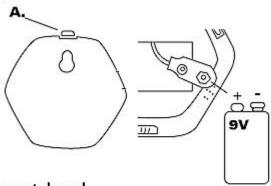

Press down tab and remove cover (A).

Install 1 x9V type battery (not included) observing correct polarity.



Ensure red and black wires run under the connector as shown above.

Replace battery cover.

Note: Different brand batteries could have slightly different dimension size. Please check when fitting to ensure wires are not damaged when installing, removing and replacing spent batteries.

Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400* Fax: 01279 756 595 www.coopersofstortford.co.uk



Please read and retain these instructions for future reference

v001: 19/08/21

Operation:

Slide power switch (D) to desired setting: R for roaches, high frequency 38-65KHz, red light.


Y for mosquitoes, medium frequency 30-38KHz, yellow light.


G for mice, low frequency 23-30KHz, green light.

Note: sound cycle 5 seconds ON and 20 seconds OFF.

LED (E) lights during the ON cycle so you know it is working.

Place unit where desired, laying on its base or hang using fixings provided.

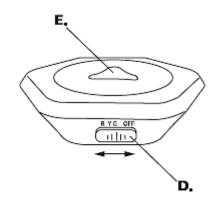

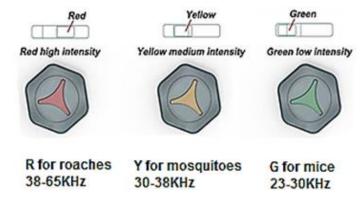

CARE AND CLEANING INSTRUCTIONS:

- Always switch off and remove batteries when not in use.
- Do NOT immerse in water.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Store the item in a cool, dry place.
- Wipe with a clean dry cloth.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Keep batteries away from children and pets.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

 


Please read and retain these instructions for future reference

v001: 19/08/21

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.

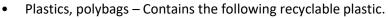



Code & Symbol	LDPE	OTHER
Type of Plastic	(Packing Bag)	(Product)
	Low Density Polyethylene	ABS
Commonly used for	Shopping bags, bread bags, squeezy	CD's, crisp packets, various
	bottles, stretch/pallet wrap, bubble	flexible packaging, baby
	wrap, multi-pack can holders	bottles, sunglass lenses
Notes	Usually recyclable supermarket deposit	
	points. Check other plastic films as any	Not often or widely recycled
	non-polythene film e.g. cling film, crisp	
	packets film lids	

• At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

