



### All in One Pest Controller with 3 Frequency Settings

REPELS FLIES, FLEAS, LARGER INSECTS LIKE SPIDERS ALL THE WAY UP TO MICE AND RATS  
A great all-in-one pest repeller.  
Compact, so fits anywhere in the house

#### Dimensions:


- Height: 3cm
- Width: 10cm
- Length: 11cm
- Weight: 73g (without batteries)

Materials: Plastic ABS outer

Size of area it will protect– 3 x 3m

#### Battery Installation:

Press down tab and remove cover (A).  
Install 1 x 9V type battery (not included).  
Replace battery cover.


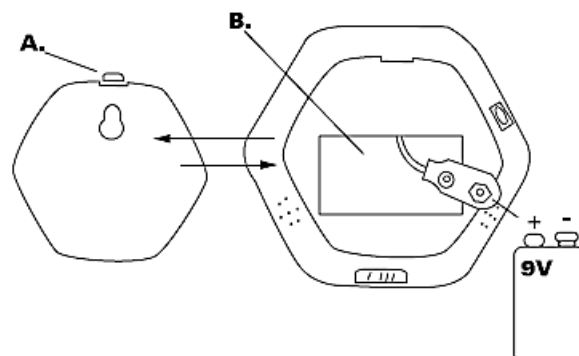


**Operation:**

Slide power switch (D) to desired setting:  
 R for roaches, high frequency 38-65KHz, red light.  
 Y for mosquitoes, medium frequency 30-38KHz, yellow light.  
 G for mice, low frequency 23-30KHz, green light.

Note: sound cycle 5 seconds ON and 20 seconds OFF.  
 LED (E) lights during the ON cycle so you know it is working.

Place unit where desired, laying on its base or hang using fixings provided.

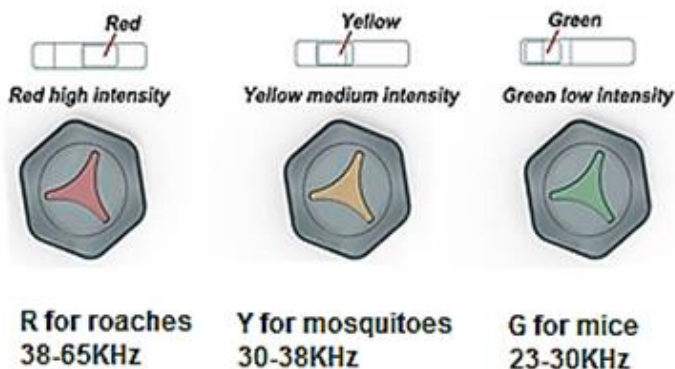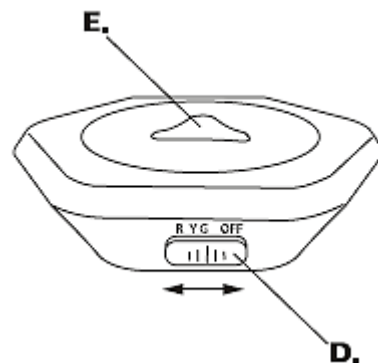

**CARE AND CLEANING INSTRUCTIONS:**

- Always switch off and remove batteries when not in use.
- Do NOT immerse in water.
- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Store the item in a cool, dry place.
- Wipe with a clean dry cloth.



**BATTERIES**

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Keep batteries away from children and pets.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer’s safety, usage, and disposal instructions.

**DISPOSAL**

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 LDPE	 OTHER
Type of Plastic	(Packing Bag) Low Density Polyethylene	(Product) ABS
Commonly used for	Shopping bags, bread bags, squeezey bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids	Not often or widely recycled

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.

