




Dimensions:


117cm (H) x148cm (W) x88cm (D)

Parts

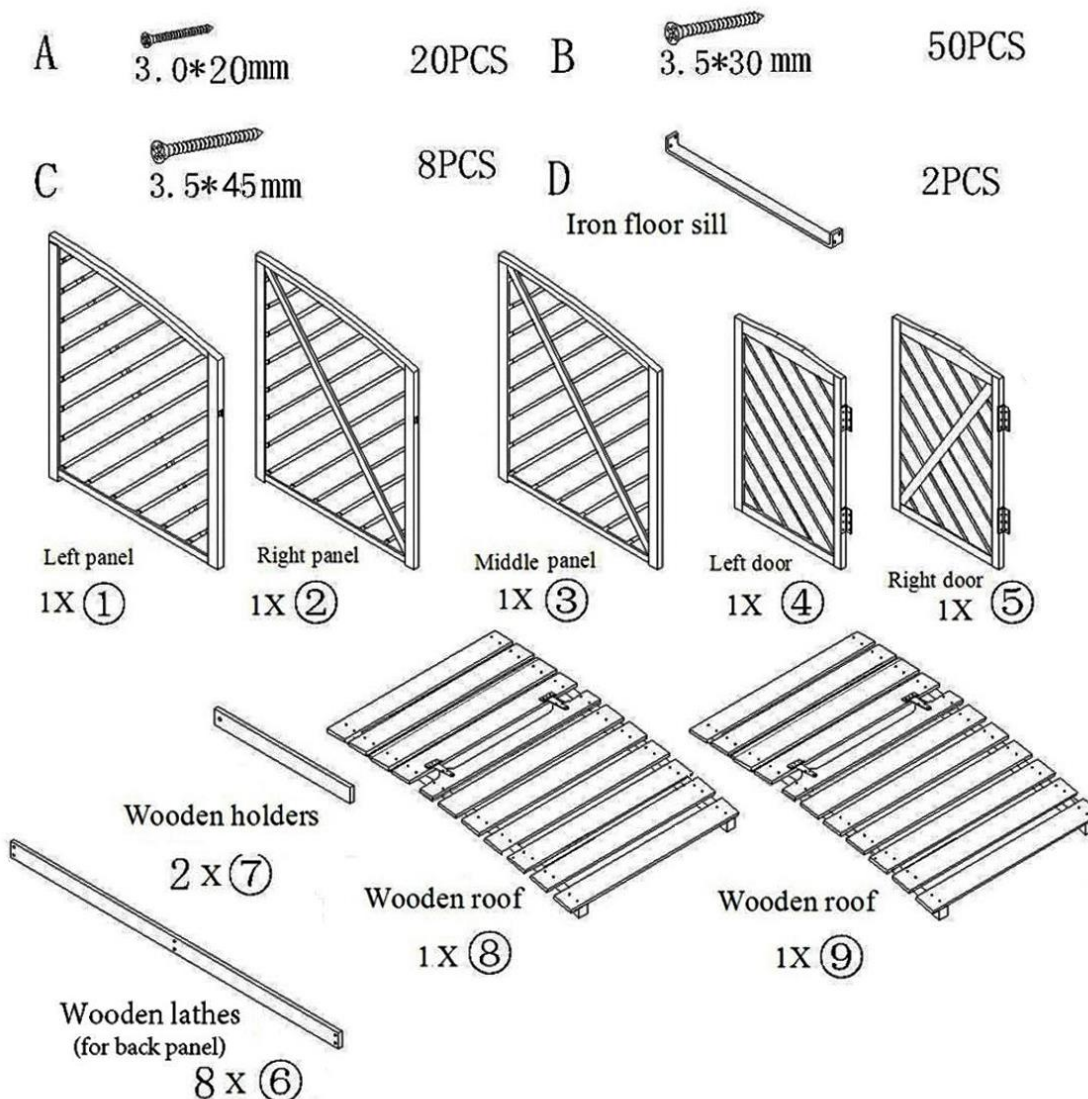


Assembly of this item requires basic tools and is best undertaken by 2 persons.


ASSEMBLY INSTRUCTIONS:

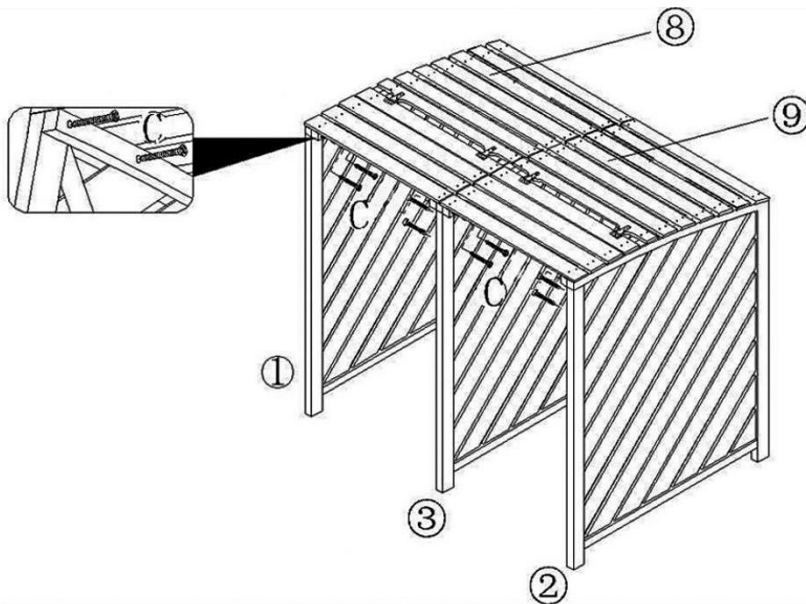


Fix the 2 roof panels (8 and 9) to the left (1), middle (3) and right panel (2) using 8x screws C.

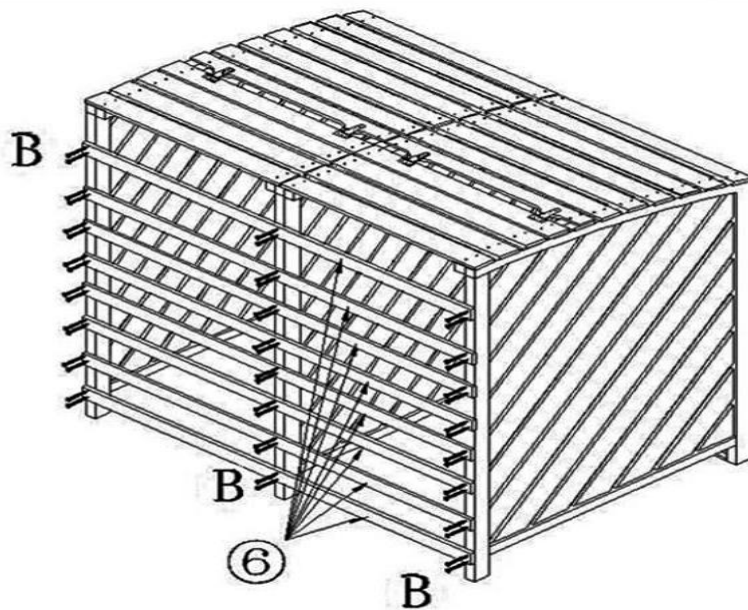

Where indicated by arrows fit 8x wooden lathes (6) using 48x screws B.

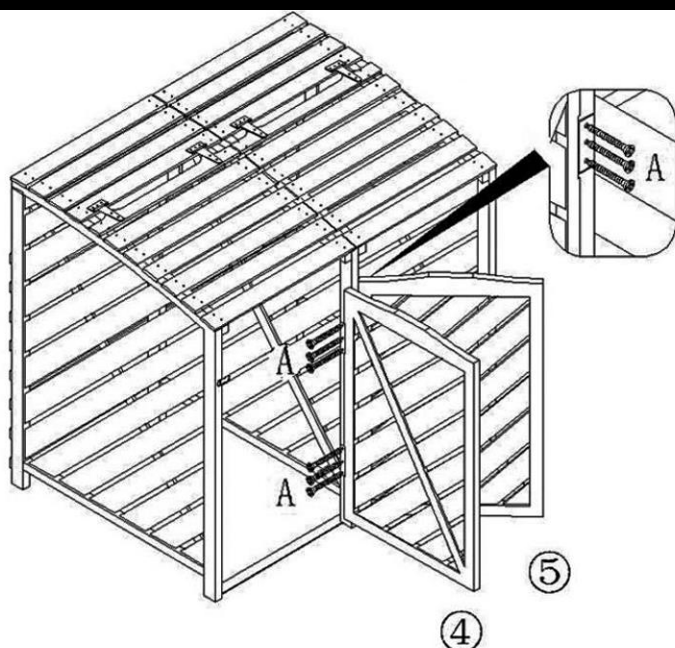

Fit left door (4) and right door (5) to the front of the unit using 12x screws A where shown.

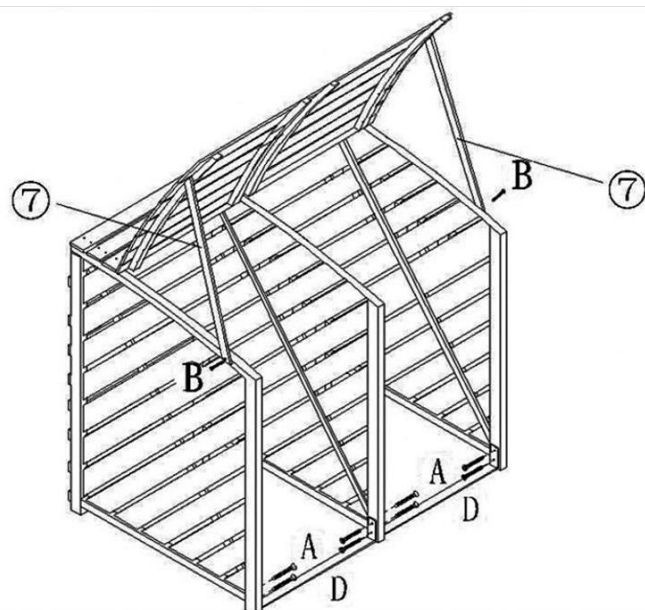

Fit the 2 wooden holders (7) using 2x screws B.

Fit the 2 iron sills (D) to the left (1), middle (3) and right panel (2) using 8x screws A.

Warnings/Cautions:

- Place on a level surface.

CLEANING INSTRUCTIONS:

- Use a soft brush or cloth.
- We recommend applying a coat of varnish or paint every 2- 3 months to preserve the wooden finish.

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan, please dispose of it at an authorised household waste recycling centre.