

White Cob Sensor Light – Item Code 11417
Black Sensor Light – Item Code 11418



Rotates 360°

Pivots 180°

INSTRUCTIONS FOR USE:

Battery installation

Using a cross head screwdriver (not supplied), unscrew the screw from the battery compartment and remove the cover. Insert 4x AA batteries (not supplied) according to the polarity guide inside the battery compartment and replace the battery cover and screw.

Battery compartment



Determine the exact location where you want to install the light

There are two different installation options. It is recommended to use the hardware installation for longer and security use wherever possible.

Hardware installation

Using a cross head screwdriver remove the screw from base of the item. Hold the base against the wall and mark the centre of each hole using a pencil/marker. Make sure the narrow ends of the holes are facing upwards. Replace the base and screw.

Drill each hole using a 2mm (1/16in) drill bit approximately 1.9cm deep.

If you hit a wall stud, drill the same hole again using a 6mm (1/4in) drill bit and insert a wall anchor (provided) into each hole. Tap in each wall anchor lightly with a hammer until flush with the wall surface.

Thread a screw (provided) into each hole or wall anchor leaving 3mm of the screw unthreaded to secure the light fixture.

Matching the holes on the base of the light fixture with the screw heads press the light fixture against the screw heads and slide downward to secure the light fixture.

Adhesive strip installation

Choose a smooth surface for best adhesion and wipe clean.

Peel the protective cover from the adhesive strip and apply to the base of the light.

Peel the protective cover from the other side of the adhesive strip and press the light fixture firmly against the smooth surface.

Use

Slide the ON/OFF switch on the back of the unit to the ON position.

The swivel base rotates 360° and the lamp angle adjusts front and back to provide light where desired.

The motion sensor (located below the LED lights) will detect motion within a 90° angle (maximum distance: 5m).

When motion is detected the LED lights will turn on. The LED lights will automatically shut off after 25 seconds with a single detection.

Your LED Motion light also contains a light sensor, so the LEDs will only come on in low light conditions.

CAUTION:

Always observe the correct polarity when inserting batteries.

Do not mix old and new batteries.

When performance becomes reduced, recharge or replace the batteries.

BATTERIES

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Keep batteries away from children and pets.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan, please dispose of it at an authorised household waste recycling centre.

