

Please read and retain these instructions for future reference

v004:05/07/21

WARNING: Suitable for outdoor glass cleaning (or without sprayer for inside windows, mirrors and other surfaces).

Attaches to any standard garden hose

Sprays up to 27-feet

Net Weight: 80g

Recommended for persons over 18 years of age. Keep away from children.


Before you begin ensure all windows are shut.

Directions:

Fill sprayer bottle to the top of the upper three ridge lines on the bottle with warm to hot tap water. Do not use boiling water.

Pour in one 80g sachet Window Shine powder while stirring until completely dissolved.

Attach spray bottle to a garden hose.

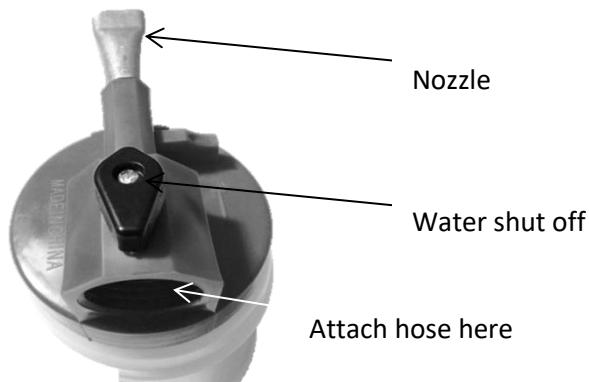

Soap Applications:

Wet window (or other surface) by spraying clear water from bottom up.

Apply Window Shine by placing fingertip over vent hole in finger rest on the right side of the sprayer cap (indicated by an arrow) (see Fig A).

Spray Window Shine from bottom up, soaping surface well. Soak no more than 30 seconds then rinse.

Do not let suds dry.

Rinsing

Rinsing begins when you remove your fingertip from the vent hole (see Fig B).

Rinse from the top down until suds are gone. Don't over rinse.

Hold sprayer upright, do not shake while rinsing. If suds re-appear while rinsing, remove bottle with Window Shine from cap and continue rinsing with just water.

In areas with extra hard water use a chamois or squeegee for a perfect job.

Please read and retain these instructions for future reference

v004:05/07/21

Apply soap: cover vent hole (Fig A)



Rinse: remove fingertip from vent hole (Fig B)



Proper rinsing is critical. Rinsing too little may leave soap residue. Rinsing too much may remove the Window Shine and cause spotting.

Adjustable aluminium nozzle:

To wash windows, walks, cladding or drives, use the nozzle in a horizontal position. For cars etc. turn to vertical position.

Water shut off: twist black knob on top to the left. Please ensure this is turned the correct way.

Helpful hints:

Remove aluminium nozzle for 2nd floor windows & cladding.

For cars with road film, apply Window Shine and wipe soapy surface with a sponge, then rinse off with just water and wipe dry.

For built-up dirt a sponge on the soapy surface may be necessary.

Important for best results:

Use out of direct sunlight. Rinse before suds start to dry to prevent leaving a soap scum on window. DO NOT use on freshly sealed or newly painted areas.

Caution:



Eye & skin irritant:

Contains Trisodium Phosphate (40%), Sodium Dodecylbenzenesulfate (11%).

Avoid contact with eyes and prolonged contact with skin. In case of contact, flush with water for 15 minutes.

Remove contact lenses if present and continue rinsing with water.

Harmful if swallowed. Do not ingest. If swallowed give plenty of water. Do not induce vomiting.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595

www.coopersofstortford.co.uk

Coopers
OF STORTFORD

Please read and retain these instructions for future reference

v004:05/07/21

Do not dispose in waste drains, ponds, waterways or household waste.

In the event of any reaction, seek medical assistance immediately. Keep out of reach of children & pets.

Warning:

Recommended for persons over 18 years of age. Keep away from children.

To avoid electrical shock do not spray water near electrical lines. Walkways and steps may become slippery when soapy. Use with caution.

Store in a well ventilated area. Keep container tightly closed.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.
- Plastics, polybags – Contains the following recyclable plastic.



Code & Symbol	 LDPE (washing powder bag)
Type of Plastic	Low Density Polyethylene
Commonly used for	Shopping bags, bread bags, squeezy bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders
Notes	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids

- At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.