



Technical Data:

Voltage: 6V DC - Operated with 4x AA batteries (not included).
Power: 0.5W
Weight: 2.5kg
Dimensions: Top 347mm/Bottom: 215mm/Height: 217mm approx.
Can be used with any BBQ charcoal (not included).

SAFETY INFORMATION:

FOR OUTDOOR USE.

THIS ITEM IS NOT FOR INDOOR USE.

KEEP THE GRILL AWAY FROM CHILDREN AND ANIMALS!

Important



Risk of burns!
Risk of suffocation (in case of grilling in an enclosed space).
Do not use this grill in an unventilated space.
Do not use spirits or fuel to ignite the grill.
Keep grill away from children and pets!
Use only safety alcoholic gel to ignite the grill!

Caution



Let the grill cool off entirely before cleaning.
Never pour water into the charcoal box in order to extinguish the charcoal.


First Use

Make sure the grill is at a safe distance from children. Place on a level surface.



In order to avoid a fire, ensure the charcoal is completely burned out.
Never pour water into the charcoal container to extinguish charcoal.
Use barbecue tongs.
Never leave the hot grill unattended.

Parts

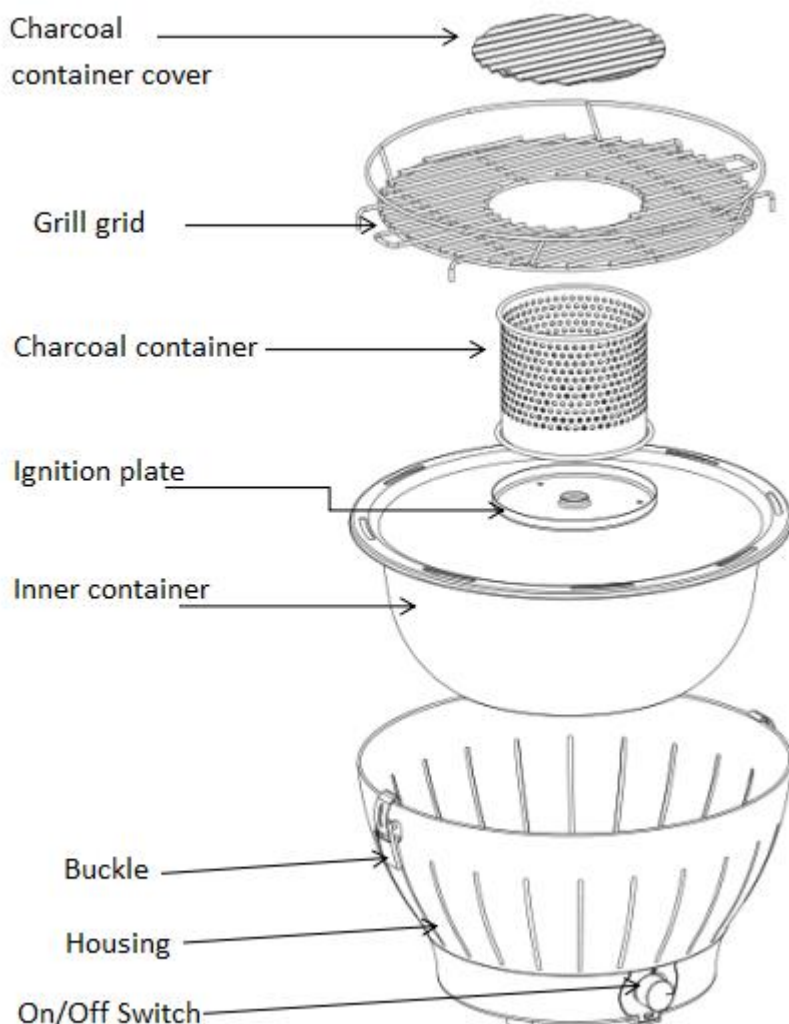

List of components

- | | | |
|-----------------------------|--------------------|----------------------------|
| 1. Charcoal container cover | 4. Ignition plate | 7. Housing |
| 2. Grill grid | 5. Inner container | 8. On/Off Switch |
| 3. Charcoal container | 6. Buckle | 9. Carrier bag (not shown) |

ASSEMBLY INSTRUCTIONS / INSTRUCTIONS FOR USE:

1. Open the battery case at the bottom of the housing and insert 4x AA batteries. Close the battery case.
2. Place the inner container into the housing.
3. Fill the charcoal container completely with charcoal. Put cover on the grill grid and charcoal container.
4. Put a circular layer of alcoholic lighter gel on the ignition plate. Place the ignition plate into the inner container.

5. Turn the On/Off switch clockwise to maximum position. Turn on ventilation to quench the flame.
6. Light alcoholic gel until it burns.
7. Put cover on the filled charcoal container and place container on ignition plate.
8. Put the grill grid on top of the inner bowl. The four metal legs of the grill grid slot into the inner bowl.
9. There are two metal loops at the side of the grill grid. These need to be aligned with the buckle. Hook buckles into the metal loop on both sides and pull down to lock the BBQ.
10. The grill is ready for use after approx. 3-4 minutes.

The On/Off switch is used for heat regulation. The fan stays on during the entire BBQ process.



DO NOT TOUCH THE CHARCOAL BOX AS IT IS HOT.



AFTER USE, GRILL GRID NEEDS TO BE CLEANED CAREFULLY.

CARE AND CLEANING INSTRUCTIONS:

- The BBQ must cool off completely before cleaning.
- Do NOT use water to extinguish or cool off the hot BBQ.
- Clean grill grid, inner container and other dirty parts after each use. Grill grid and inner bowl can be hand-washed.
- Clean outer bowl only with wet cloth or brush.
- Do not use acidic, solvent or other flammable liquids.
- Clean charcoal container with a dry brush. Do not use water.

BATTERIES:

- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Install batteries in accordance with its polarity symbols.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Keep batteries away from children and pets.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

Proper disposal of charcoal :

- Dispose of charcoal in proper non-combustible or metal containers. Do not dispose in plastic or inflammable containers.

DISPOSAL:

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.

