
Please read and retain these instructions for future reference

v003: 01/06/20





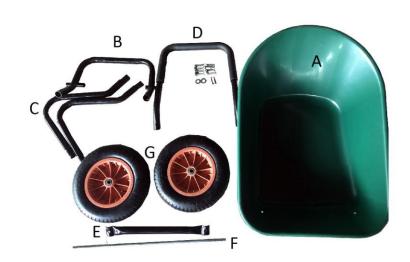

BOLT LIST:

8 x 50mm Bolts

8 x nut to suit 50mm bolts

8x small washer

8x split washer

2x large washer

2x split pins

PARTS LILST:

(A)Tray x 1

(C)Legs x2

(E) Leg brace x1

(F) Axle x1

(G) Wheels x2

- (B) Axle Bracket x1
- (D) Handle x1

ASSEMBLY INSTRUCTIONS:

Caution: During assembly, put all bolts in lightly. Tighten all bolts firmly at the end.



v003: 01/06/20

Please read and retain these instructions for future reference



Step 1: Place tray (A) upside down.



Step 2: Position the axle bracket (B) on the tray. Ensure the tray bolts are aligned through the bolt holes of the axle bracket. Fasten with bolts.



Step 3 Connect the legs (C) and the axle bracket (B). Fasten with bolts.



Step 4 Connect handle (D) to the legs (C). Fasten to the tray (A) with bolts.



Step 5 Position the leg brace (E) on the legs (C) and bolt together.



Step 6 Put the axle (F) in the axle bracket (B). Attach the two wheels (G). Fasten the wheels to the axle with the large washer and split pins.

Tighten all bolts.

CARE AND CLEANING INSTRUCTIONS:

- Do NOT use abrasive cleaners or sharp utensils to clean this appliance.
- Wipe with a clean dry cloth.

 
Instructions for Use

Please read and retain these instructions for future reference

v003: 01/06/20

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.





Code & Symbol	Type of Plastic	Commonly used for	Notes
(product)	Polypropylene	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)
LDPE (bag)	Low Density Polyethylene	Shopping bags, bread bags, squeezy bottles, stretch/pallet wrap, bubble wrap, multi-pack can holders	Usually recyclable supermarket deposit points. Check other plastic films as any non-polythene film e.g. cling film, crisp packets film lids

• At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.