Please read and retain these instructions for future reference

v002: 20/05/20



Dimensions:

Height: 120cm

Width (spread out): approx. 65cm

Weight: 713g Cable length: 2m

BEFORE FIRST USE: Remove the protective film from the solar panel.

CHARGING AND OPERATION:

Set switch (located on the back of solar case) to "S (steady on)" or "F (flash)" position. Charge the solar product by placing it under direct sunlight for at least 8 hours.

The light will work automatically. It will charge under direct sunlight during the day time and illuminate at night.

NOTE: In order to test the lights simply cover the solar panel with your hand and the light should turn on automatically.

IMPORTANT:

Install the solar product in an area where it can get direct sunlight.

Leave the switch to "S" or "F" position.


Select an outdoor location away from other light sources at night, such as street lights. It may cause the product not to turn on automatically at night.

Duration of light depends on solar product's level of sunlight exposure, geographical locations, weather conditions and the hours of daylight.

MAINTENANCE AND TROUBLESHOOTING:

Make sure the switch is set to "S" OR "F" position. Keep the solar panel clean.

If solar product does not light up after it has been used for around 8 – 12 months, replace the rechargeable battery as it may be weak or worn out. (Battery 1 pc "AA" 1.2v 800Mah, Ni-MH, Rechargeable– Same equivalent type as recommended must be used).

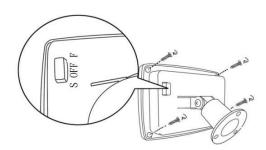

v002: 20/05/20


Please read and retain these instructions for future reference

Battery replacement:

Step1: Unscrew the battery compartment cover by using a Phillips head screwdriver (not included).

Step2: Remove the exhausted battery and install 1 pc new AA rechargeable battery according to the +/-polarity as shown in image. Open the compartment carefully and ensure that the wire inside the battery terminals is not damaged.

Step3: Replace battery compartment cover, screw it back into position and make sure it is properly sealed.

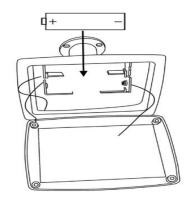

CARE AND CLEANING INSTRUCTIONS:

- Always switch off and remove batteries when not in use.
- Do NOT immerse in water.
- Do NOT use abrasive cleaners or sharp utensils to clean.
- Wipe with a clean dry cloth.

BATTERIES

- Keep batteries away from children and pets.
- Never dispose of batteries in a fire.
- Battery disposal, spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, packaging in accordance with your local recycling regulations.



Plastics, polybags – Contains following recyclable plastic.

Code & Symbol	Type of Plastic	Commonly used for	Notes
253 PP	Polypropylene	Microwaveable food containers, yoghurt pots, butter tubs, disposable plates and cups	Commonly recycled and collected from household recycling bins (packaging tape itself not recyclable but does not interfere with cardboard)

• At the end of the product's lifespan please check with your local council authorised household waste recycling centre for disposal.



Head Office, 11 Bridge Street, Bishop's Stortford CM23 2JU Tel: 0844 482 4400* Fax: 01279 756 595 www.coopersofstortford.co.uk

