



## INSTRUCTIONS FOR USE:

- Connect hose nozzle to the outlet of your hose. Rotate the nozzle to the left to turn on.
- Continue to rotate the nozzle will adjust the stream between fine mist and powerful stream functions.
- Rotate the nozzle completely to the right to turn off.
- Disconnect after use and protect from extreme temperatures.

NOTE: If the screw at the centre of the nozzle becomes loose it may be tightened with a Spanner (not included).

## DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.