


Setting up

Remove all of the contents from the package.

Make sure that you remove the black plastic protective pieces on the top of the ladder main frame before installation.

Installing the top handrail


1. Slide the top handrail onto the top of the ladder main frame.
2. Align the top handrail so that the 4 holes of the top handrail match with the 4 buttons of the ladder main frame.
3. While keeping the buttons of the ladder main frame pressed, continue to slide the top handrail until the buttons click into place.

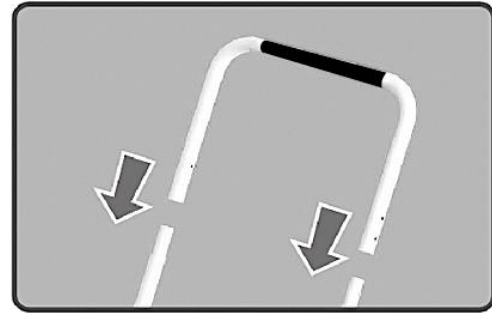

Complies with EN14183

Assembly

- Attach the handrails (D and E) to the ladder using locking nuts, bolts and washers (A, B and C) as shown in the diagram (right).
- Ensure that the long arms of the handrails are at the top and that all nuts and bolts are tightened before use.
- When unfolding the ladder, ensure that the safety locking clip (F) underneath the top step is secured in position.
- To fold down, push down on the black lever to release the safety locking clip (F) before folding.

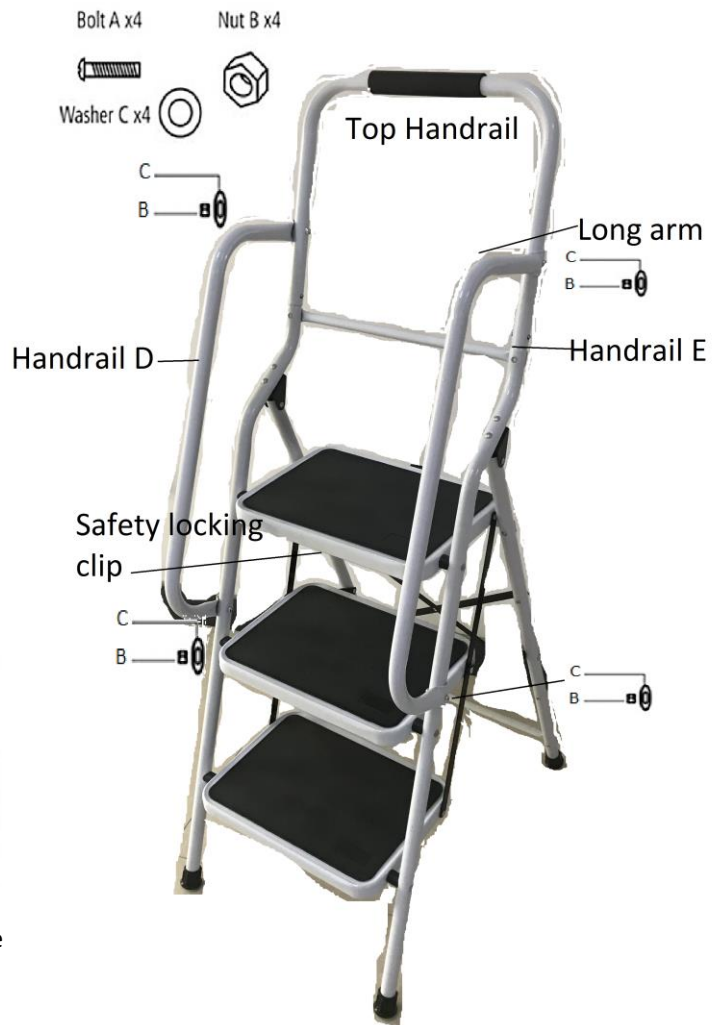

Safety locking clip (F) underneath the top step is secured in position.



To fold down, push down on the black lever to release the safety locking clip (F) before folding.

WARNING

- Do NOT use without the handrails attached.
- Always ensure the ladder is fully unfolded and hinges, footplates and safety locking clip are securely in position before use.
- Do NOT use if damaged in any way.
- Maximum weight load limit: 150kgs.
- Always take care when mounting and dismounting. Always mount and dismount facing towards the ladder.
- Always clear the work area of any hazards or obstacles before use, including overhead.
- Always wear suitable footwear when using the ladder.
- Do NOT lean from the ladder. Always re-site the ladder to a more suitable position.
- Only use on a firm, flat and level surface.
- Periodically check that all nuts and bolts are secure and joints are well lubricated.
- For domestic use only.
- Children should be kept away from the work area. Do NOT allow children to climb on the ladder.

CARE AND CLEANING INSTRUCTIONS:

- Wipe with a clean dry cloth.

DISPOSAL

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.