

UNI-COM

Premium ringing door bell

Model: 62325

 
Operating instructions

Please read **all** of the operating instructions carefully before use and keep in a safe place for future reference.


Quick set up guide

Remove the battery tab from the bell push by gently pulling it in the direction of the arrow.

Remove the battery cover on the back of the door bell. Insert 2 x C batteries, observing the polarity markings.

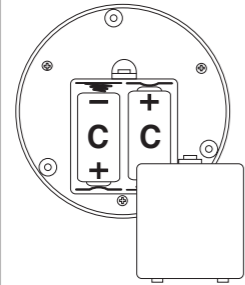

 Within 30 seconds of inserting the batteries press the button on the front of the bell push. The bell will ring.



Note;

The bell push LED will light green to confirm it is transmitting.

Installation

Test the units in their intended locations before you fix them in place.

The operating range will be reduced if the bell push is mounted on metal or double glazed uPVC door frames. Electrical / wi-fi equipment and the thickness or number of walls between the bell push and the chime unit will also reduce the operating range.

The bell push must be mounted the correct way up (as per the arrow inside the back plate).

 
The door bell must be mounted the correct way up (as per the arrow on the back of the unit).

Bell push - adhesive pad

Ensure the surface is clean and flat before applying.


Bell push - screws

Separate the bell push and punch out the holes on the back plate. Attach to the wall using the wall plugs and screws supplied.

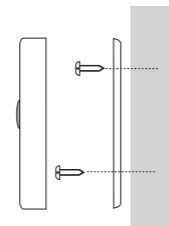

Door bell - wall mounted (OPTION 1)

 Fit the screw to the wall using the wall plug. Insert the screwhead into the keyhole on the back of the door bell and slide down.

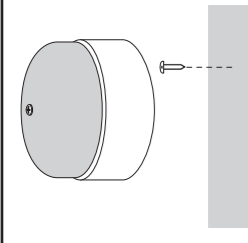

Note;

The door bell must be fitted the correct way up (as per the arrow on the back of the unit).

Please use the enclosed template when fitting the door bell using OPTION 2.

Door bell - wall mounted (OPTION 2)

Detach the black bell section by removing the screw on the front.

Fit the back section of the ringing bell to the wall using the three wall plugs and screws.

Refit the back bell section, ensuring you don't overtighten the screw as this will restrict the sound.

 
Note;

OPTION 2 is a more permanent way to fix the door bell to the wall. The bell will need to be fully removed from the wall when battery replacement is required.

Battery replacement - bell push

Remember to replace the battery in the bell push every 12 months.

Insert a flathead screwdriver into the slot on the bottom of the bell push. Gently push and twist to separate.

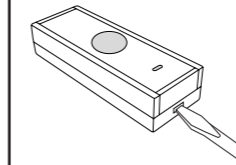

Insert a flathead screwdriver into the slot below the battery and gently prise to remove. Insert 1 x CR2032 button cell battery, ensuring it is positive (+) side up.



Repeat the quick set up guide;

After inserting the new batteries - press the button on the front of the bell push within 30 seconds to reconnect.

Battery replacement - door bell

Repeat the quick set up guide;

After inserting the new batteries - press the button on the front of the bell push within 30 seconds to reconnect.

UNI-COM

Premium ringing door bell

Model: 62325

Troubleshooting guide

Please do not hesitate to contact our friendly customer service team who will be more than happy to help you with any problems you are experiencing with your door chime set up

My door bell is not working?

Does the green LED illuminate on the bell push when you press the button?

If NO:

- Check to see if the battery tab has been removed. It should be sticking out the side of the bell push and can be removed by gently pulling in the direction of the arrow.
- Replace the battery in the bell push. Please refer to the **Battery replacement – bell push** section in the operating instructions.

If YES:

- Replace the batteries in the door bell. Please refer to the **Battery replacement – door bell** section in the operating instructions. Do not use high powered Li-ion, professional alkaline or rechargeable batteries.
- The door bell may not be receiving a signal from the bell push, this can be caused by internal walls or uPVC frames. Move the chime unit closer to the bell push.
- The door bell could be receiving interference from other electrical and wireless devices. Please refer to **My door bell sounds when nobody is pressing the bell push?** section within this troubleshooting guide to set your door chime up on a different channel.

My door bell rings when nobody is pressing the bell push?

The common cause for this is that your door bell is picking up outside interference from other wireless transmitters. Do not worry, all Uni-Com door chimes are programmed with 256 randomly selected channels to help avoid such a problem.

- (1) Remove the battery from the bell push.
- (2) Remove the batteries from the door bell.
- (3) Leave the units for a minimum of 10 minutes.
- (4) Re-insert the batteries in the chime unit.
- (5) Within 30 seconds re-insert the battery into the bell push and press the button on the front. The bell will ring.

Your door bell will now be set up on a different channel.

As stated above the channels are randomly selected so you may need to repeat the above process more than once.

My door bell only works temporarily (I keep having to reconnect the bell push to the door bell)?

The common cause for this is that the power in the bell push battery is getting low (meaning that your door chime set up keeps losing signal and why you repeatedly keep having to pair the bell push to the chime unit).

Replace the battery in the bell push. Please refer to the **Battery replacement – bell push** section in the operating instructions.

How do I add another chime unit to my existing door chime set up?

All Uni-Com door chimes work together and you can add unlimited chime units to your set up. This will increase the sound area and means you can have a Uni-Com chime unit in every room in your house if you wish.

- (1) If you have a new portable chime unit insert the batteries, if you have a new plug-in chime unit plug-in into the mains socket and switch on. You will hear a double "beep".
- (2) Within 30 seconds of the double "beep" press the button on the front of your existing bell push. **Both** your new and existing chime units will sound.

Specification


R2 device

Hereby, Uni-Com (Global) Ltd declares that the radio equipment type door chime is in compliance with the Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available to view at www.uni-com.co.uk.

Safety warning

Keep out of reach of children. For indoor use only (operating temp: 0°C to 40°C). Do not drop either unit or subject to excessive blows. The bell push is weather resistant, do not submerge. Do not mix new and used batteries. Do not mix different types of batteries. Exhausted batteries must be removed immediately. Failure to follow these instructions could result in fire, electric shock, injury or damage to persons, product or property and will invalidate the guarantee.

Batteries

 The bell push uses 1 x CR2032 button cell battery and the door bell uses 2 x C batteries. They should be removed prior to disposal. Help the environment by disposing of your products and batteries responsibly.

Guarantee

This product is guaranteed for one year from the date of purchase against faulty parts or workmanship. It does not cover batteries or physical damage to the units. Proof of purchase required. This does not affect your statutory rights.

Uni-Com (Global) Ltd.
1 & 2 Enterprise Way,
Edenbridge, Kent, TN8 6EW

+44 (0)1732 865238
info@uni-com.co.uk
www.uni-com.co.uk

