

UNI-COM

Keypad alarm

Model: 66439


Operating instructions

Battery installation / Setting your security code

1. Remove the battery cover on the back of the keypad.
2. Insert 2 x AA batteries, observing the polarity markings - *the red LED will flash on the front of the keypad for 45 seconds.*
3. Refit the battery cover.
4. Before the red LED stops flashing enter the factory default code "0000" followed by the "*" button - *you will hear a single "beep".*
5. Then enter your new 4-8 digit security code followed by the "*" button - *you will hear a double "beep".*
6. Wait for the red LED to stop flashing before you continue.

Fitting the alarm

1. Fit a single screw to the wall, then insert the screwhead into the keyhole on the back of the keypad and slide down.
2. The keypad can then be fitted more permanently by inserting a further two screws through the keypad (the holes are located either side of the speaker at the bottom of the keypad) - *this is recommended to avoid accidental movement of the keypad and therefore problems setting the alarm.*
3. The magnetic contact can be mounted either side of the keypad using the adhesive pad, it must be adjacent and the arrowheads on each unit must line up - **ensure the space between the keypad and magnetic contact is 10mm or less.**

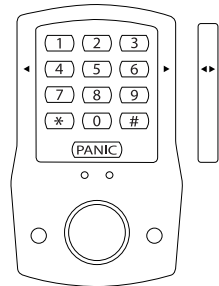

Setting the alarm

1. Open the door - *the red LED will flash on the front of the keypad for 45 seconds.*
2. Before the LED stops flashing enter your security code followed by the "#" button - *the red LED will stop flashing.*
3. Exit the building and close the door - *there is an exit delay of 30 seconds, the red LED will illuminate momentarily before going off to confirm the alarm is armed.*

Disarming the alarm

1. Open the door - *a rapid succession of "clicks" will sound for 10 seconds (entry delay).*
2. Before the "clicks" stop enter your security code followed by the "#" button - *the red will start flashing and you will not be able to set the alarm again until it stops.*
3. Failure to enter the correct security code within 10 seconds will trigger the loud siren. The siren will continue to sound until it is disarmed using your security code.

Instructions continue overleaf - please turn over

Panic button

1. Press the red "PANIC" button on the front of the keypad to immediately activate the siren.
2. To turn the siren off enter your security code followed by the "#" button.

Low battery warning

The yellow LED on the front of the keypad will flash to indicate when batteries need replacing.

Troubleshooting

I have forgotten my security code?

1. Remove the batteries from the keypad - the security code will reset to the factory default code "0000".
2. Follow the **Battery installation / Setting your security code** section overleaf.

Safety warning

This product is designed to help deter burglars. It does not guarantee protection and should be used in conjunction with other security measures. Keep out of reach of children. For indoor use only. Remove batteries if the product is not going to be used for an extended period. Do not mix new and used batteries. Do not mix different types of batteries. Exhausted batteries must be removed immediately. Failure to follow these safety instructions could result in fire, electric shock, injury or damage to persons, product or property and will invalidate the guarantee.

Batteries



This product uses 2 x AA batteries. They must be removed prior to disposal.
Help the environment by disposing of your product and batteries responsibly.

Guarantee

This product is guaranteed for one year from the date of purchase against faulty parts or workmanship. It does not cover batteries or physical damage to the unit. Proof of purchase required. This does not affect your statutory rights.



Authorised Representative
Zatisfy AB
Storgatan 51
90326 Umeå
Sweden
+46 (0)70-5790027

Uni-Com (Global) Ltd.
1 & 2 Enterprise Way,
Edenbridge, Kent, TN8 6EW

+44 (0)1732 865238
info@uni-com.co.uk
www.uni-com.co.uk