

Halogen Oven, Accessory Pack 10469 Instructions for Use

Please read and retain these instructions for future reference

v002:06/10/16

CONTENTS

Extension ring – Steamer – Frying pan – Toast rack – Lid stand



The extension ring

Place the extension ring on top of the glass bowl to raise the lid and allow for larger food to be cooked in the oven. Please make sure the ring is fitted securely on top of the glass bowl before placing the cooker lid on top.



How to use the steamer

Place the high wire rack stand (provided with the Halogen Oven) into the bottom of the oven, pour approximately 1 Litre of water into your halogen oven this will allow the steam to cook your dish and stop water getting into your food. Place your steamer onto the wire rack and start cooking. **Make sure you don't allow the cooker to boil dry.**

Please note: The high wire rack stand shown in the picture is supplied with the Halogen Oven.



How to use the frying pan


Place your frying pan on top of the high wire rack stand (provided with the Halogen Oven). Lightly oil the frying pan and start cooking. **Take care when removing the frying pan as it will still be hot.**

Please note: The high wire rack stand shown in the picture is supplied with the Halogen Oven.

Halogen Oven, Accessory Pack 10469 Instructions for Use

Please read and retain these instructions for future reference

v002:06/10/16

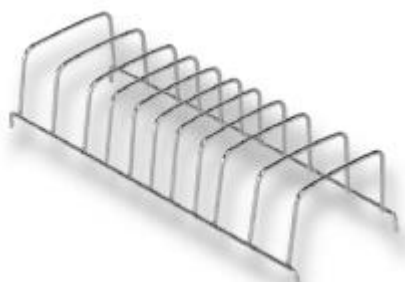

The toast rack

Place the toast rack on to the low wire rack stand (provided with the Halogen Oven). Place your bread into the slots on the rack and cook accordingly.

Please note: Please note: The high wire rack stand shown in the picture is supplied with the Halogen Oven.



The lid stand

The Halogen Oven Lid Rest has been introduced to provide a safe way to rest your lid when serving or turning your food.

The picture shows the correct position to have your lid rest when placing the lid down.

Safety Instructions

1. Please make sure that the lid rest is placed on a flat surface and away from the edge of work surfaces where it could get knocked over.
2. Before placing the lid on to the rest make sure it is unplugged and switched off.
3. The glass rim around the lid gets very hot, never attempt to pick up the lid by the glass rim without oven gloves.
4. The surface metal of the oven lid gets very hot, make sure that the lid rest is placed where people cannot accidentally brush against it.
5. The lid rest will get hot when in use.

CLEANING

Hand wash only – not dishwasher safe.

DISPOSAL

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.