 


VACUUM CLEANER 9078 INSTRUCTION MANUAL

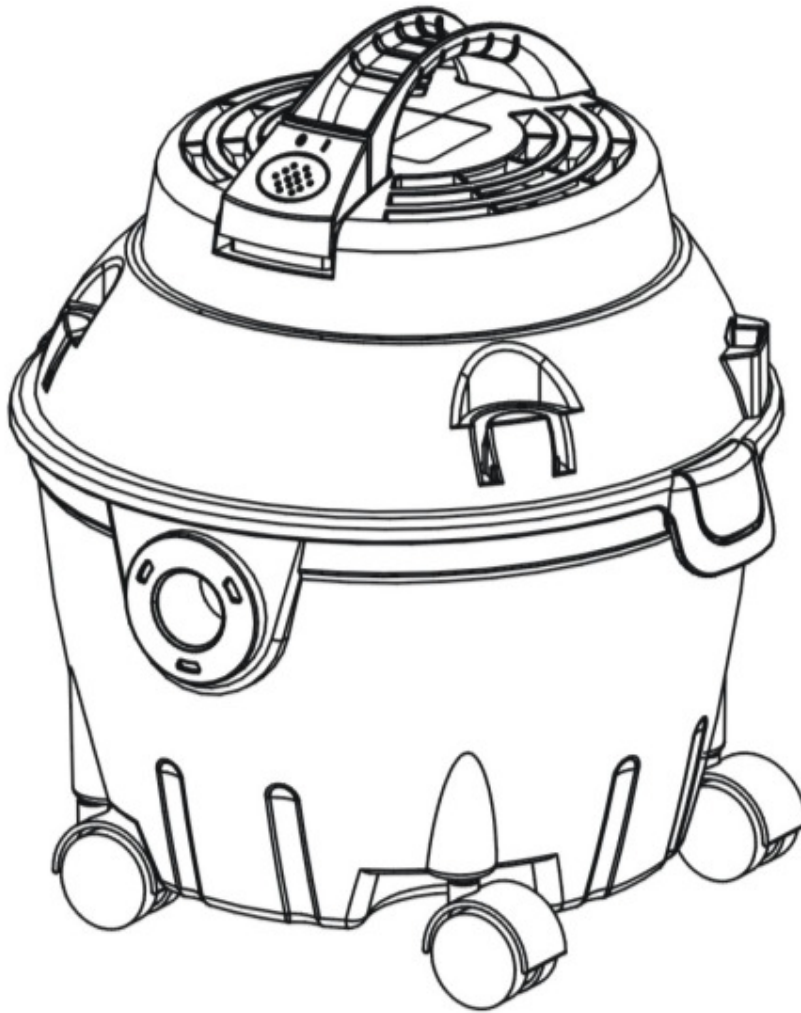

Wet/Dry Vacuum Cleaner

Please read the instruction manual carefully before operation

SAFETY DIRECTIONS

Thank you for purchasing this product. Please read the instruction manual carefully before operating this item and save it for future reference.

To reduce the risk of fire, electric shock, or injury:

Check before operation that the local power supply is the same as the specification on the rating plate.

Do not use outdoors, this appliance is for indoor domestic use only.

Do not leave the vacuum cleaner when plugged in. Turn off the switch and unplug the electrical cord when not in using and before servicing.

Do not allow to be used as a toy. Close attention is necessary when used by or near children.

Use only as this manual described. Use only manufacturer's recommended attachments.

Do not use with damaged power cord or plug.

Do not pull or carry by cord, use a cord as a handle, close door on cord, or pull cord around sharp edges and corners. Do not run this item over cord. Keep the cord away from any heated surface.

Do not use extension cords or outlets with inadequate current carrying capacity.

Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

Do not handle plug or vacuum cleaner with wet hands or operate without shoes.

Do not put any object into openings. Do not use with any opening blocked; Keep free of dust, lint, hair, and anything that may reduce airflow.

This vacuum cleaner creates suction and contains a revolving brush roll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

Do not pick up anything that is hot, burning or smoking, such as cigarettes, matches, or hot ashes.

Do not use without filter in place.

Use extra care when cleaning on stairs.

Do not use to pick up flammable or combustible liquids such as petrol, oil, or use in areas where they may be present.



Store your cleaner indoors in a cool, dry area.

Ensure you turn the unit off at the very minimum every 15 minutes (for 1 minute) to let the motor cool down – failure to do so may cause motor failure.

Do not use this unit for more than 4 hours (including rest breaks) on any given day.

Do not immerse the top half of the cleaner that contains the motor in any liquid. Do not allow to become wet. Only the lower storage portion may be wet inside.

DESCRIPTION OF PARTS

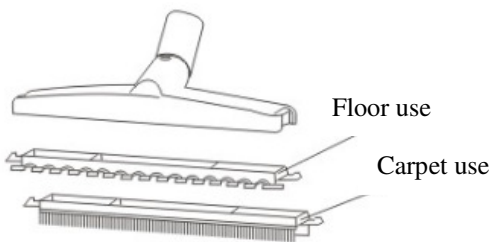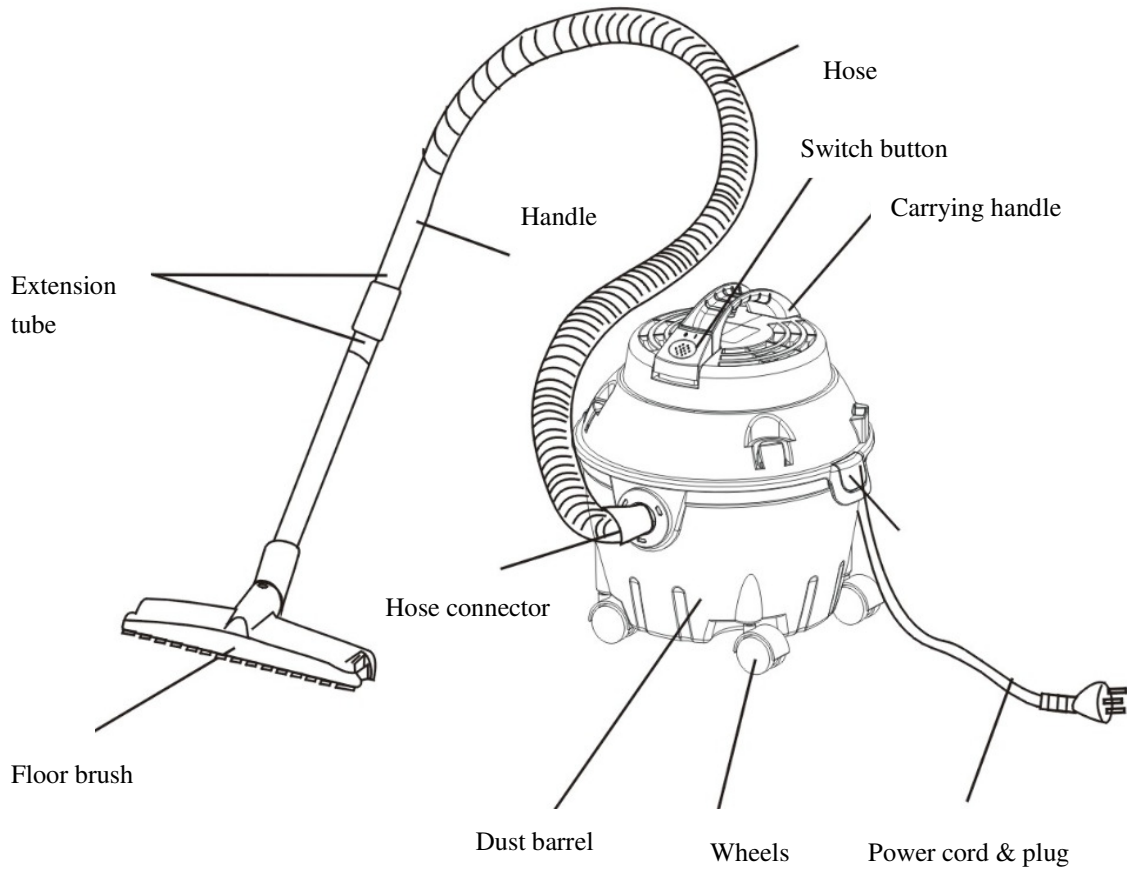

Floor brush
For carpet and wooden floor, etc.



 
Crevice Nozzle
For corners and cracks, etc.



Bristle brush
For sofa, bookshelf, curtain and furniture, etc.


OPERATION METHOD

1.

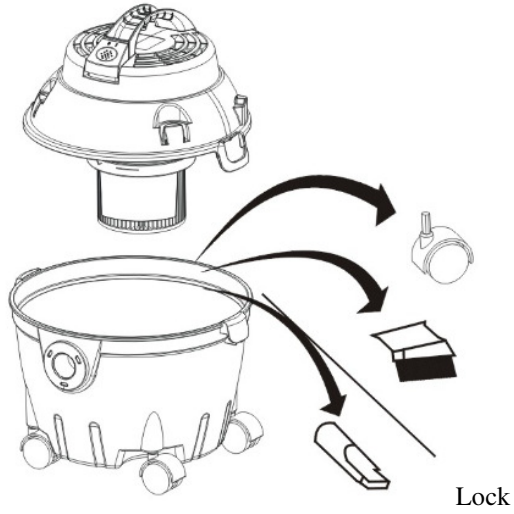


Release the lock to open the unit, take out the wheels and accessories.

 2.

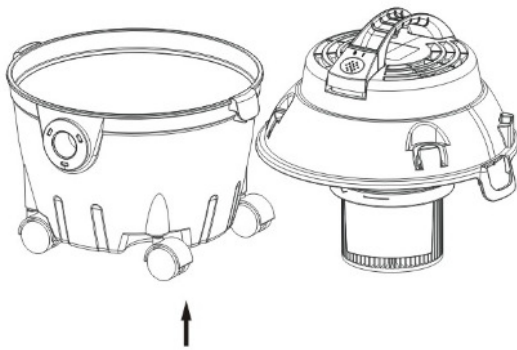

Install 4 small wheels

 
3.

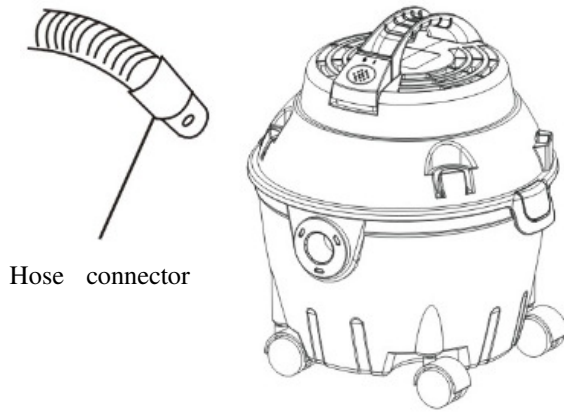

Insert the hose connector into the vacuum cleaner


OPERATION METHOD

 1.

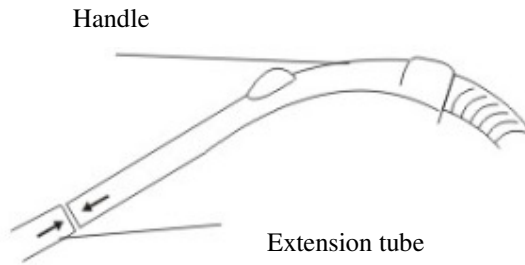

Insert the handle into the tube with a twisting force.

 
2.

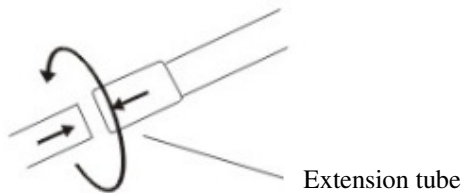

Insert the handle into the tube with a twisting force.

3.

 
Extension tube

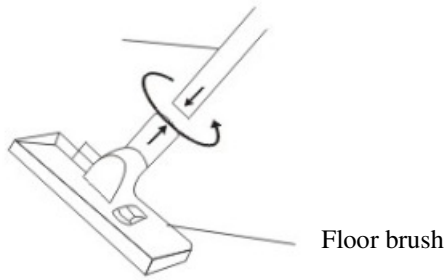

Insert the handle into the tube with a twisting force.

OPERATION METHOD

 
1.

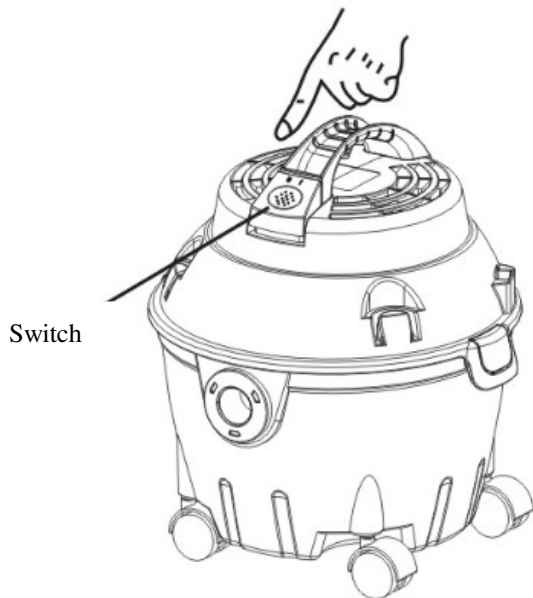

Plug into mains.
Press the switch button to turn on/off the item.

TO EMPTY

 
If the vacuum is full, empty it as soon as possible. This is very important when vacuuming liquids. Check from time to time when using.

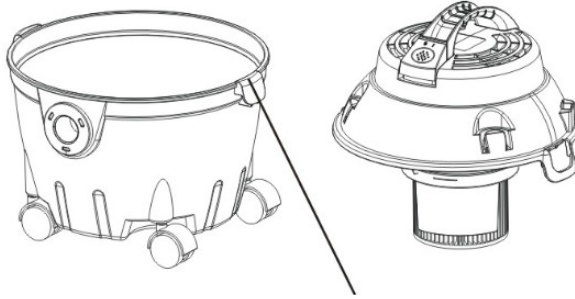

Locking button

Release the locking button to open the unit

 2.

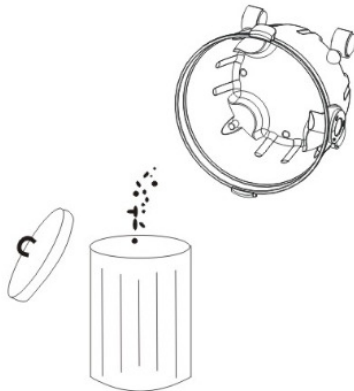

Empty into the bin for dry matter or down a drain for liquids.

3.

 


Close the unit and fasten the locking button

MAINTENANCE


Warning: when the filter is full with dust or the suction decreases considerably, clean it promptly. This will improve the working efficiency and extend the life of the cleaner. Never use the appliance without filter. Dry after use and before storage.

1. Take off the mesh

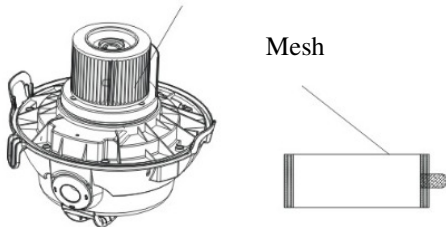


Take off the mesh outside the HEPA filter

 - 2.

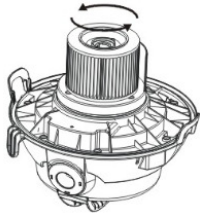

Twist the locking knob with a anti-clockwise force, take out the filter

 - 3.

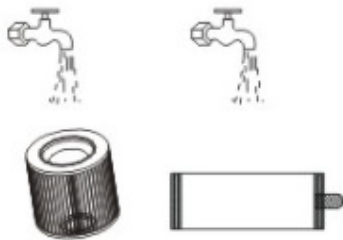


First shake off loose dust, then run under tap to wash. Do not use cleaning fluids.

- 4.



Dry by airing. Do not use while damp.

 - 5.

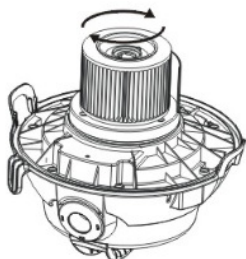

Replace the filter and mesh.

Packaging

Dispose of the packaging at your local recycling centre.

Dispose of paper and card separately from plastic bags at your local recycling centre.

Dispose of the item at the end of its lifespan at your local authorised household waste recycling centre