






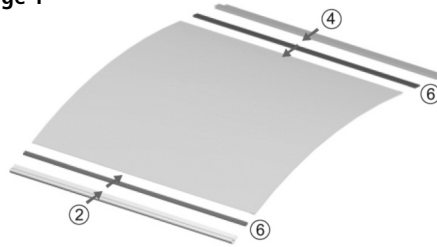


Parts

1	
	Board Quantity x1
2	
	Front Fixing Bar Quantity x1
3	
	Bracket Quantity x2 (set) Quantity x1 (extension)
4	
	Back Fixing Bar Quantity x1
5	
	Wall Anchor Quantity x4 (set) Quantity x2 (extension)
6	
	Rubber Seal Quantity x4 (set) Quantity x4 (extension)
7	
	Screw Quantity x4 (set) Quantity x2 (extension)


Assembly

Stage 1




- Peel back the edges of the protective backing to allow fitting of parts 2, 4 and 6 before assembly.

Stage 2

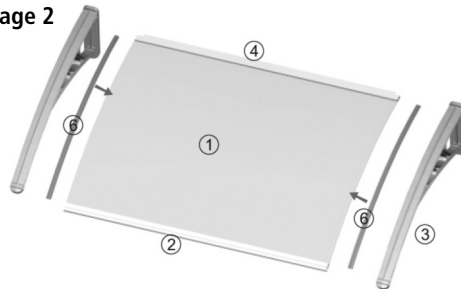


- Peel back the edges of the protective backing to allow fitting of part 6 before assembly.

Stage 3

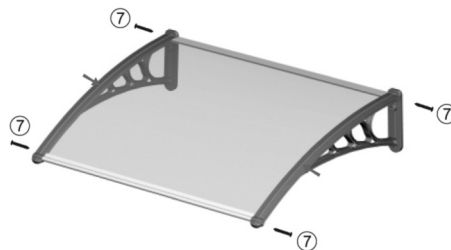

Stage 4

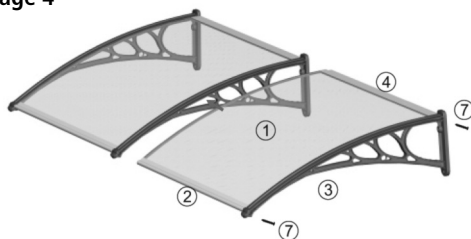

- If you have purchased more than one canopy they can be joined together.

Tools

- Electric Drill (with 10mm masonry drill bit)
- Hammer
- Philips Screwdriver
- Spanner (14mm)

To fix to the wall:

- First ensure the wall surface is strong and suitable for drilling.
- Drill a hole large enough for the Wall Anchor.
- N.B. Do not disassemble the Wall Anchor, insert as complete unit and tighten when bracket is against the wall.
- Fully assemble before offering the canopy up to the wall, fix the canopy in place, with a hammer, carefully knock complete Wall Anchors into position and tighten the Wall Anchors with a spanner.
- Remove the protective backing when canopy is in place.

Maintenance:

- Check the Wall Anchors are secure from time to time.
- Wash the Board with a non abrasive cleaner. Do not use scourers as damage could occur.

Packaging Disposal:

- Dispose of the packaging at your local recycling centre.
- Dispose of paper and carton separately from plastic bags at your local recycling centre.
- Dispose of the item at the end of its lifespan at your local authorised household waste recycling centre.