 


Portable Heated Clothes Dryer 9858 Instructions for Use

Please read and retain these instructions for future reference

v003:16/01/18

COMPONENTS:

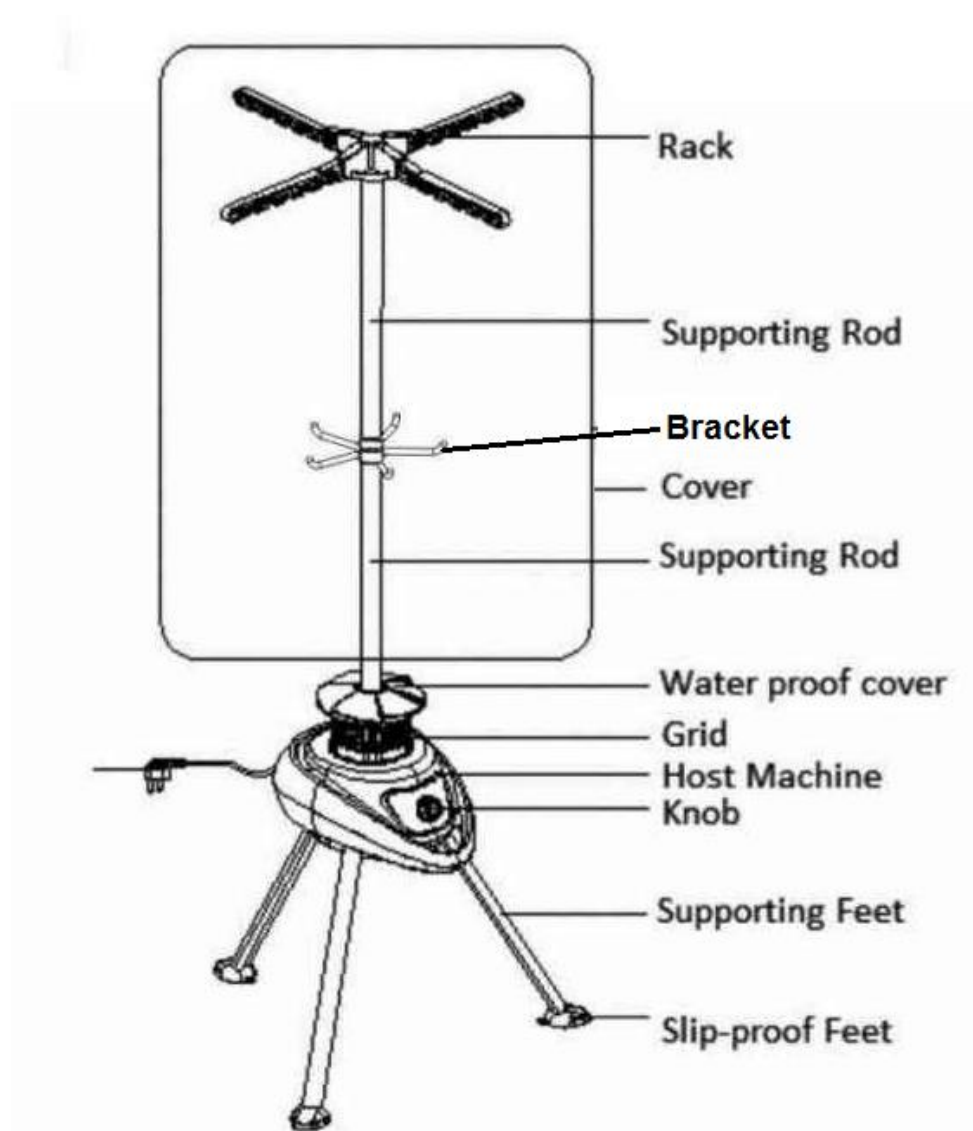

TECHNICAL DETAILS:

POWER DETAILS (VOLTAGE – AC / DC): 220V A.C.

POWER FREQUENCY: 50Hz

WATTAGE: 1050W

CLOTHES DRYING TIME: Up to 180 minutes

MAXIMUM CAPACITY: 10kg after being spun

SUITABLE FOR CLOTHES THAT CAN WITHSTAND TEMPERATURE UP TO 75 °C

*Calls cost 7 pence per minute plus your
telephone company's network access charge

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

Portable Heated Clothes Dryer 9858 Instructions for Use

Please read and retain these instructions for future reference

v003:16/01/18

USER INSTRUCTIONS:

 
Working principles

PTC heating element are safe, energy saving, long life and corrosion proof.


This appliance adopts the working principle of:

1. Fan to create positive air pressure inside of the cover.
2. Filter air to be heated by PTC element before being released into the cover.
3. Clothes in static status are processed by hot air, then moisture is extracted outside the cover.


ASSEMBLY INSTRUCTIONS:

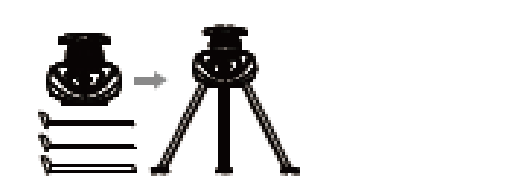

 1. Insert legs into holes on the bottom of the main body.

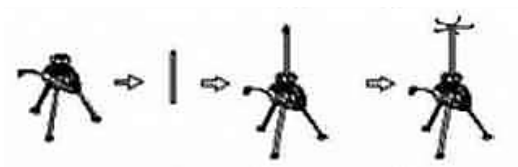

 2. Insert the supporting rod into the main body.

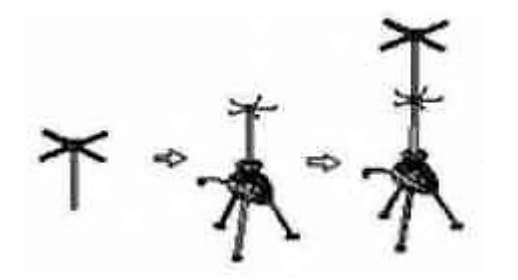

3. Put the rack on top of the top supporting rod and connect it with the bottom supporting rod.
The bracket fits between the top and the bottom support rods.
The bracket can be used to hang up light weight clothes.



4. Hang clothes on the rack and put on the cover and zip it up.

Note: Reverse steps to disassemble.

Portable Heated Clothes Dryer 9858 Instructions for Use

Please read and retain these instructions for future reference

v003:16/01/18

OPERATING INSTRUCTIONS:

1. Plug unit into earthed socket.
2. Turn the knob to set drying time. When the unit switches on the indicator lights up.
3. After clothes have been washed and spun in the washing machine, hang them on the rack evenly spaced.
4. Turn the knob clock-wise to set time between 30 – 180 minutes.

CLEANING INSTRUCTIONS:

- To clean cover wipe clean with a damp or dry cloth only.

SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- READ ALL INSTRUCTIONS BEFORE USE.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE CORD, PLUG OR APPLIANCE IN WATER OR ANY OTHER LIQUID.
- UNPLUG FROM MAINS OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CORD IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED BY COOPERS OF STORTFORD MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- FOR USE INDOORS. DO NOT USE OUTDOORS.
- DO NOT LET CORD HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES, AND USE ON A LEVEL, STABLE SURFACE.
- **DO NOT** COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- **DO NOT** PLACE UNDER OR NEAR FLAMMABLE MATERIALS SUCH AS CURTAINS, DRAPERIES, SHELVES, LOOSE WALL PAPER ETC.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

WARNINGS / CAUTIONS:

- Please spin clothes before drying to shorten drying time to save energy.
- Do not touch metal parts during operation as they become hot. Leave to cool down before handling.
- Keep unit away from children when in operation.
- Please pay attention to the label on clothes and whether this can be dried and at what temperature.
- Keep the room well ventilated. The unit should be 15cm away from the wall at least.
- The clothes drier must not be used in a wet environment such as bathroom or shower room.

*Calls cost 7 pence per minute plus your telephone company's network access charge

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD

Portable Heated Clothes Dryer 9858 Instructions for Use

 
Please read and retain these instructions for future reference

v003:16/01/18

- The inlet and outlet could be clogged. Do not touch outlet by hand.
- The unit is not suitable for use by persons with reduced mobility.
- Fix the feet of the unit to the floor to avoid it toppling over.
- The unit should only be repaired by a qualified electrician.
- After turning on the UV light, do not stare at or touch it until turned off and cooled down.
- If the pins of the plug are dusty, please wipe with a dry cloth.
- The host unit must not be disassembled and used as a heater.

PLUG WIRING (UK & IRELAND)

This appliance is fitted with a BS 1363 13-amp plug. If you have to replace the fuse, only those that are ASTA or BSI approved to BS1362 and with a rated current of 13-amps should be used. If there is a fuse cover fitted, this cover must be re-fitted after changing the fuse. If the fuse cover is lost or damaged the plug must not be used. Spare fuse holders and fuses are available from electrical outlets. If the socket outlets in your home or office are not suitable for this product's plug, the plug must be removed and disposed of safely. Attempts to insert the plug into the wrong socket is likely to cause electric hazard. A replacement plug should be wired according to the following instructions:

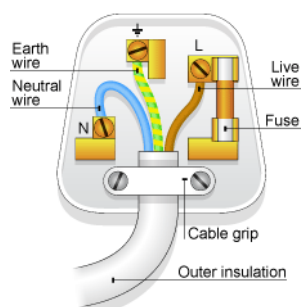

The cable

A mains electricity cable contains two or three inner wires. Each has a core of copper and an outer layer of flexible plastic. This product is double insulated. The wires in the cord set are colour coded in the following way:

BLUE	NEUTRAL
BROWN	LIVE

The diagram shows the key features of a correctly wired three-pin mains plug.

Note:

Double insulated appliances do not need the green & yellow Earth wire. They may only have the Brown and Blue wires.

DISPOSAL:

- Dispose of all packaging, paper, cartons, plastic and plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household WEEE waste recycling centre.



*Calls cost 7 pence per minute plus your telephone company's network access charge

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400*
Fax: 01279 756 595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD