

## READ ALL WARNINGS AND INSTRUCTIONS CAREFULLY BEFORE FIRST USE:

- CONTENTS AND BAG MAY BE HOT: USE CAUTION WHEN HANDLING. IMPROPER USE MAY RESULT IN FIRE.
- MICROWAVE USE ONLY
- DO NOT use in a conventional oven.
- DO NOT heat in a microwave for more than 4 minutes at a time.
- DO NOT heat on high.
- DO NOT heat in microwave without food inside.
- DO NOT expose to open flame.
- DO NOT leave microwave unattended when in use.
- DO NOT place the Express Potato Bag near a hot surface.
- DO NOT cook oily or fried foods inside the Express Potato Bag.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.

### Before Use:

Always check your microwave before first use. Results may vary based on microwave power output and other factors.

If your microwave has a turning plate then make sure that the Express Potato Bag can freely rotate during cooking, to avoid scorching which can lead to fire if left unattended.

If your microwave doesn't have a turning plate, carefully turn the Express Potato Bag over mid way through the cooking time to avoid scorching.

Wash the Express Potato Bags before first use (see care and cleaning instructions on the next page)

### INSTRUCTIONS:

Carefully read and understand all warnings and instructions before use.

Always wash potatoes before cooking. Potatoes should be damp before heating.

- Place 1-4 washed potatoes into the Express Potato Bag then close the flap.
- **DO NOT** peel or poke holes in the potatoes.
- Place the Express Potato Bag into the microwave with the flap side down.
- Cook for 4 minutes on a medium temperature.

- Carefully remove the Express Potato Bag from the microwave and remove the potatoes from inside. **WARNING! Potatoes will be hot so be sure to use an oven glove to remove them.**
- **NOTE! Cooking times may vary based on the quantity of potatoes, the size of the potatoes and the microwave output. If needed cook for additional 1 minute increments.**

#### Care and cleaning instructions:

- Turn the Express Potato Bag inside out.
- Hand wash or machine wash on a cold gentle cycle.
- Lay flat to dry.
- DO NOT use fabric softeners.
- DO NOT bleach.
- DO NOT tumble dry.
- The potato sacks are made up of 85% polyester, 15% cotton for the inside material and 100% polyester for the outside material.

#### Packaging

- Dispose of packaging at your local recycling centre.
- Dispose of paper and carton separately from plastic bags at your local recycling centre.
- Dispose of item at the end of its lifespan at your local authorised household waste recycling centre

Please read carefully and retain for future reference.

Head Office, 11 Bridge Street,  
Bishop's Stortford CM23 2JU  
Tel: 0844 482 4400  
Fax: 01279 756595  
[www.coopersofstortford.co.uk](http://www.coopersofstortford.co.uk)

**Coopers**  
OF STORTFORD