





Operating Instructions:

Please read this instruction manual completely before operating this unit and retain this manual for future reference.

SAFETY INSTRUCTIONS

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash and arrow head within the triangle is a warning sign alerting you of "dangerous voltage" inside the product</p>	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL</p>	 <p>The exclamation point within the triangle is a warning sign alerting you of Important Instructions accompanying the product</p>
--	--	--

IMPORTANT SAFETY INSTRUCTIONS

1. Read instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow instructions - All operation and use instructions should be followed.
5. Water and Moisture - The appliance should not be used near water; for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. The appliance should always be used or stored on a flat stable surface indoors.
7. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
8. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
9. Power Sources - The appliance should be connected to a power supply in the UK of 230V~50Hz
10. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
11. Power cords should be regularly inspected and if any damage is discernible then stop using and consult a qualified electrical technician.
12. This item is fitted with a 3amp fuse only.
13. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.
14. Non-use Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
15. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings. Switch off immediately at power source if the item comes into contact with liquids and refer to a qualified electrical technician.
16. Refer to a suitable qualified technician if the appliance is damaged, needs servicing or has been dropped.
17. Servicing - The user should not attempt to service the appliance beyond general cleaning and changing of stylus.
18. This appliance / product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised so that they do not play with the appliance.



TURNTABLE FUNCTIONS**TURNTABLE PARTS:**

1. REMOVABLE DUSTCOVER
2. 45 RPM ADAPTER
3. LIFT CONTROL
4. SPEED SELECTION(33 1/3, 45, 78 rpm)
5. TONE ARM
6. NEEDLE CARTRIDGE
7. STEREO SPEAKER
8. TURNTABLE
9. ON/OFF/VOLUME CONTROL
10. RCA OUTPUT

**REAR PANEL****AC OPERATION**

The TURNTABLE PLAYER operates from AC 230V/50Hz power. Insert the plug of the AC power cord into a wall outlet with AC power supply

PHONO OPERATION

1. Lift up the Cover;
2. Remove the Stylus guard;
3. Slowly turn the Power/Volume Button clockwise to power ON the device;
4. Set the Speed Selector to 33 $\frac{1}{3}$, 45 or 78 RPM, respective to the size of the record you want to play;
5. Place the record with the side you want to play facing up onto the turntable.

Note: When playing a record single, insert the 45 RPM Adaptor in the center of the turntable, then place the record on top
6. Push back the Tone Arm Lever to raise the Tone Arm & Stylus; position the Tone Arm & Stylus such that the needle on the Stylus is above the outer edge of the first track.
7. Pull forward the Tone Arm Lever to lower the Tone Arm & Stylus and begin playing.

8. To stop operation, carefully lift up the Tone Arm and return it to the Tone Arm rest.
9. Turn off the power.
10. Close the TURNTABLE COVER gently.

HOW TO REPLACE THE NEEDLE

To replace the needle, please refer to the instructions below.

Removing the needle from the cartridge

1. Place a screwdriver at the tip of the needle case and push downwards in the direction shown in sketch "A"
2. Remove the needle head case by pulling it forwards and pushing downwards.

Inserting the needle

1. Hold the tip of the needle head shell and insert it by pressing in the direction illustrated by "B".
2. Push the needle head shell upwards in the direction illustrated by "C" until the needle locks into the tip position.



Packaging

- Dispose of packaging at your local recycling centre.
- Dispose of paper and carton separately from plastic bags at your local recycling centre.
- Dispose of item at the end of its lifespan at your local authorised household waste recycling centre.



Please read carefully before use and retain for future reference.

Head Office, 11 Bridge Street,
Bishop's Stortford CM23 2JU
Tel: 0844 482 4400
Fax: 01279 756595
www.coopersofstortford.co.uk

Coopers
OF STORTFORD