

Please read and retain for future reference


- **Do not** preheat the diffuser or leave the diffuser on a hot burner without a pan or pot on the top.
- **Do not** heat the temperature above 280 degrees Celsius.
- **For first time use it is recommended to gently increase the heat until the desired temperature is reached.**
- **Do not** soak the diffuser in water for long periods of time. Allow the plate to cool fully before cleaning with a damp, soft cloth.
- Always keep the diffuser dry to avoid water penetration and the eventual deterioration of your diffuser plate.
- **Do not** use continuously for over 4 hour periods without a break.
- **Do not** allow acidic or alkaline substances to drip onto the diffuser.
- **Do not** allow the flames from your hob to lap up over the edges of your diffuser and pan.
- Ensure the diffuser plate is stable on your hob, and any pot or pan placed on top cannot tip over.



DO NOT HEAT
WITHOUT A PAN



INCORRECT

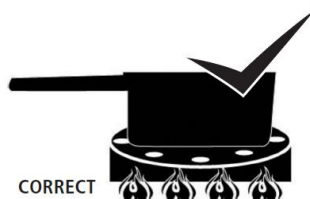

CORRECT

WARNING: THIS PLATE WILL BECOME HOT!

DISPOSAL

- Dispose of all paper, cartons and plastic in accordance with your local recycling regulations. At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.



