
Please read and retain these instructions for future reference

v003: 11/09/17

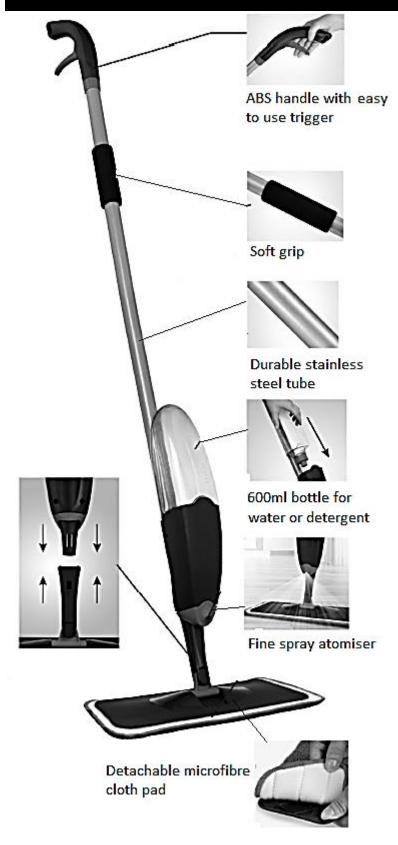

- The super-efficient mop pad is machine washable and easily removed for cleaning. Wash the pad at 30 °C and air dry after.
- Please do not leave the mop on your floor when it is wet to avoid possible staining to flooring.
- Please air the mop cloth after each use.
- Replace the mop cloth after each use.
- Replace the mop cloth if worn and to prevent colour fading.
- Please keep water source clean to prevent any debris jamming in the sprayer. Do not use a thick cleaning liquid as this causes build up in the spray nozzle.
- The pad is held on to the mop head with hook and loop technology and can be removed and replaced when needed.

## **DISPOSAL**

- Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- At the end of the product's lifespan please dispose of it at an authorised household waste recycling centre.

## **WARNING:**

Water bottle filling: Fill the water bottle with cold water or warm water temperature no more than 30°C. Do not use boiling water!

## Don't forget!

You can order your Spray Mop Detergent and Replacement Microfibre Cloth Pads,

call 0844 482 4400

E502 Replacement Microfibre Cloth Pads E529 Spray Mop Detergent





